

ASSEMBLY INSTRUCTION

MODEL NO: JORDYN - WHITE / GREY - DR

DESCRIPTION: DRESSER

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts that may have come loose inside the carton during shipment.


PART LIST :

ITEM	DRAWING	DESCRIPTION	QTY
A		DRESSER	1
B		LEG	4

HARDWARE LIST :

ITEM	DRAWING	DESCRIPTION	QTY
C		JCBC SCREW (M6 x 35mm)	8
D		SPRING WASHER (M8)	8
E		FLAT WASHER (M8 x 18mm)	8
F		ALLEN KEY (M4 x 65mm)	1
G		TIPPING RESTRAINT	1
H		SCREW DRIVER(*)	1

(*) The manufacturer does not provide ITEM H

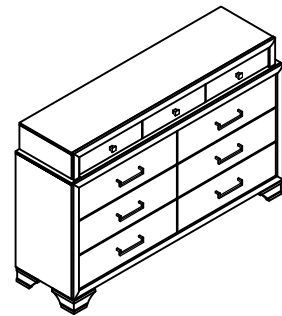

COMPLETED DRESSER

STEP 1
UNSCREWING THE HANDLE SCREW FROM OUTSIDE, TAKE OUT THE HANDLE FROM THE DRAWER AND INSTALL HANDLE AT DRAWER FRONT.

STEP 2
TAKE OUT THE LEG

STEP 3
Attach to cabinet

STEP 4
Attach to wall

COVER WITH FLAT & SOFT SURFACE

NOTE : MUST TIGHTEN SCREWS PERIODICALLY. WITH USE SCREW MAY BECOME LOOSE. CHECK TIGHTNESS OF ALL SCREWS EVERY 6-8 WEEKS.

CLEANING INSTRUCTION :
AFTER ASSEMBLE, CLEAN & POLISH THE COMPLETED PARTS IF NECESSARY WITH SOFT CLOTH AND INDUSTRIAL RECOGNIZED FURNITURE POLISH.

MADE IN MALAYSIA