

# ASSEMBLY INSTRUCTIONS

**MODEL : 8211A**  
**QUEEN BED (4 + 4)**

**(BOX 1)**

**LIST OF HEADBOARD**

NO.	ITEM	QTY
A	Headboard	1
B	Headboard Leg (L&R)	2

**(BOX 2)**

**LIST OF FOOTBOARD**

NO.	ITEM	QTY
C	Footboard	1
D	Footboard Leg (L&R)	4
E	Footboard Support	4

**(BOX 3)**

**LIST OF SIDE RAIL**

NO.	ITEM	QTY
F	Side Rail	2

**(BOX 1)**

**Hardware List**

NO.	ITEM	QTY
1	ACSC BOLT (4) (M8)	4 PCS
2	ACSC BOLT (2) (M8)	2 PCS
3	SPRING WASHER (4)	4 PCS
4	FLAT WASHER (4) (M8)	4 PCS
5	WOOD SCREW (2) (M8)	2 PCS
6	ALLOY KEY (M8)	1 PCS


**(BOX 2)**

**Hardware List**


NO.	ITEM	QTY
7	PLATE HEAD CHISEL POINT SCREW (M8)	8 PCS

**STEP 1-1:** Insert SCREW (5) into HEADBOARD (A), on shown, and slide RB PANEL (A) on RB LEG (B). Tighten with ACSC BOLT (1), SPRING WASHER (3) & FLAT WASHER (4), using ALLOY KEY (6), on shown.


**STEP 1-2:** Screw ACSC BOLT (2) into pre-drilled hole on headboard (B) and tighten, using ALLOY KEY (6) on shown.

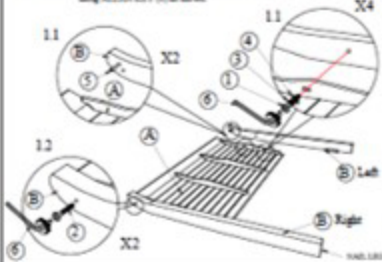

**STEP 2:** Hook SIDE RAIL (F) TO HEAD BOARD (A) closely and push down to fit. repeat step 2 with other end of rail to hook onto FOOTBOARD (C).

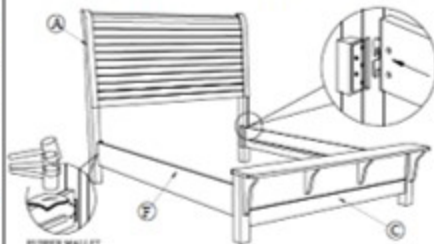

**STEP 3:** Fix the Bed Slant Support (E) to Bed Slats (D) as shown and fix the Bed Slats to Side Rail (F) by using Plate Head Chisel Point Screw (7). Loosen or Tighten the Adjuster as necessary to level the bed. Bed assembly should be done in final location to ensure stability.

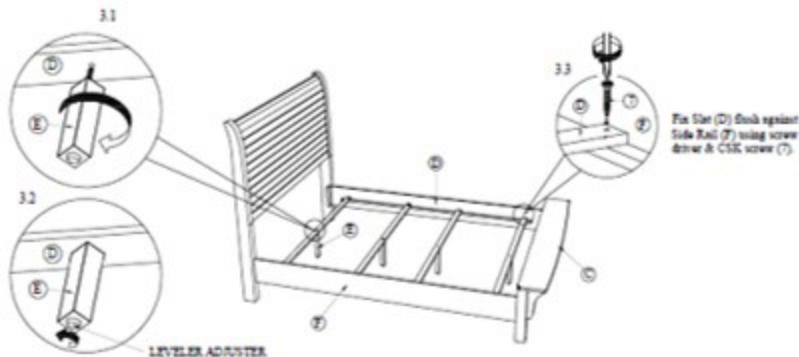

**NOTE:** MUST TIGHTEN SCREWS PERIODICALLY WITH USE SCREW WILL BECOME LOOSE CHECK TIGHTNESS OF ALL SCREW EVERY 64 WEEKS.