

## ASSEMBLY INSTRUCTIONS & PARTS IDENTIFICATION ITEM NO.: 1037-7 CHAIRSIDE TABLE

Ε

| Hardware Kit (1037-7P01) |      |              |              |  |  |
|--------------------------|------|--------------|--------------|--|--|
| Ltr                      | Q'ty | Description  | Size         |  |  |
| Α                        | 1pc  | Allen wrench | 4mm          |  |  |
| В                        | 8pcs | Bolt         | 1/4"Dia*2"   |  |  |
| С                        | 8pcs | Lock washer  | 1/4"Dia      |  |  |
| D                        | 8pcs | Flat washer  | 1/4"Dla*19mm |  |  |
| Εĺ                       | 4pcs | Screw        | #8*1-1/2"    |  |  |

|     | Wood Part List |                |      |  |  |  |
|-----|----------------|----------------|------|--|--|--|
| No. | Parts          | Description    | Qty  |  |  |  |
| 1   | 1037-7P02      | Leg            | 4рсв |  |  |  |
| 2   | 1037-7P08      | Shelf          | 1pc  |  |  |  |
| 3   |                | Storage Box    | 1pc  |  |  |  |
| 4   | 1037-7P05      | Drawer         | 1pc  |  |  |  |
| 5   | 1037P01F       | Floor Glide    | 4рсв |  |  |  |
| 6   | 1037-7P04      | Knobs/Screws   | 2pcs |  |  |  |
| 0   | 1037P05A       | Drawer Stopper | 1pc  |  |  |  |
| 8   | 1037-7P06      | Drawer Gilde   | 1pc  |  |  |  |
| 9   | 1037P05D       | Drawer support | 1pc  |  |  |  |




В


## STEP 2 : ] ▼

Carefully place the table top upside-down on a smooth, flat surface to prevent scratches during assembly. Attach three legs to the table top with Allen bolt (B), Lock washer (C) and Flat washer (D), loosely tightening with the provided Allen wrench (A). Do not completely tighten bolts at this point.

## STEP 3:

insert the shelf between the three legs and attach the fourth leg with a bolt, lock washer and flat washer
Secure the shelf to the legs using screws (E)" Once the shelf is in place fully tighten all bolts and screws

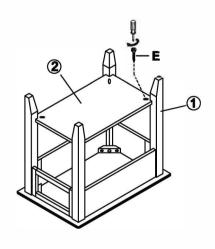

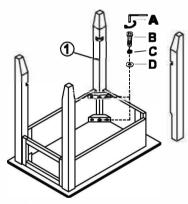

## STEP 4:

Carefully turn the assembled table the upright position, put back the drawer, assembly is now complete.



