

ASSEMBLY INSTRUCTIONS & PARTS IDENTIFICATION MODEL # 1670 - 1 COFFEE TABLE


Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts that may have come loose inside the carton during shipment.

Hardware Kit ( 1670P01 )				
No.	Qty	Description		
A	8 pcs		Bolt M6 X 40mm	
В	8 pcs	0	Spring Washer	
C	8 pcs	6	Flat Washer	
D	1 pc		Allen key	


Parts Key					
No.	Code	Qty	Description		
1	1570-1P53	2 pcs	Leg Assembly		

## Step 1:

Turn the coffee table top upside down on a protective surface such as carpet or other soft material. Place the leg to the bottom apron. Insert the FLAT WASHER, SPRING WASHER and BOLT into pre-drilled holes on the apron and tighten it by using the Allen Key provided. Repeat for each leg.

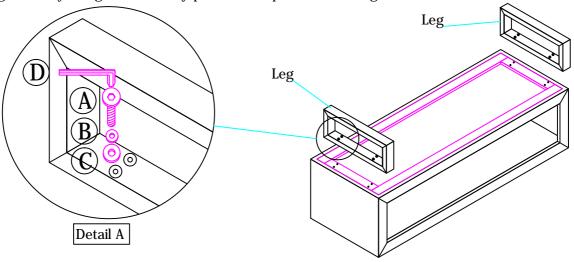

## Step 2:

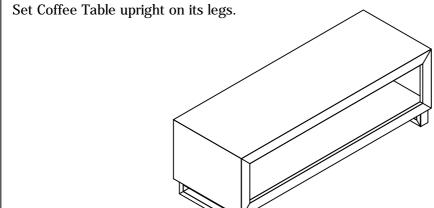

MADE IN MALAYSIA