OFRAN INC.

ASSEMBLY INSTRUCTIONS & PARTS IDENTIFICATION MODEL # 1851 - 60 ALTAMONTE HIGH/LOW **RECT TABLE**

Qty

4 pcs

28 pcs

28 pcs

8 pcs

8 pcs

8 pcs

1 pc

1 pc

10 pcs

4 pcs

Parts key				Hardware kit #1851-60P01				
No	Code	Qty	Description	No	Description			Γ
1	1851-60P24	1 pc	Table Top	Α	9	Hex nut M8		Γ
2	1851-60P07	2 pcs	Sliding Door	В		Lock washer	Ø8	2
3	1851P04	2 pcs	Pull w/Screws	С	0	Flat washer	Ø8 x 16mm	2
4	1851P07S	4 sets	Sliding Wheel & Lock w/Screws - 2 pcs	D	0	Long bolt-Attaching Leg Extension	5/6" x 180mm	
5	1851-60P08T	1 pc	Storage Box Top Panel	Е	0	Medium bolt Attaching Leg	M6 x 60mm	
6	1851-60P08L	1 pc	Left Storage Box Shelf	F	0	Short bolt Attaching Top/Bottom Panel M6 x 30mm		
7	1851-60P08R	1 pc	Right Storage Box Shelf	G		Allen key	K4	
8	1851-60P08B	1 pc	Storage Box Bottom Panel	Н	\sim	Key wrench	13	
9	1851-60P02L	2 pcs	Left Facing Leg	1	(X) mmm	Wooden Screw	Ø4 x 25mm	1
10	1851-60P02R	2 pcs	Right Facing Leg	J	0220	Wooden Dowel	Ø10 x 20mm	
11	1851-60P02E	4 pcs	Extensions Leg	Step 2 Attach the Bottom Panel to the Vertical Panel with a Short (F), a Lock Washer (B) and a Flat Washer (C) using the Allen provided. Slide the Side Panels into the grooves on the Top and Botto				
12	1851-60P08S	2 pcs	Storage Box Side Panel					
13	1851-60P08V	1 pc	Storage Box Vertical Panel					
14	1851-60P13	2 sets	Extension Mechanism					
15	1851-60P13L	4 sets	Extension Lock	Panels as show in the diagram.				
16	1851P01F	4 pcs	Floor Glide			J		

Step 1


17 1851-60P36

Lay the top of the Storage Box upside down on a clean padded surface to prevent scratching. Insert the Wood Dowels (J) into the Vertical Panel ends.

1 pc

Leaf Support


Attach the Storage Box Vertical Panel to the Top Panel with a Short Bolt (F), a Lock Washer (B) and a Flat Washer (C) using the Allen key provided.

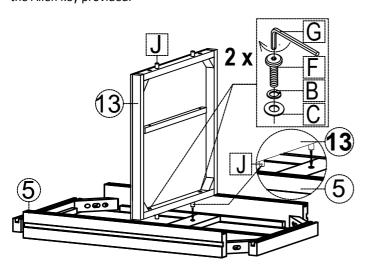


Carefully lay the Shelf Unit on the side and attach a Right Side Leg and a Left Side Leg to the top corners using a Bolt (E), a Lock Washer (B) and a flat Washer (C).

Note that the groove in the leg will be on the inside of the unit. Repeat for the other side. Make sure all bolts are securely tightened. el to the Vertical Panel with a Short Bolt and a Flat Washer (C) using the Allen key

to the grooves on the Top and Bottom agram.

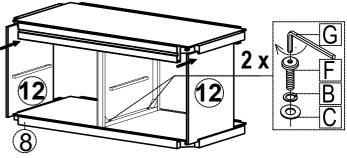


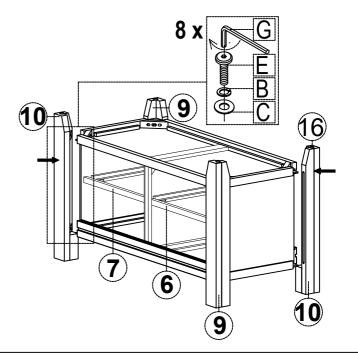

MADE IN VIET NAM Page: 1/2

JOFRAN INC.

ASSEMBLY INSTRUCTIONS &
PARTS IDENTIFICATION
MODEL # 1851 - 60
ALTAMONTE HIGH/LOW
RECT TABLE

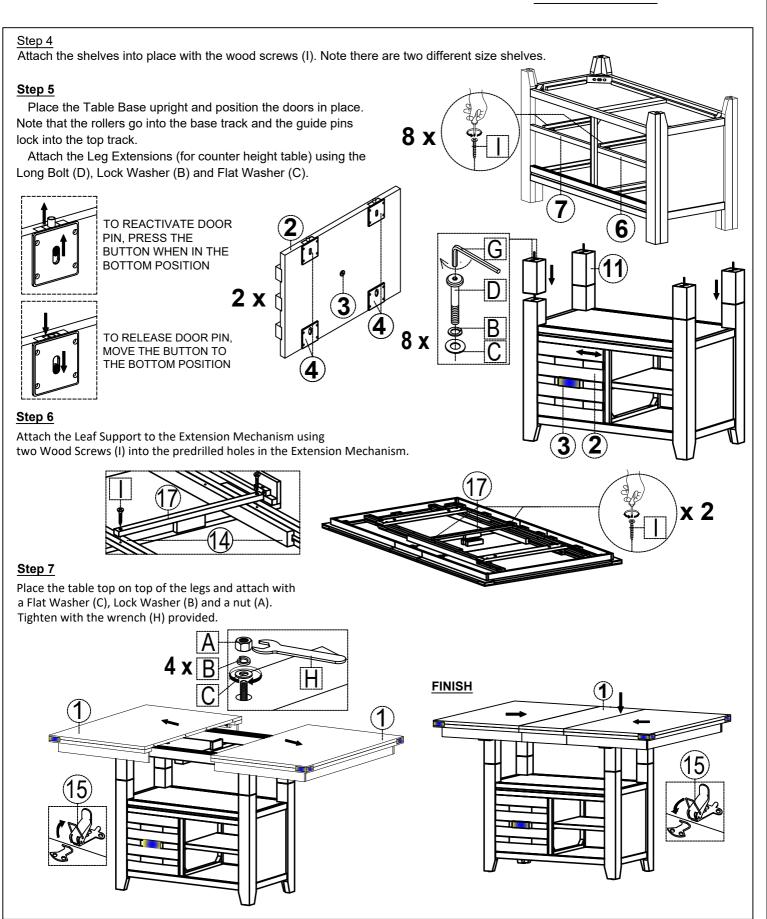

MADE IN VIET NAM Page: 2/2