# **J**OFRAN INC.

## ASSEMBLY INSTRUCTIONS & <u>PARTS IDENTIFICATION</u> <u>MODEL # 1851 - 72</u> <u>ALTAMONTE HIGH/LOW</u> <u>RECT TABLE</u>

	Parts key							
No	Code	Qty	Description	No				
1	1851-72P24	1 pc	Table Top	Α				
2	1851-72P07	4 pcs	Sliding Door	В				
3	1851P04	4 pcs	Pull w/Screws	С				
4	1851P07S	8 sets	Sliding Wheel & Lock w/Screws - 2 pcs	D				
5	1851-72P08T	1 pc	Storage Box Top Panel	E				
6	1851-72P08	1 pc	Storage Box Shelf	F				
7	1851-72P08B	1 pc	Storage Box Bottom Panel	G				
8	1851-72P02L	2 pcs	Left Facing Leg	н				
9	1851-72P02R	2 pcs	Right Facing Leg	1				
10	1851-72P02E	2 pcs	Extensions Leg	J				
11	1851-72P08S	2 pcs	Storage Box Side Panel	St				
12	1851-72P08V	2 pcs	Storage Box Vertical Panel	Att				
13	1851-72P13	2 sets	Extension Mechanism	aS				
14	1851-72P13L	4 sets	Extension Lock	Slie as				
15	1851P01F	4 pcs	Floor Glide	]				
16	1851-72P36	1 pc	Leaf Support	]				

#### Step 1

4 x

Lay the top of the Storage Box upside down on a clean padded surface to prevent scratching. Insert the Wood Dowels (J) into the Vertical Panel ends.


Attach the two Storage Box Vertical Panels to the top shelf using a Short Bolt (F), a Lock Washer (B) and a Flat Washer (C) using the Allen key provided.


Attach the Middle Shelf to the Vertical Panels using the four Wood Screws (I).

Hardware kit #1851-72P01									
)		Description			Qty				
	•	Hex nut M8		4	pcs				
	Q	Lock washer	Ø8	28	pcs				
	0	Flat washer	Ø8 x 16mm	28	pcs				
	0	Long bolt-Attaching Leg Extension	5/6" x 180mm	8	pcs				
	0	Medium bolt Attaching Leg		8	pcs				
	0	Short bolt Attaching Top/Bottom Panel M6 x 30mm			pcs				
		Allen key	K4	1	рс				
	$\sim$	Key wrench	13	1	рс				
	*)	Wooden Screw	Ø4 x 25mm	6	pcs				
		Wooden Dowel	Ø10 x 20mm	8	pcs				

#### Step 2

Attach the bottom of the Storage Box to the Vertical Partitions using a Short Bolt (F), a Lock Washer (B) and a Flat Washer (C). Slide the Side Panels into the grooves on the Top and Bottom Panels as show in the diagram.

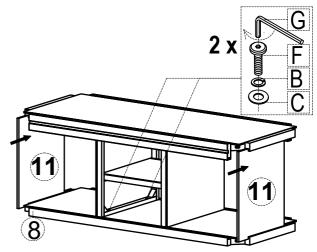

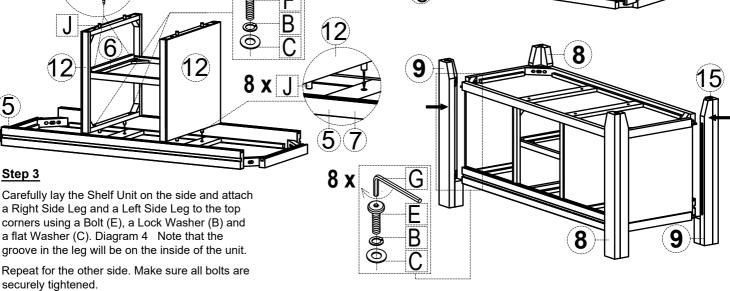


G

2 x

# **OFRAN** INC.

### **ASSEMBLY INSTRUCTIONS &** PARTS IDENTIFICATION MODEL #1851 - 72 ALTAMONTE HIGH/LOW **RECT TABLE**

### Step 4

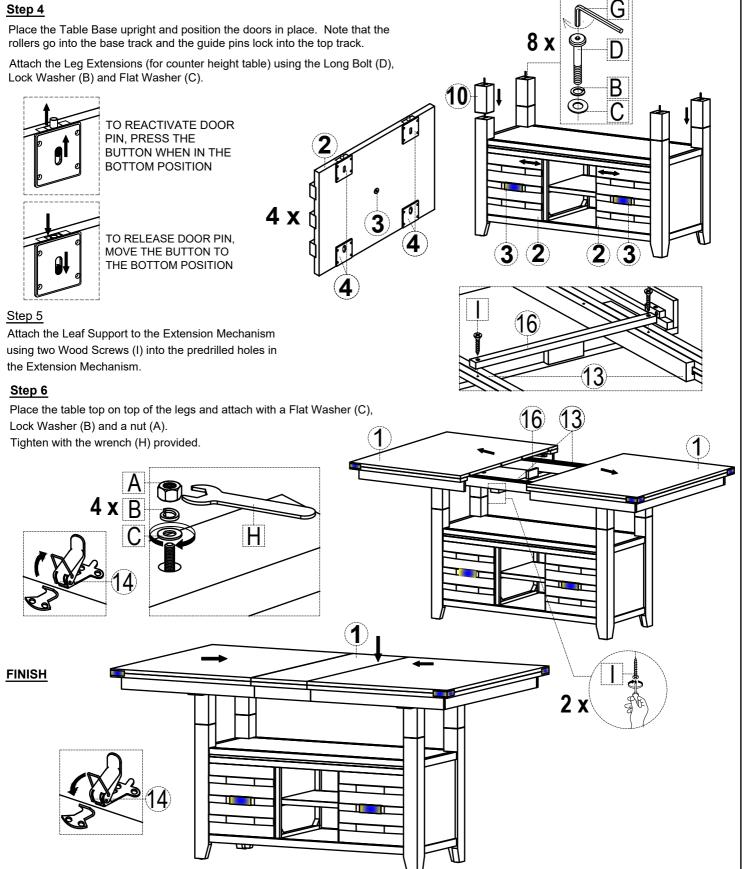

MADE IN VIET NAM