## OFRAN INC.

## **ASSEMBLY INSTRUCTIONS &** PARTS IDENTIFICATION MODEL # 1851 - BS520KD ALTAMONTE UPH **COUNTER STOOL**

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts that may have come loose inside the carton during shipment.

Parts key					Hardware kit: #1851-BS520KDP46			
No	Code	Qty	Description	No			Description	Qty
1	1851-BS520KDP40	1 pc	Chair Back	Α	9	Hex nut M8		4 pcs
2	1851-BS520KDP41	1 pc	Complete Seat	В	<b>Q</b>	Lock washer	Ø8 x 13mm	11 pcs
3	1851-BS520KDP42	1 pc	Right Facing Front Leg	С	0	Flat washer	Ø8 x 18mm	11 pcs
4	1851-BS520KDP43	1 pc	Left Facing Front Leg	D	0	Long bolt	Ø6 x 80mm	4 pcs
5	1851-BS520KDP44	1 pc	Right facing side stretcher	Е	0	Short bolt	Ø6 x 40mm	3 pcs
6	1851-BS520KDP45	1 pc	Left facing side stretcher	F		Allen key		1 pc
7	1851-BS520KDP49	1 pc	Front Stretcher	G	<b>S</b>	Key wrench		1 pc
8	1851P01F	4 pcs	Floor Glide	Н	Quinne:	Wood Screw	Ø4 x 40mm	6 pcs


- Fabric Content: 73%POLYESTER / 27%COTTON
- Cleaning Code W: Clean only with water-based shampoo or foam upholstery cleaner.

Do not over wet. Do not use solvents to spot clean.

## STEP 1

- Carefully lay Chair Back flat on a smooth flat surface to prevent scratches.
- Attach Complete Seat to Chair Back by inserting a Flat Washer, Lock Washer and Short bolt into each of the hole on the back of the seat. Tighten screws with provided Allen Key by turning clockwise until secure.
- Insert a Flat Washer, Lock Washer an Long screw into each of 2 holes in the Complete Seat corners. Tighten screws with provided Key Wrench.

**DETAIL C** 

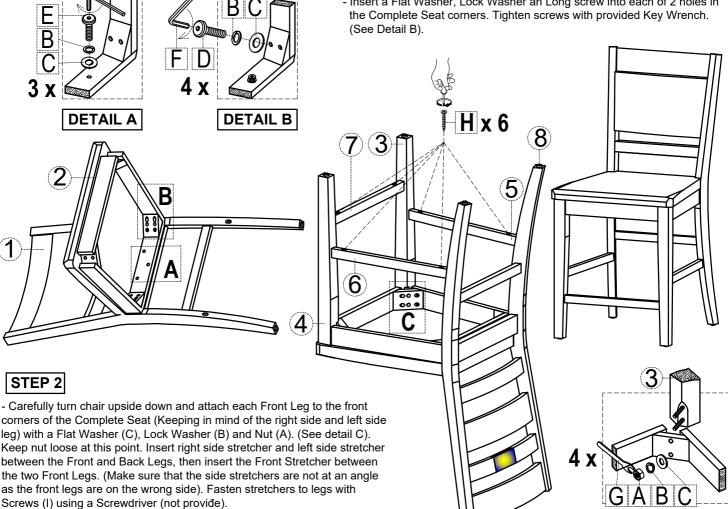

provided (G).

- Be sure to level the chair prior to tightening front leg nuts with wrench