### OFRAN INC.

### **ASSEMBLY INSTRUCTIONS &** PARTS IDENTIFICATION **MODEL #1855-60 ALTAMONTE HIGH/LOW RECTANGLE TO SQUARE TABLE**

Qty 4 pcs 24 pcs

24 pcs

8 pcs

8 pcs

4 pcs 1 pc 1 pc

8 pcs

4 pcs

Parts key				Hardware kit #1855-60P01				
No	Code	Qty	Description	No	Description			
1	1855-60P24	1 pc	Table Top	Α	9	Hex nut M8		
2	1855-60P07	2 pcs	Sliding Door	В		Lock washer	Ø8	2
3	1855P04	2 pcs	Pull w/Screws	С	0	Flat washer	Ø8 x 16mm	2
4	1855P07S	4 sets	Sliding Wheel & Lock w/Screws - 2 pcs	D	9	Long bolt-Attaching Leg Extension	5/6" x 180mm	
5	1855-60P08T	1 pc	Storage Box Top Panel	Е	9	Medium bolt Attaching Leg	M6 x 60mm	
6	1855-60P08L	1 pc	Left Storage Box Shelf	F	0	Short bolt Attaching Top/Bottom Panel M6 x 30mm		
7	1855-60P08R	1 pc	Right Storage Box Shelf	G		Allen key	K4	
8	1855-60P08B	1 pc	Storage Box Bottom Panel	Н	$\int_{0}^{\omega}$	Key wrench	13	
9	1855-60P02L	2 pcs	Left Facing Leg	1	Dumm	Wooden Screw	Ø4 x 25mm	
10	1855-60P02R	2 pcs	Right Facing Leg	J		Wooden Dowel	Ø10 x 20mm	
11	1855-60P02E	4 pcs	Extensions Leg	St	ep 2	•		
12	1855-60P08S	2 pcs	Storage Box Side Panel	Attach the Bottom Panel to the Vertical Panel with a Short (F), a Lock Washer (B) and a Flat Washer (C) using the Allen				
13	1855-60P08V	1 pc	Storage Box Vertical Panel					
14	1855-60P13	2 sets	Extension Mechanism	provided. Slide the Side Panels into the grooves on the Top and Botto Panels as show in the diagram.				
15	1855-60P13L	4 sets	Extension Lock					

a Short Bolt he Allen key

nd Bottom Panels as show in the diagram.

#### Step 1


**16** 1855P01F

Lay the top of the Storage Box upside down on a clean padded surface to prevent scratching. Insert the Wood Dowels (J) into the Vertical Panel ends.

4 pcs

Floor Glide


Attach the Storage Box Vertical Panel to the Top Panel with a Short Bolt (F), a Lock Washer (B) and a Flat Washer (C) using the Allen key provided.

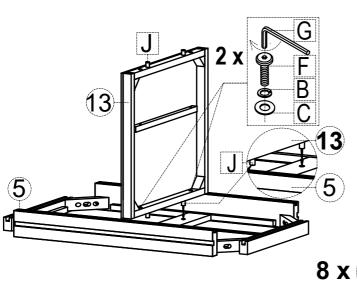

### Step 3

Carefully lay the Shelf Unit on the side and attach a Right Side Leg and a Left Side Leg to the top corners using a Bolt (E), a Lock Washer (B) and a flat Washer (C).

Note that the groove in the leg will be on the inside of the unit. Repeat for the other side. Make sure all bolts are securely tightened.

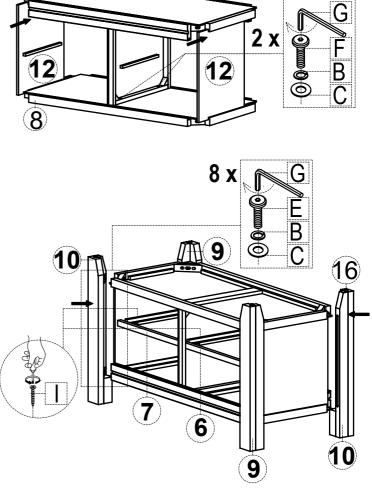

**MADE IN VIET NAM** Page: 1/2

## **JOFRAN** INC.

# ASSEMBLY INSTRUCTIONS & PARTS IDENTIFICATION MODEL # 1855 - 60 ALTAMONTE HIGH/LOW RECTANGLE TO SQUARE TABLE


#### Step 4


Attach the shelves into place with the wood screws (I). Note there are two different size shelves.


### Step 5

Place the Table Base upright and position the doors in place. Note that the rollers go into the base track and the guide pins lock into the top track.

Attach the Leg Extensions (for counter height table) using the Long Bolt (D), Lock Washer (B) and Flat Washer (C).

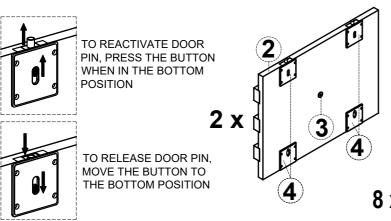

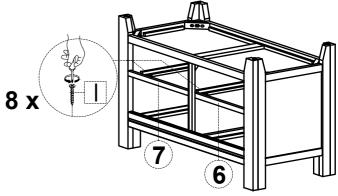


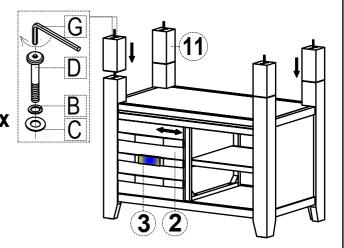


### Step 6

Place the table top on top of the legs and attach with a Flat Washer (C), Lock Washer (B) and a nut (A).

Tighten with the wrench (H) provided.

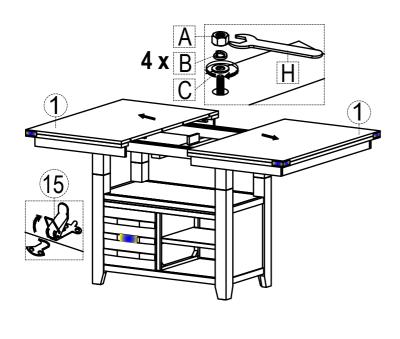

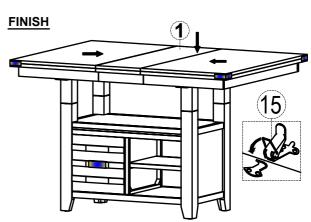

MADE IN VIET NAM Page: 2/2