

ASSEMBLY INSTRUCTIONS & PARTS IDENTIFICATION MODEL # 1855 - 72 ALTAMONTE HIGH/LOW **RECT TABLE**

В

Parts key				Hardware kit #1855-72P01					
No	Code	Qty	Description	No	Description		C	Qty	
1	1855-72P24	1 pc	Table Top	Α	9	Hex nut M8		4	pcs
2	1855-72P07	4 pcs	Sliding Door	В		Lock washer	Ø8	28	pcs
3	1855P04	4 pcs	Pull w/Screws	С	0	Flat washer	Ø8 x 16mm	28	pcs
4	1855P07S	8 sets	Sliding Wheel & Lock w/Screws - 2 pcs	D	0	Long bolt-Attaching Leg Extension	5/6" x 180mm	8	pcs
5	1855-72P08T	1 pc	Storage Box Top Panel	Е	0	Medium bolt Attaching Leg	M6 x 60mm	8	pcs
6	1855-72P08	1 pc	Storage Box Shelf	F	0	Short bolt Attaching Top/Bottom Pa	nel M6 x 30mm	8	pcs
7	1855-72P08B	1 pc	Storage Box Bottom Panel	G		Allen key	K4	1	рс
8	1855-72P02L	2 pcs	Left Facing Leg	Н	~	Key wrench	13	1	рс
9	1855-72P02R	2 pcs	Right Facing Leg	ı	* mmo	Wooden Screw	Ø4 x 25mm	6	pcs
10	1855-72P02E	4 pcs	Extensions Leg	J	02222	Wooden Dowel	Ø10 x 20mm	8	pcs
11	1855-72P08S	2 pcs	Storage Box Side Panel	Step 2 Attach the bottom of the Storage Box to the Vertical Partitions using a Short Bolt (F), a Lock Washer (B) and a Flat Washer (C). Slide the Side Panels into the grooves on the Top and Bottom Panels as show in the diagram.					
12	1855-72P08V	2 pcs	Storage Box Vertical Panel						
13	1855-72P13	2 sets	Extension Mechanism						
14	1855-72P13L	4 sets	Extension Lock						
15	1855P01F	4 pcs	Floor Glide						

Step 1

16 1855-72P36

Lay the top of the Storage Box upside down on a clean padded surface to prevent scratching. Insert the Wood Dowels (J) into the Vertical Panel ends.


1 pc

Repeat for the other side. Make sure all bolts are

securely tightened.

Leaf Support

Attach the two Storage Box Vertical Panels to the top shelf

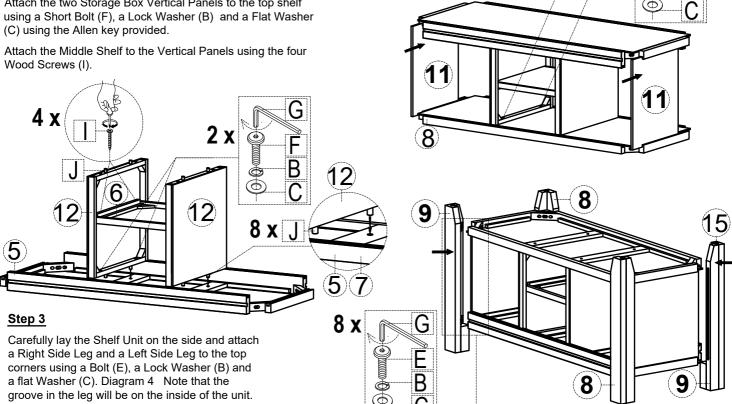

MADE IN VIET NAM Page: 1/2

JOFRAN INC.

ASSEMBLY INSTRUCTIONS & PARTS IDENTIFICATION MODEL # 1855 - 72 ALTAMONTE HIGH/LOW RECT TABLE

