


Hardware Kit (1904 P46)		
Ltr	Qty	Description
A	1 PC	WING NUT
B	1 PC	LOCK WASHER
C	1 PC	FLAT WASHER

Parts Key			
No	Code	Qty	Description
1	1904-BS355KDP40	1 Pc	CHAIR BACK / SEAT
2	1904-BS355KDP42B	1 Pc	LEG ASSEMBLY
3	1904-BS355KDP01F	4 Pcs	RUBBER FLOOR PROTECTOR

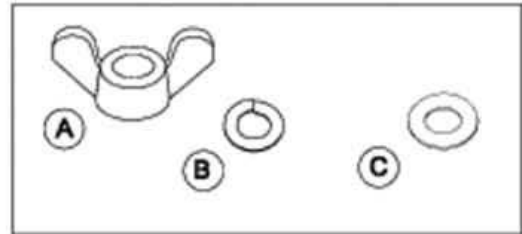


STEP 1

- Carefully lay chair flat on a smooth flat surface to prevent scratching
- Remove legs from base of seat.

STEP 1



STEP 2

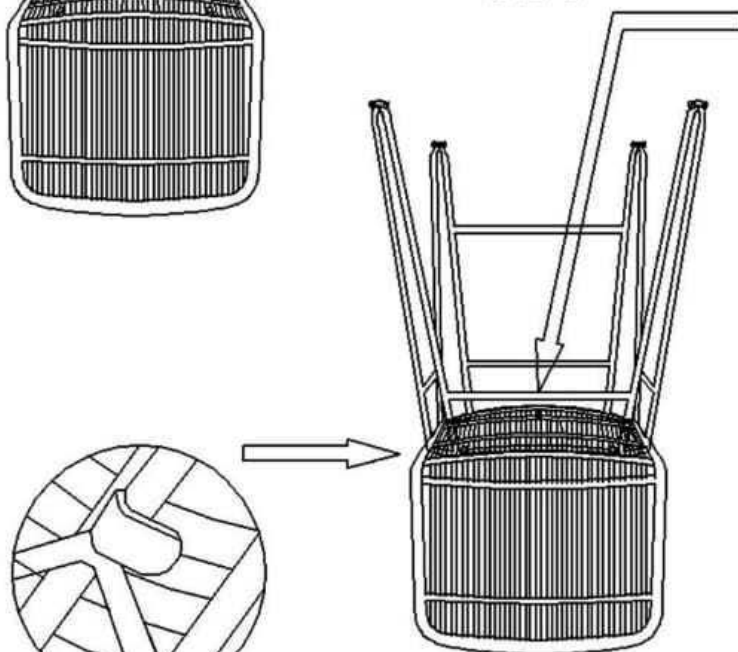

Detail A

Detail B



STEP 2

Attach the leg assembly to the seat by inserting the base into the flange hooks (See diagram B) then align the front to the bolt flange . Secure the leg assembly using a flat washer , lock washer and wing nut tighten completely (See diagram A).