


Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts that may have come loose inside the carton during shipment.

Key Parts			
No	Code	Q'Ty	Description
1	1931-54P02	4 pcs	LEGS
2	1931-54P04	5 pcs	DOOR/DRAWER PULLW/SCREW
3	1931-54P05	3 pcs	COMPLETE DRAWER
4	1931-54P05A	3 pcs	DRAWER STOP
5	1931-54P06	3 pcs	DRAWER GUIDE(WOOD ON WOOD)
6	1931-54P07R	1 pc	DOOR-RIGHT SIDE FACING
7	1931-54P07L	1 pc	DOOR-LEFT SIDE FACING
8	1931-54P07H	4 pcs	DOOR HINGE
9	1931-54P08	1 pc	SHELF
10	1931P01F	4 pcs	FLOOR GLIDE
11	193101AT	1 set	ANTI-TIP KIT



Hardware kit 1931-54P01			
No		Description	Q'Ty
A		Bolt 1/4" x 2 1/3"	12 pcs
B		Lock washer 5/16"	12 pcs
C		Flat washer 5/16"	12 pcs
D		Allen Key	1 pc

**PLEASE NOTE:**  
To help prevent the possibility of tip-over, install the Anti-tip restraint provided.

**DETAIL A**

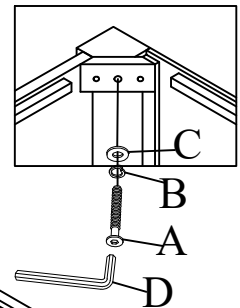

### DRAWER STOP ENGAGED      DRAWER STOP DISENGAGED



Rotate vertical stop to the horizontal position to disengage

#### STEP 1

- Carefully remove all Drawers complete from the Storage box by disengaging the drawer stop. Then lay Storage box backside down on a smooth flat surface to prevent scratches.
- Insert Bolt (A), Flat washer (C), Lock washer (B) with Allen key (F) through holes inside Store box to Legs. See (DETAIL A ). Do not fully tighten at this stage until all parts are in position.
- Carefully insert Shelf frame into designated locations then insert Bolt (A), Flat washer (C), Lock washer (B) with Allen key (F) through holes inside Shelf frame to Legs. See (DETAIL B ).
- Once all parts are in place, tighten all bolts.

#### STEP 2

- Carefully put the Drawers back in place and engage the drawer stop.
- Attach the Anti tip hardware.

