


### 2271-STELLACH

#### Hardware kit (2271-STELLACHP46)

Ltr	Qty	Description
A	4PCS.	BOLT ØM6X16MM
B	4PCS.	BOLT ØM6X45MM
C	4PCS.	FLAT WASHER
D	1PC	ALLEN WRENCH
E	1PC	SUPPORT BRACKET

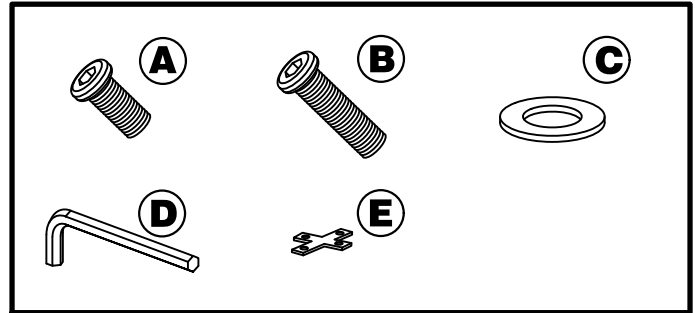


#### STEP 1:

- Carefully place the upper leg and the lower leg assemblies together upside down to prevent scratches on the legs as shown in Step 1.
- Connect the legs with the support bracket E and bolts A. Do not fully tighten at this point


#### Parts Key

No	Code	Qty	Description
1	2271-STELLACHP43	1PC	UPPER LEG ASSEMBLY
2	2271-STELLACHP42	1PC	LOWER LEG ASSEMBLY
3	2271-STELLAP01L	4PCS.	FLOOR LEVELER

#### STEP 1:

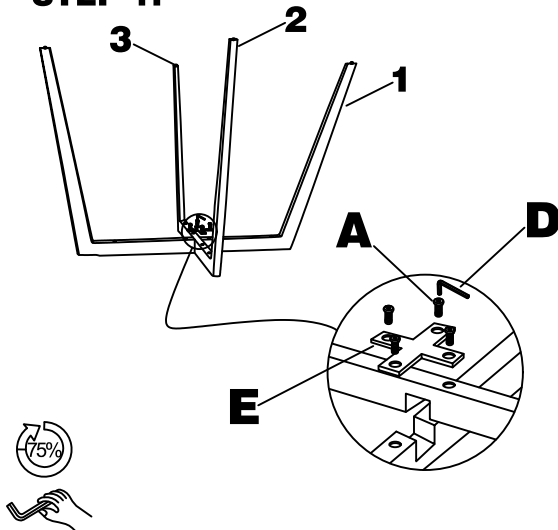

#### STEP 2:

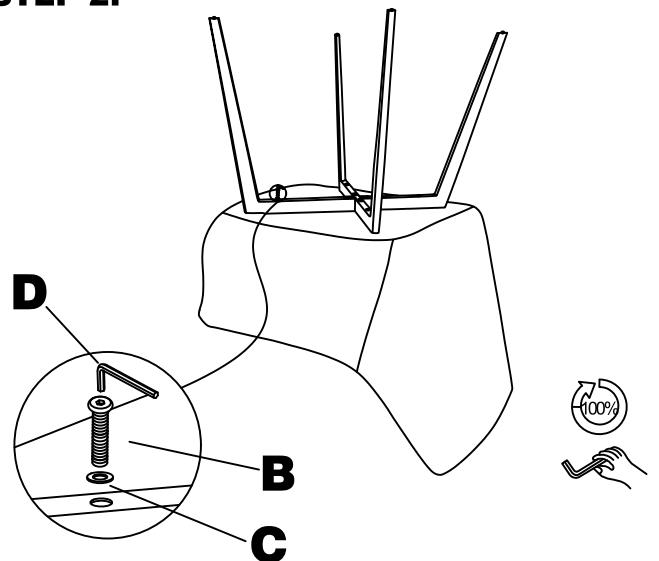

#### STEP 2:

- Attach the assembled legs to the seat by inserting a flat washer and bolt B per the diagram.
- Do not fully tighten the bolts until all are in place.
- Once all bolts are in place, fully tighten the bolts by hand using the provided Allen Wrench. Do not use a power tool to tighten.
- Use the floor levelers to level the chair, if needed.

#### \*\*\* FABRIC CARE:

Avoid direct sunlight, water, oil, acid, sharp objects etc. Use a vacuum cleaner to clean. Wipe spills immediately. If needed, spot clean with a mild water-based soap. Do not saturate fabric.

Fabric content 100% Polyester, Cleaning code W

