



## ASSEMBLY INSTRUCTIONS & PARTS IDENTIFICATION PHOEBE-CH-CREAM

## **PARTS LIST**

Item	Code	Description	Qty
Α	PHOEBEP41CREAM	Seat Cushion	1PC
В	PHOEBEP42	Front Legs	2PCS
С	PHOEBEP42R	Rear Legs	2PCS
D	PHOEBEP01F	Floor glides	4PCS
E	PHOEBEP01W	Plastic washer	4PCS

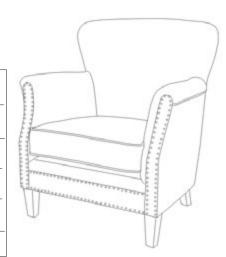

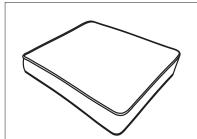

A: Seat cushion




B Front leg M10 bolt & floor glides (D)



C: Rear Leg M10 bolt & floor glide(D)



E. Plastic washer

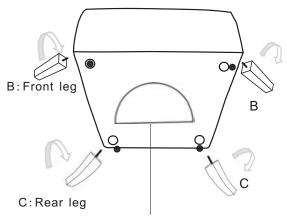

Zippered Pocket (Chair legs position)

## **Assembly Steps:**

- Step 1. Turn chair over on a clean flat surface.
- Step 2. Remove chair legs(item B & C) from zippered pocket at chair bottom.
- Step 3. Place plastic washer (Item E) onto the bolt on each leg.
- Step 4. Install the legs (item B & C) to chair.
- Step 5. Turn chair to its upright position.

\*\*\* Please note: To level chair you may need to add or remove washers from the particular legs.

## FABRIC CARE INSTRUCTIONS REGULAR CARE

Clean only with a water-based shampoo or foam upholstery cleaner. Do not over wet. Do not use solvents to spot clean. Pile fabrics may require brushing to restore appearance. Cushion covers should not be removed and laundered.

**FABRIC CONTENT 100% POLYESTER - CLEANING CODE "W"**