


ASSEMBLY INSTRUCTIONS PARTS IDENTIFICATIONS KARMA-CH-SLATE

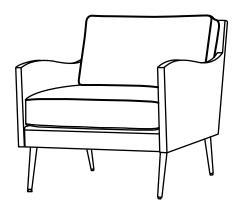


PARTS LIST

| Item | Code | Description | Picture | Qty |
|------|--------------------|------------------------|---------|------|
| 1. | KARMA P41 SLATE | Back Cushion | | 1 PC |
| 2. | KARMA P42 | Legs with levellers | | 4 PC |


Hardware Kit Karma P46

| Item | Description | Qty |
|------|-------------------|-------|
| Α | Bolt M6x20 | 16 PC |
| В | O Washer M8x17 | 16 PC |
| С | Allen Key K4 | 1PC |
| D | Lock Washer M6 | 16 PC |


Assembly Steps

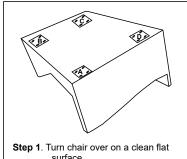


surface.

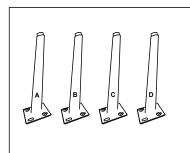


Step 2. Remove chair legs with levellers (item 2) from the box.

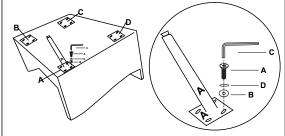

Step 3. Match leg A with base A Place iron washer (Item B) & lock washer (item D) with bolt (item A) onto the leg base and tighten all bolts with the allen key (item C)

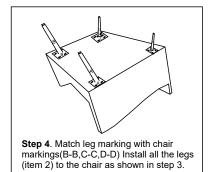

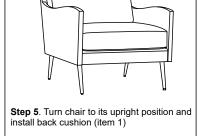

CARE INSTRUCTIONS (Cleaning Code X)

Clean only by vacuuming or light brushing to remove overall soil. Never use water, foam or liquid cleaning agents.