

ASSEMBLY INSTRUCTIONS:

1160/1162-4105 Panel Headboard 5/0

1160/1162-4115 Panel Footboard 5/0

1160/1162-4901 Rails 5/0-6/6

LEGACY

CLASSIC | MODERN

Thank you for purchasing this quality product. Before beginning, please check the packing material carefully for small parts which may have come loose inside the carton during shipping. Please do not discard any packing material until all parts have been located. If any parts are missing, please contact your dealer for prompt replacement.


Caution: (1) These parts are cumbersome and heavy. This product can best be assembled with the assistance of one or more persons in order to prevent personal injury and to insure parts are not damaged during the assembly process. If dirty, clean finished parts with mild dishwashing liquid and water solution applied on damp cloth. Cloth should not be excessively wet. Polish finish with soft cloth and an industry recognized furniture polish.

(2) To prevent damage to your floor or carpet, please check the bottom of each piece of furniture for stain residue and rough surfaces and also check for staples or nails left after removing the packaging material. The manufacturer will not be held responsible if preventative steps are not taken prior to installation.

(3) During normal use everyday, screws, bolts, nuts and wooden plugs may loosen up. They should be periodically inspected and re-tightened to prevent damage to the furniture and (or) personal property or cause injury. Always check to be sure all hardware on this list and the below mentioned components are attached to the furniture properly and kept tightened.

Parts & Hardware List:

PARTS LIST		QTY	PARTS LIST		QTY	HARDWARE LIST		QTY	HARDWARE LIST		QTY		
A	HEADBOARD	1 pc	E	FOOTBOARD	1 pc	1	BOLT	Ø5/16" * 1-7/9"	8 pcs	6	LONG BOLT	Ø5/16" x 3"	8 pcs
B	RIGHT POST	1 pc	F	SLAT	3 pcs	2	LOCK WASHER	5/16"	8 pcs	7	ARC WASHER	1"-1/2" * 2/3"	8 pcs
C	LEFT POST	1 pc	G	SUPPORT LEG	3 pcs	3	FLAT WASHER	5/16" * 3/4"	8 pcs	8	NUT	Ø5/16" - 5/7"	8 pcs
D	HEADBOARD BOTTOM RAIL	1 pc	H	RAIL	2 pcs	4	ALLEN	1/6" * 2-1/3"	1 pc	9	OPEN WRENCH	1/2"	1 pc
						5	WOOD SCREW	Ø5/16" * 1"-1/6"	6 pcs				

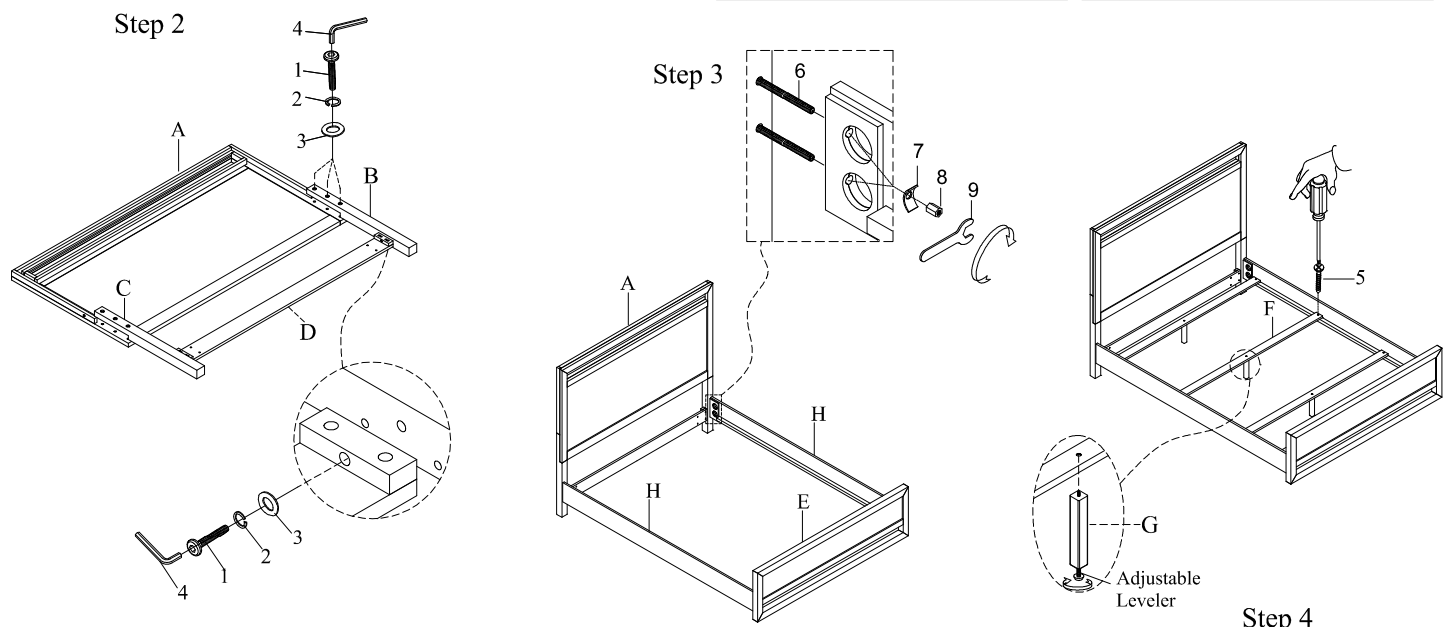

Assembly Procedures :

Step 1: Lay out all parts and hardware on a clean protective surface to protect the furniture and floor during assembly. Make sure the quantity of each is correct and the feet are free of stain, staples, screws and nails.

Step 2: Assemble the right post (B) and left post (C) and headboard bottom rail (D) to the headboard (A) using hardware (1, 2, 3, 4) as shown.

Step 3: Assemble the bed rails (H) to the headboard (A) and the footboard (E) using hardware (6, 7, 8, 9) as shown.

Step 4: When the bed rails be assembled on the upper hole and the lower hole, please assemble the support leg (G) on the slat (F). Place the slats (F) on the bed rails and fasten with wood screws (5) as shown.

Assembly is complete.