























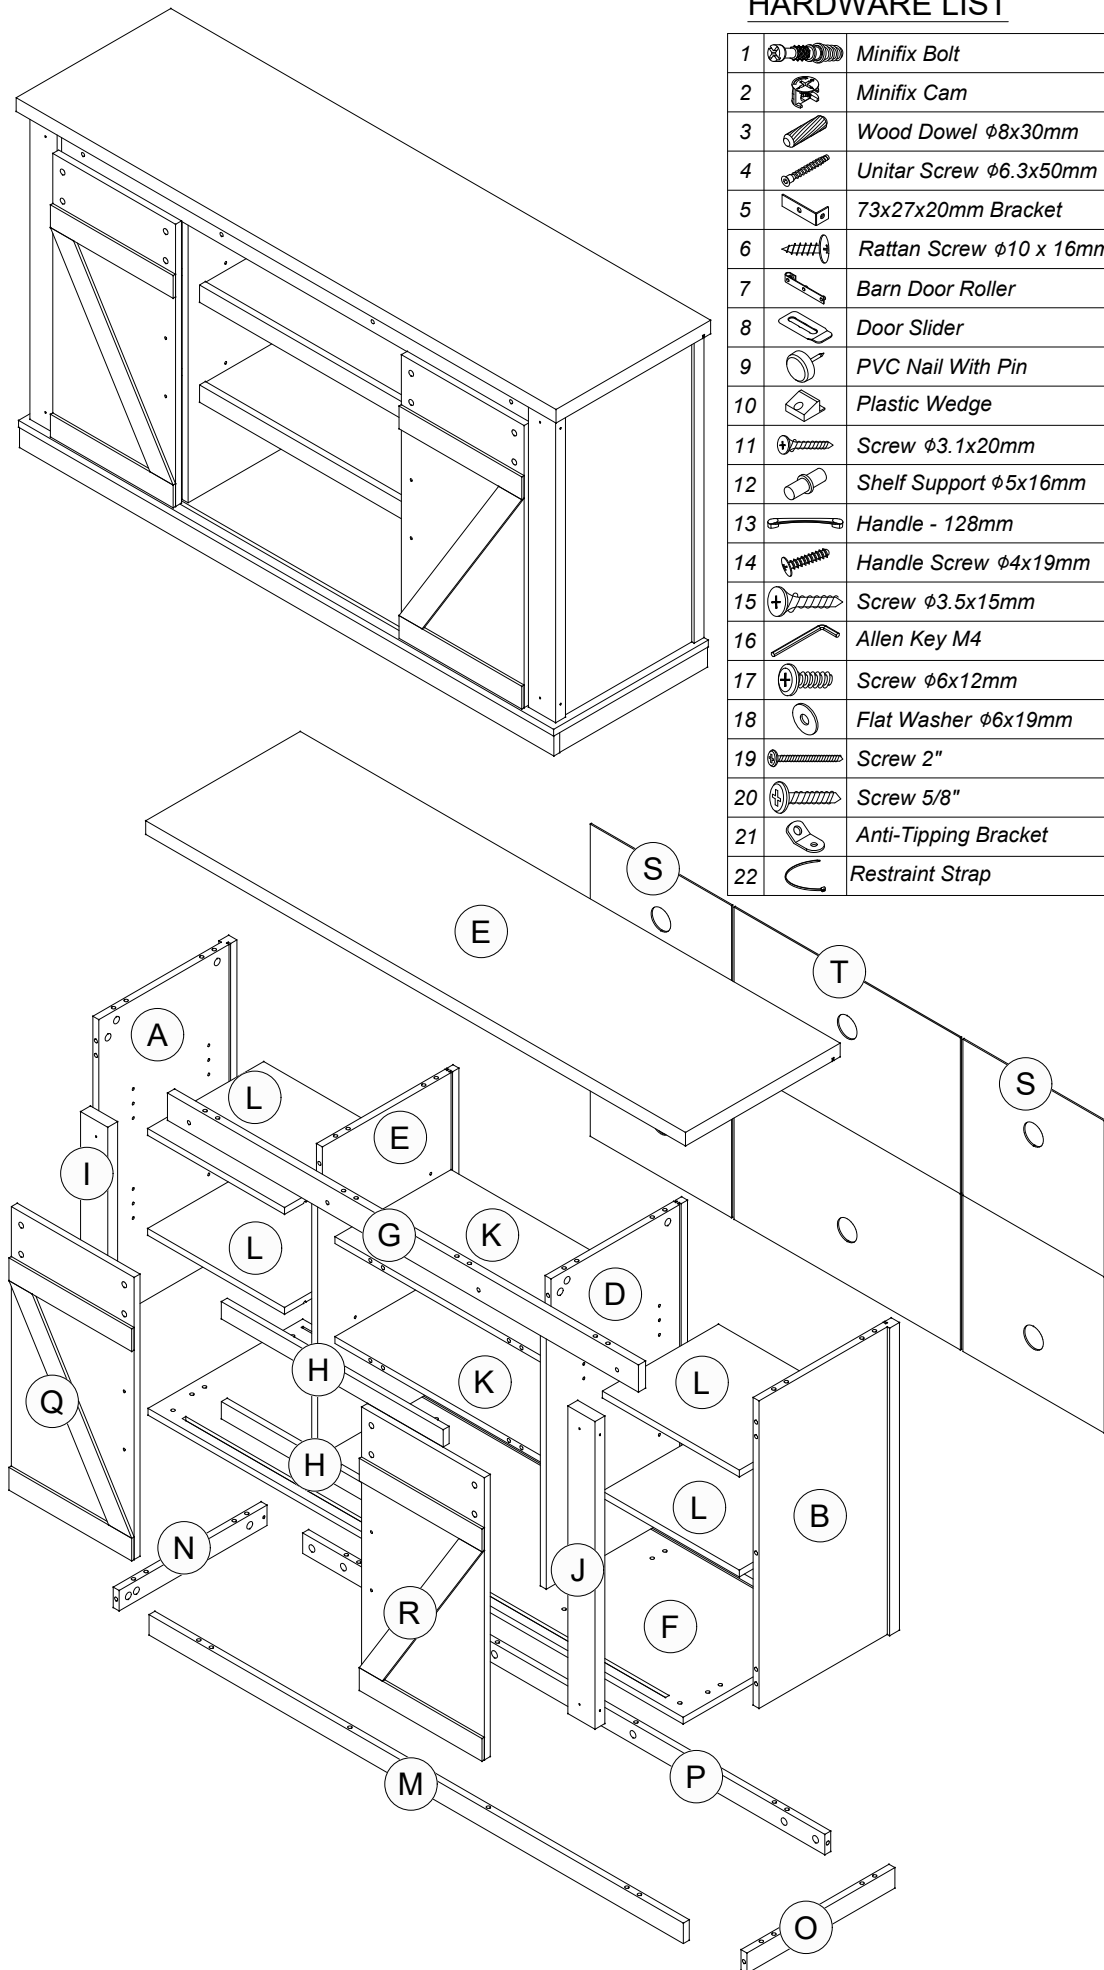
# 97003 / 97004

## PART LIST


CODE	QTY
A	1
B	1
C	1
D	1
E	1
F	1
G	1
H	2
I	1
J	1
K	2
L	4
M	1
N	1
O	1
P	1
Q	1
R	1
S	2
T	1


## HARDWARE LIST

1		Minifix Bolt	40 pcs
2		Minifix Cam	40 pcs
3		Wood Dowel $\phi 8 \times 30 \text{mm}$	36 pcs
4		Unitar Screw $\phi 6.3 \times 50 \text{mm}$	10 pcs
5		73x27x20mm Bracket	4 pcs
6		Rattan Screw $\phi 10 \times 16 \text{mm}$	4 pcs
7		Barn Door Roller	4 pcs
8		Door Slider	4 pcs
9		PVC Nail With Pin	6 pcs
10		Plastic Wedge	8 pcs
11		Screw $\phi 3.1 \times 20 \text{mm}$	8 pcs
12		Shelf Support $\phi 5 \times 16 \text{mm}$	24 pcs
13		Handle - 128mm	2 pcs
14		Handle Screw $\phi 4 \times 19 \text{mm}$	4 pcs
15		Screw $\phi 3.5 \times 15 \text{mm}$	8 pcs
16		Allen Key M4	1 pc
17		Screw $\phi 6 \times 12 \text{mm}$	8 pcs
18		Flat Washer $\phi 6 \times 19 \text{mm}$	8 pcs
19		Screw 2"	2 pcs
20		Screw 5/8"	2 pcs
21		Anti-Tipping Bracket	4 pcs
22		Restraint Strap	2 pcs




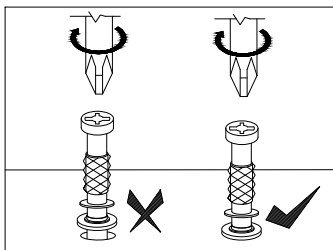
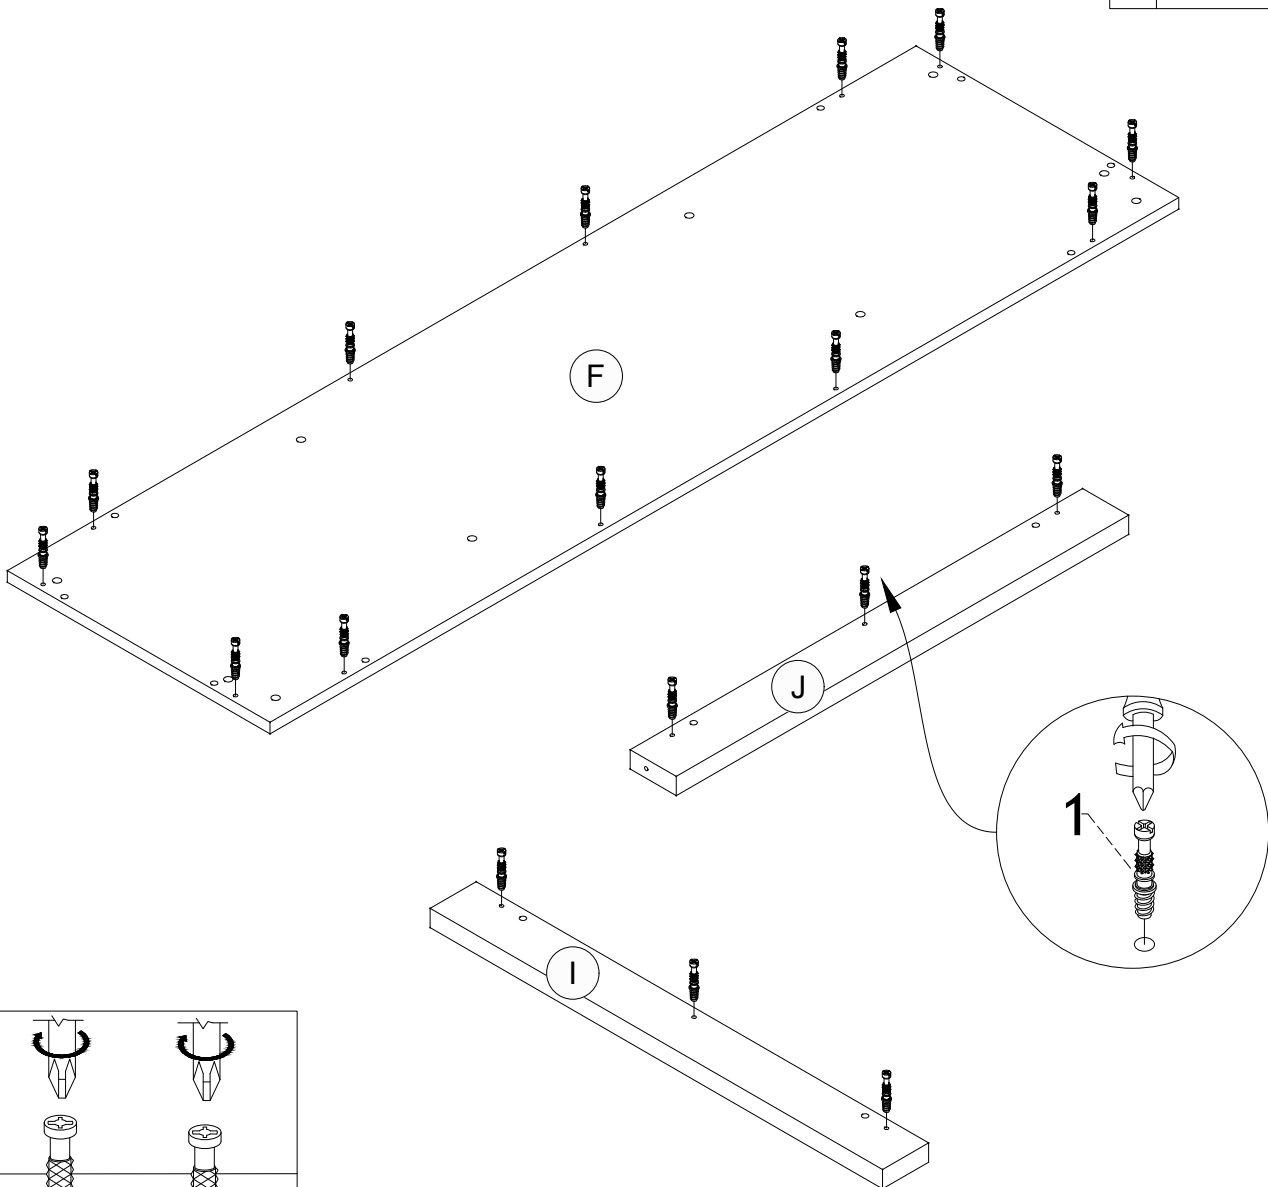
STEP 1

3		12 pcs
---	--	--------

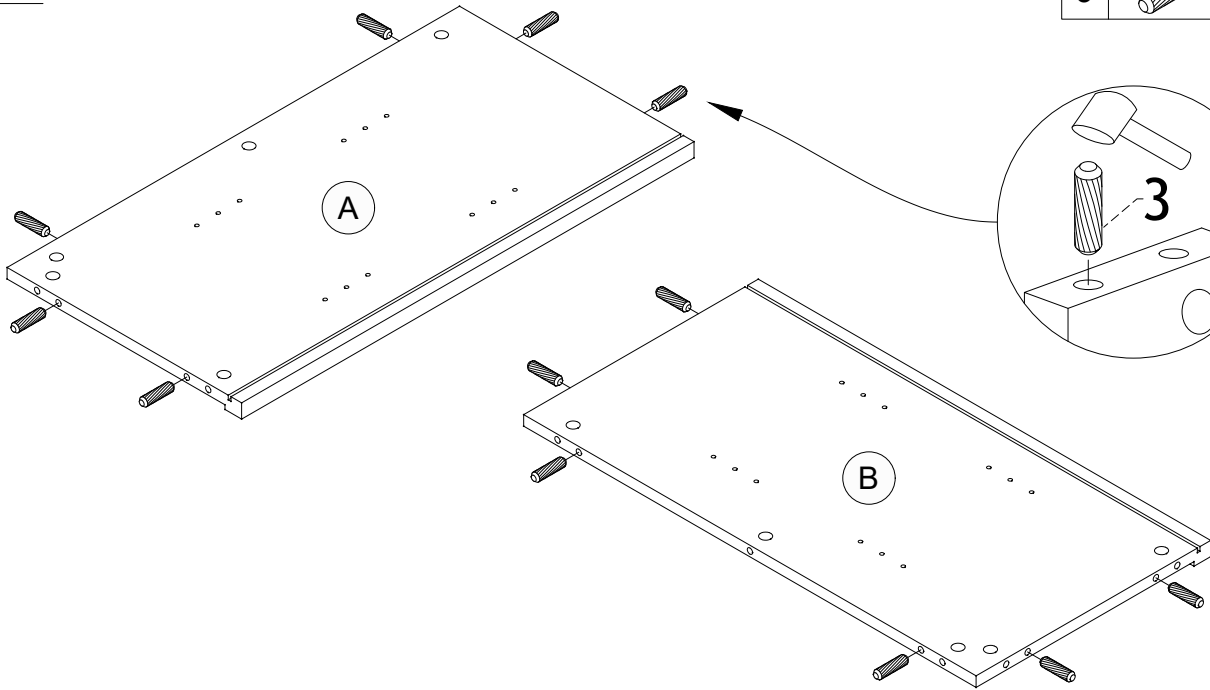


STEP 2

1		18 pcs
---	---	--------



**STEP 3**

2  6 pcs

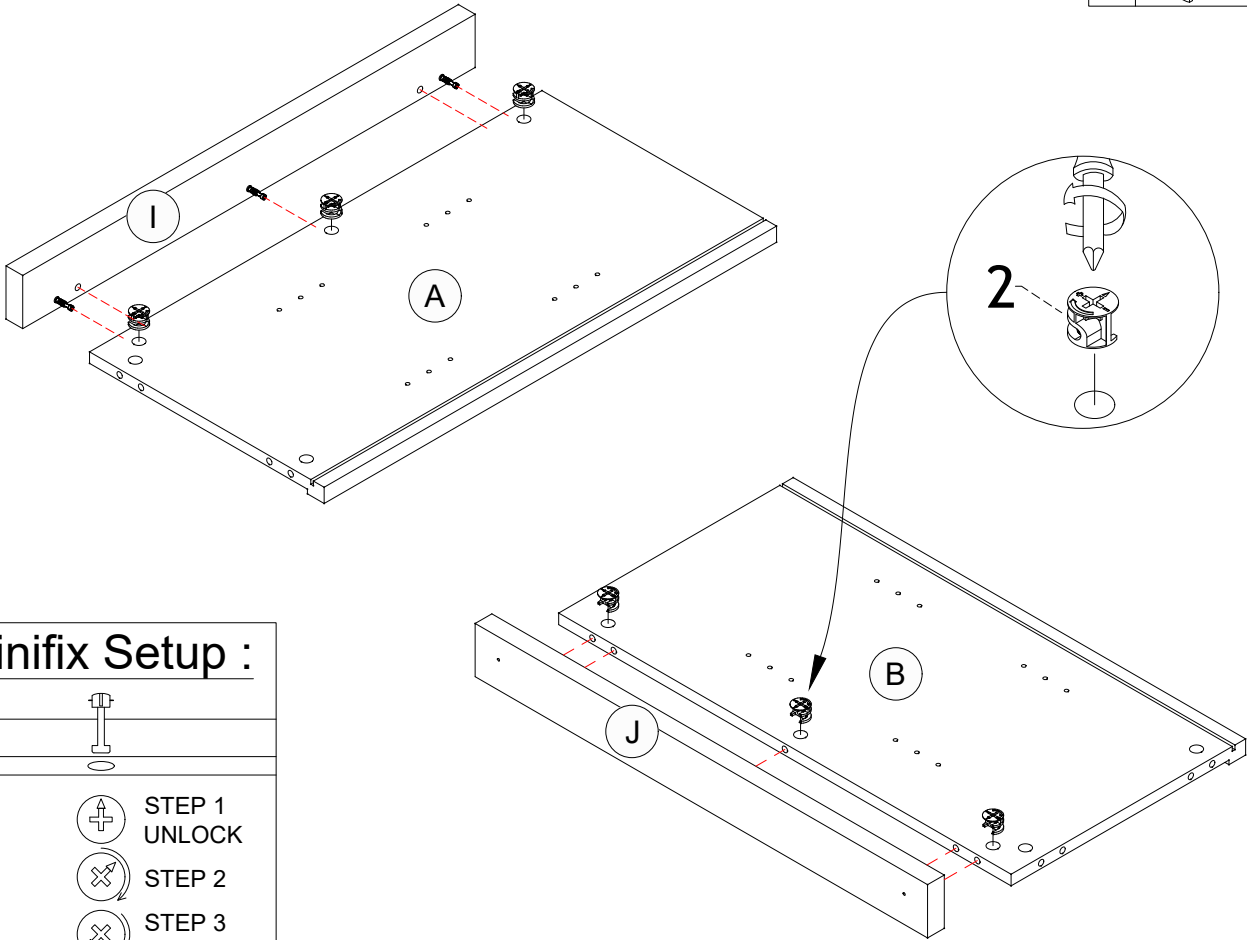

**Minifix Setup :**



STEP 1  
UNLOCK




STEP 2  
LOCK





STEP 3  
LOCK


**STEP 4**

3  8 pcs

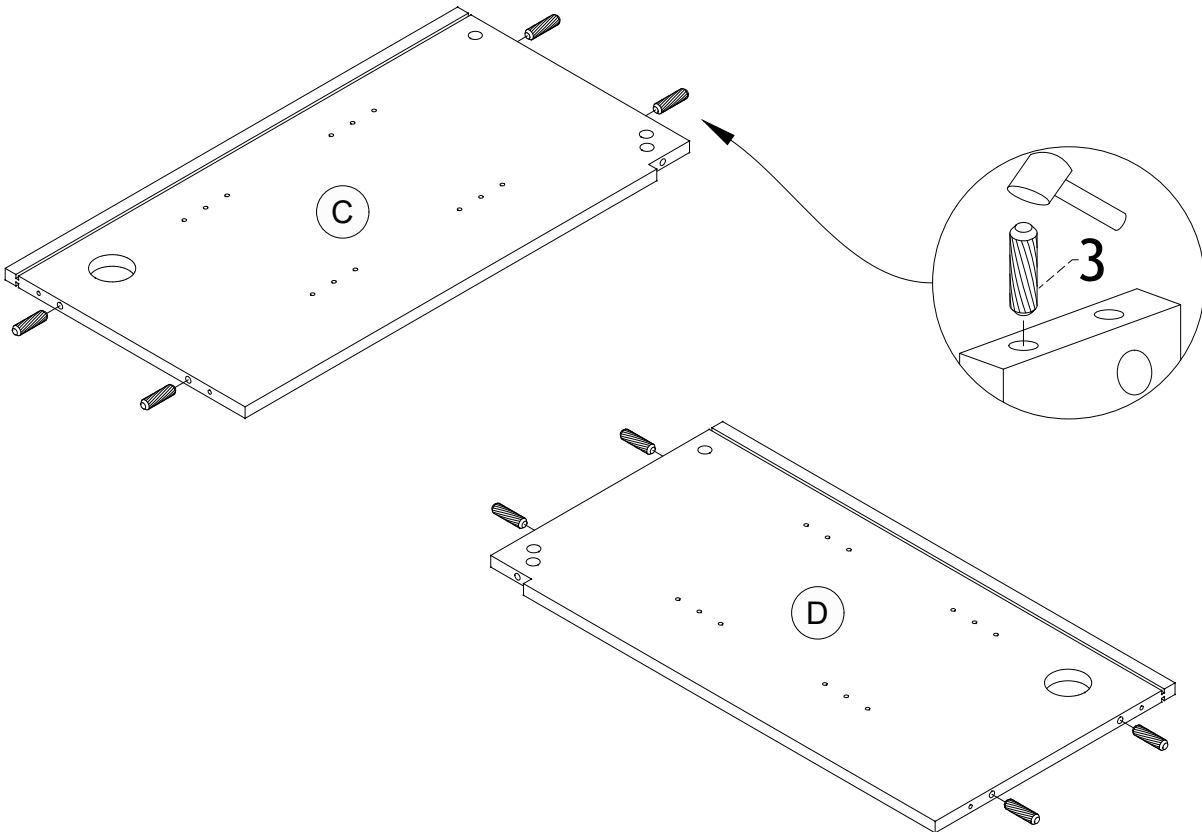


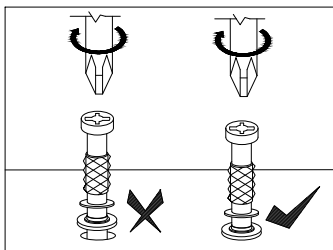
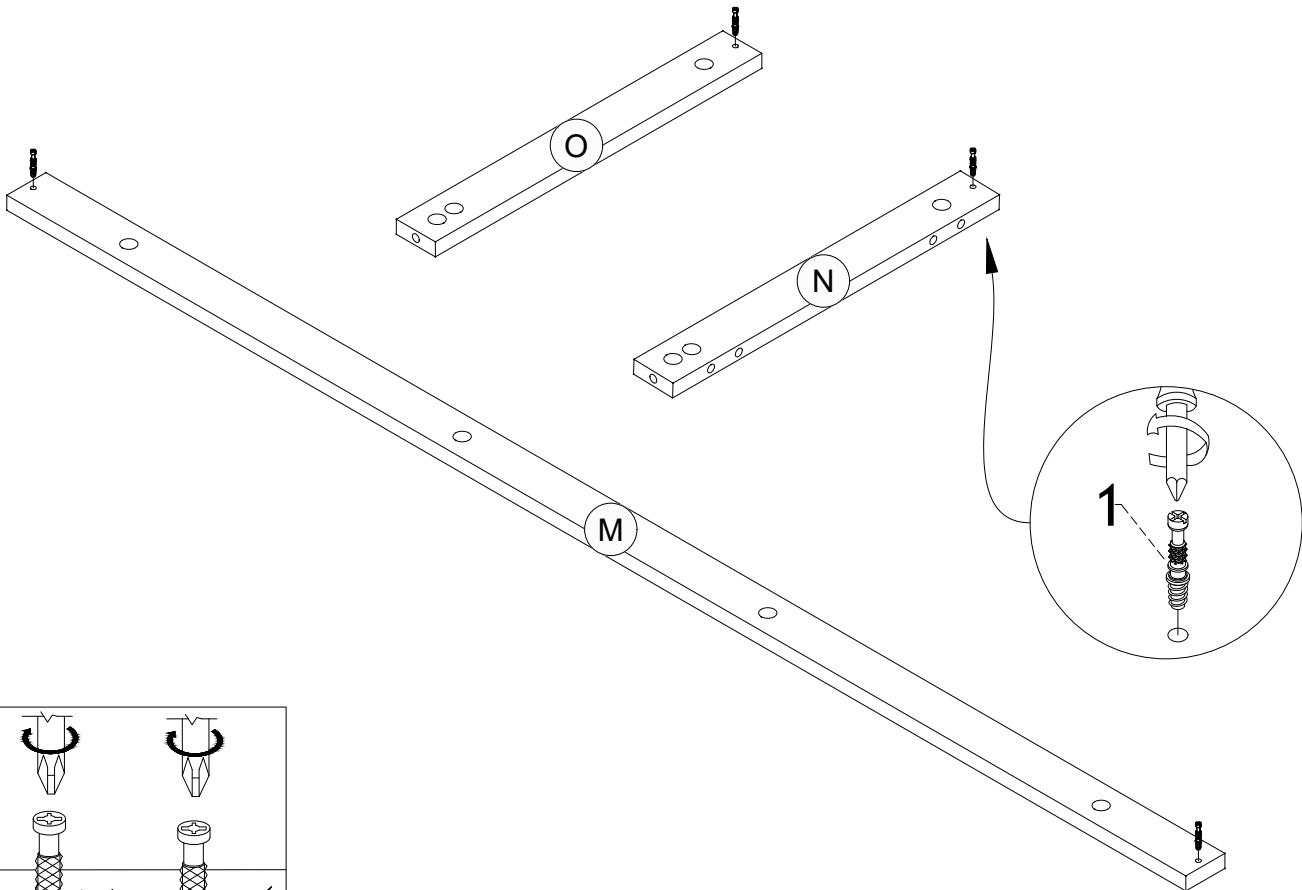
**STEP 5**

4		10 pcs
16		1 pc

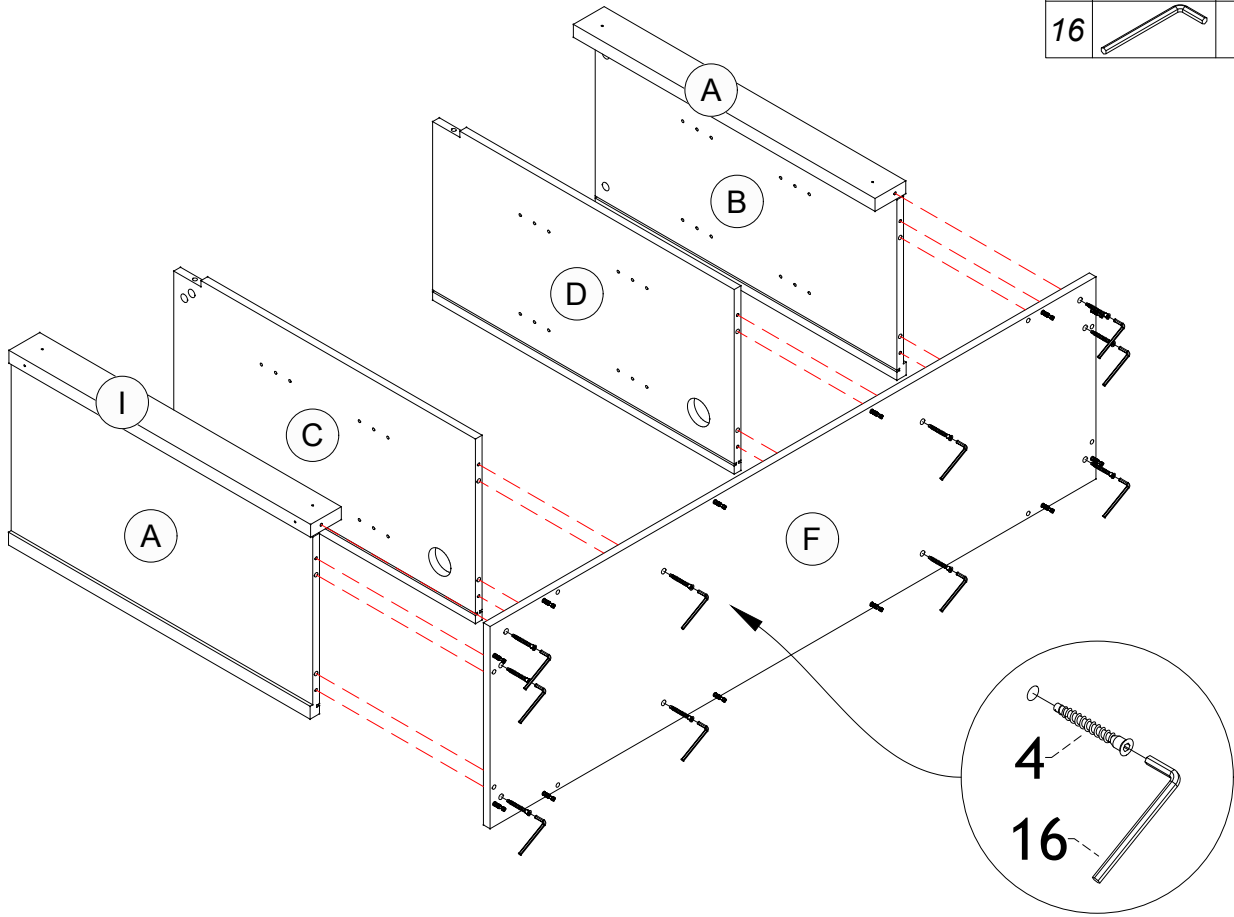


**STEP 6**

1		4 pcs
---	---	-------







**STEP 7**

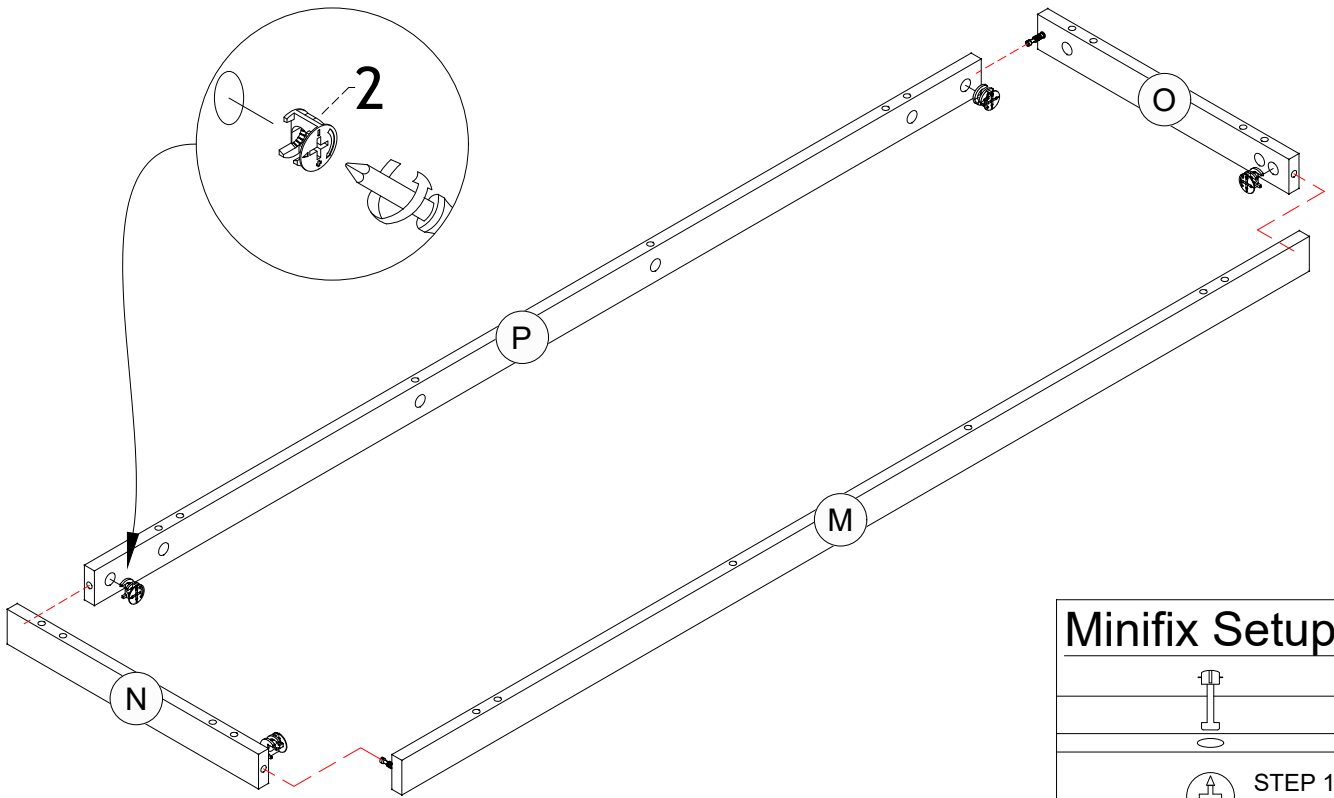2  4 pcs




**Minifix Setup :**

	
	STEP 1 UNLOCK
	STEP 2 LOCK
	STEP 3 LOCK


**STEP 8**

3  8 pcs

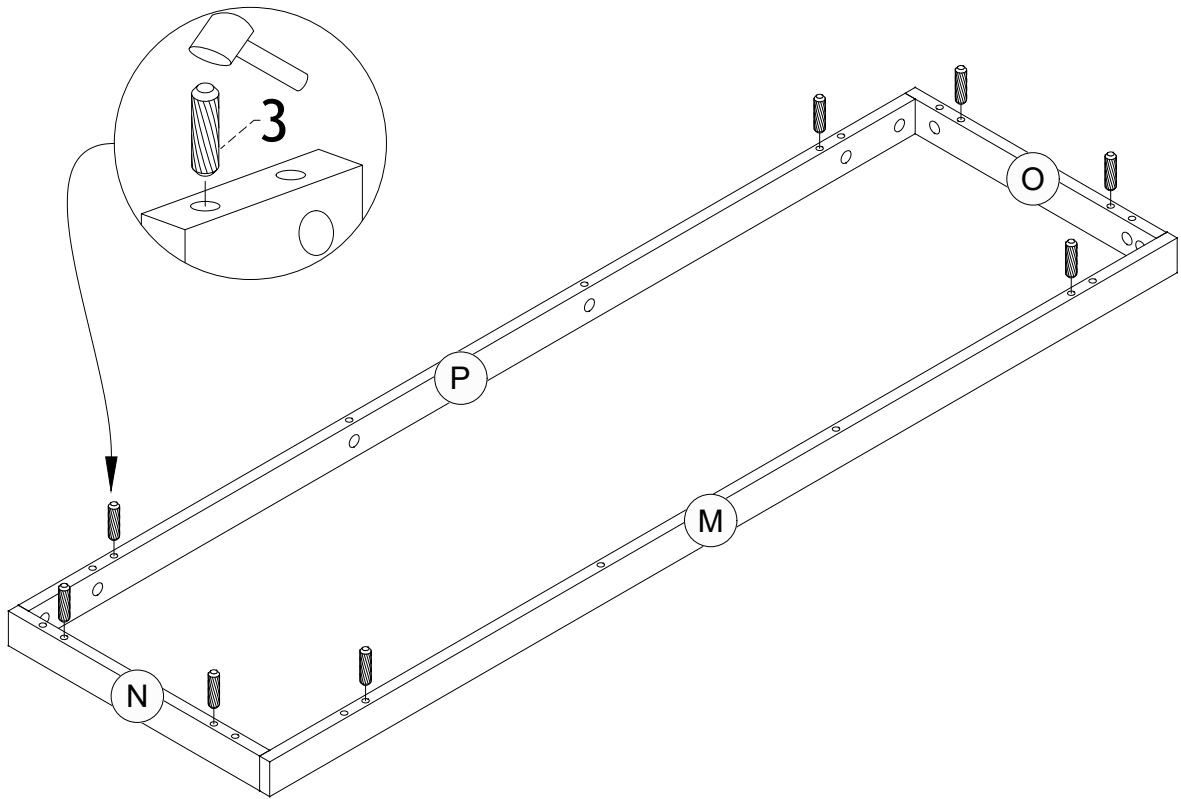



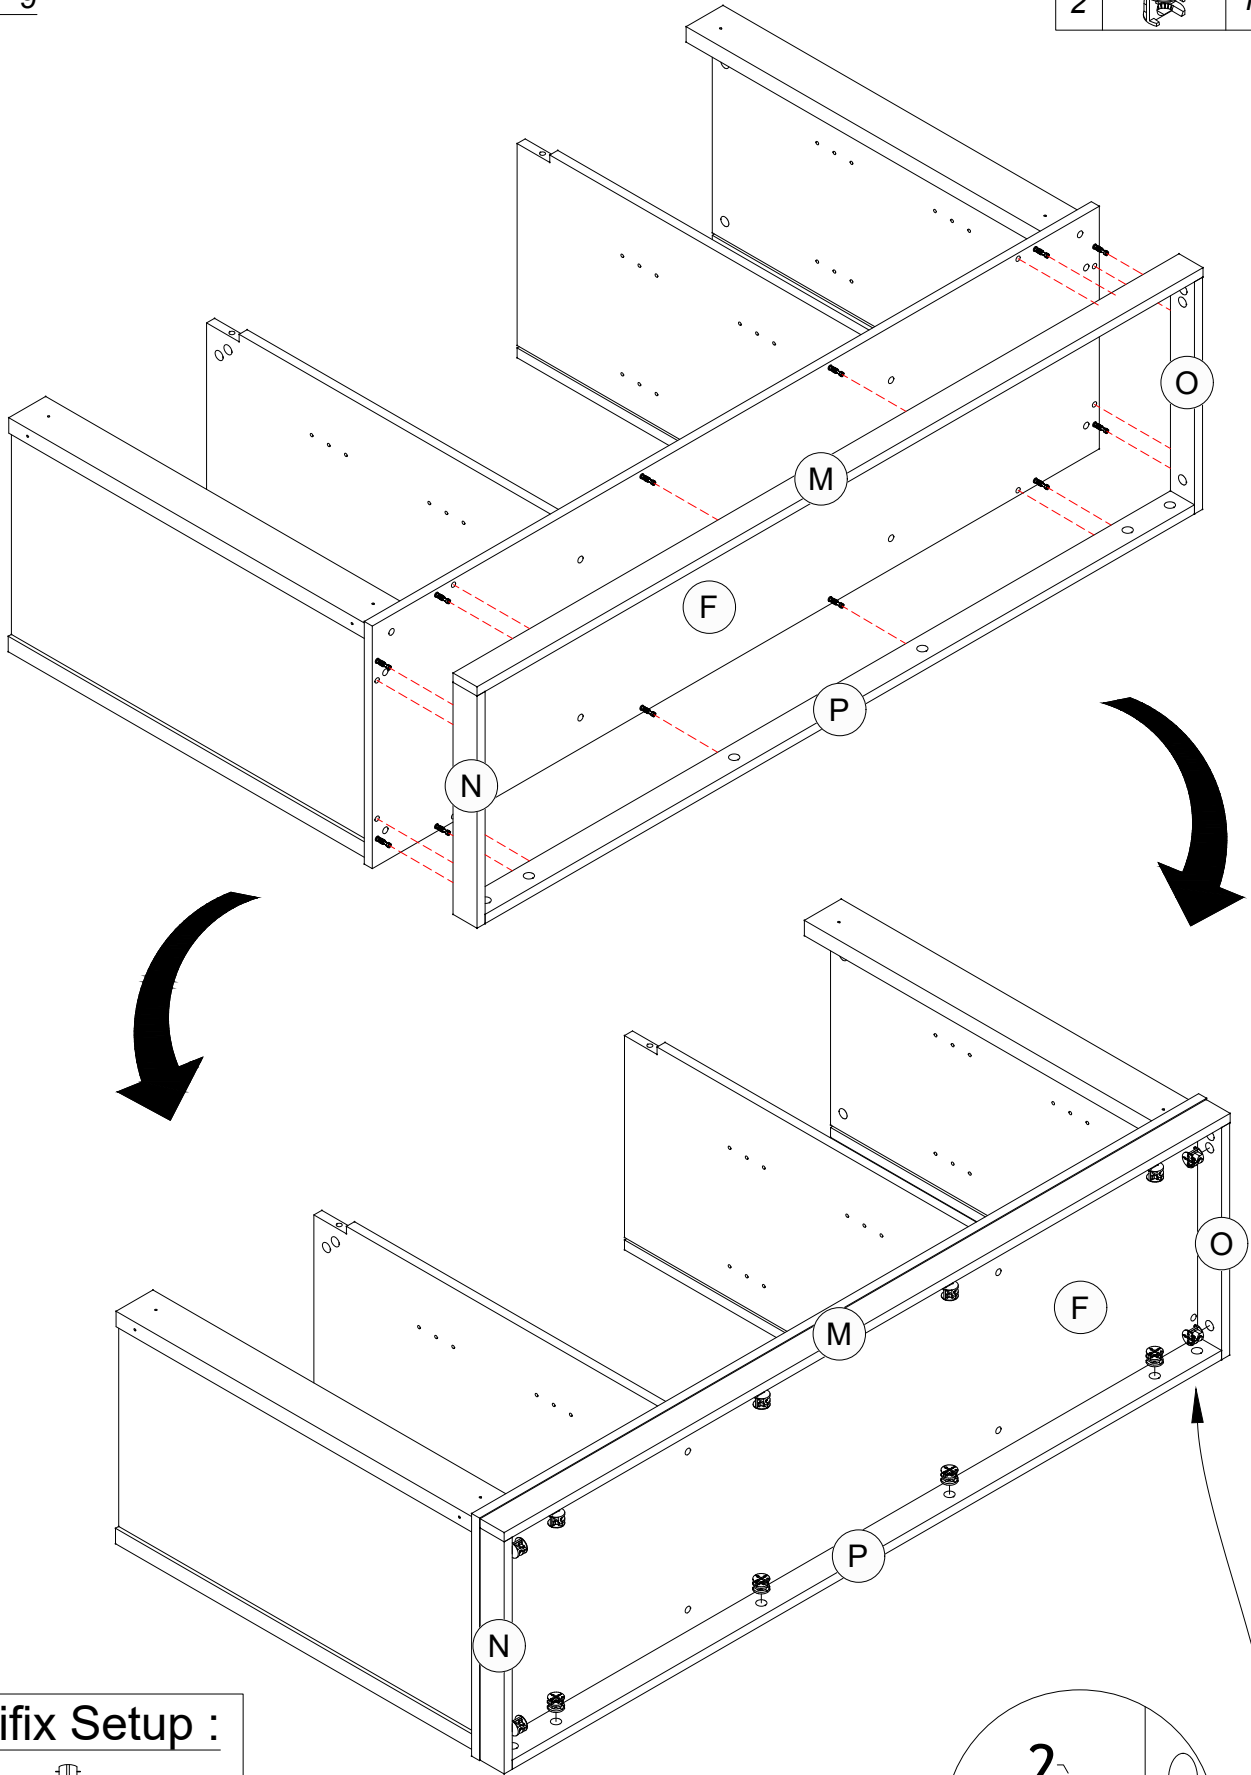


STEP 9

2  12 pcs




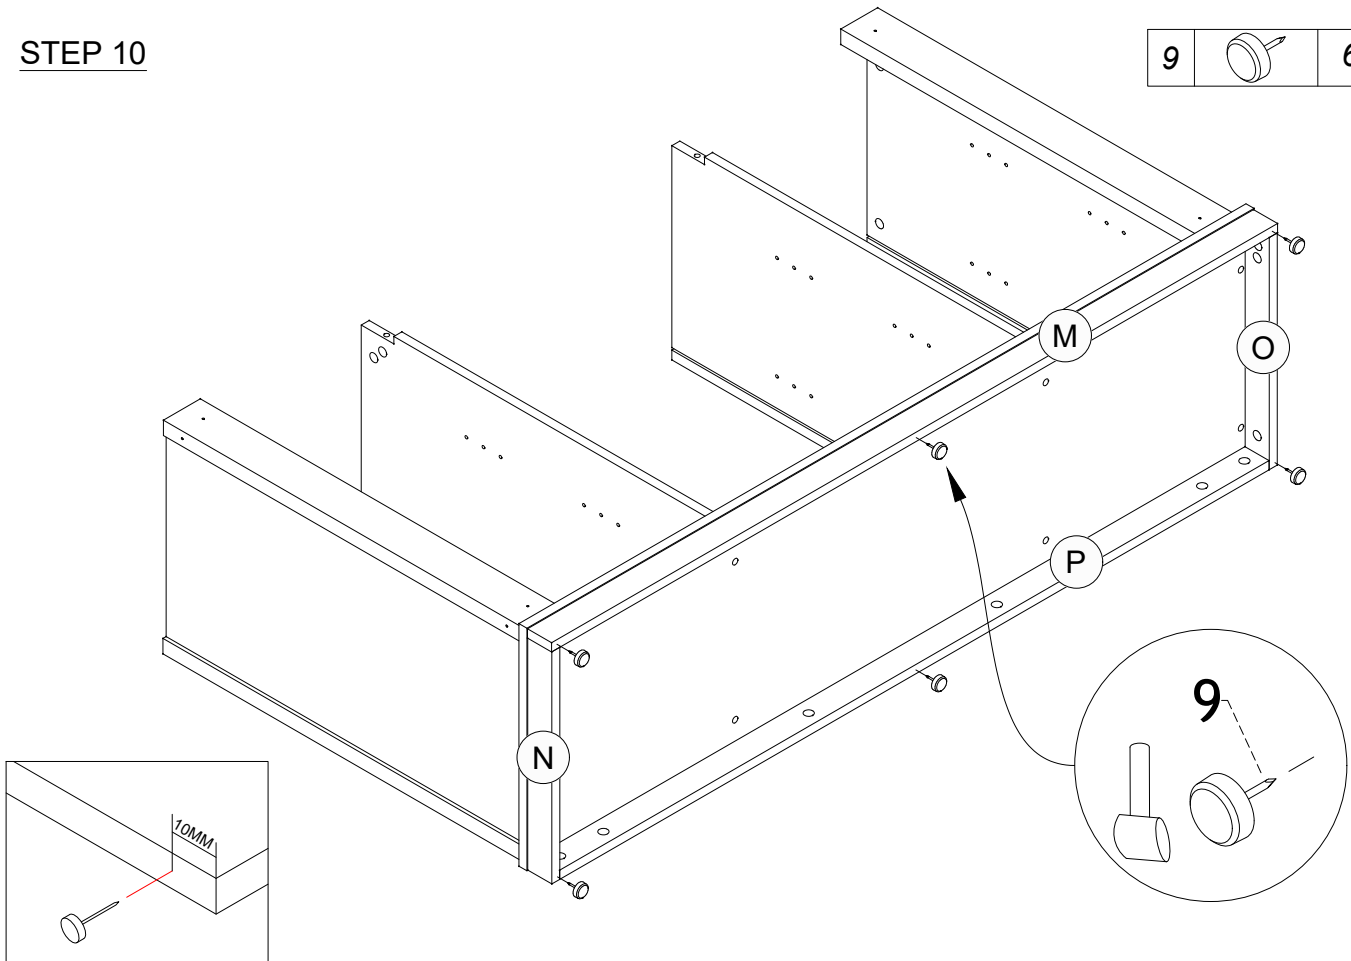
**Minifix Setup :**

	
	STEP 1 UNLOCK
	STEP 2
	STEP 3 LOCK

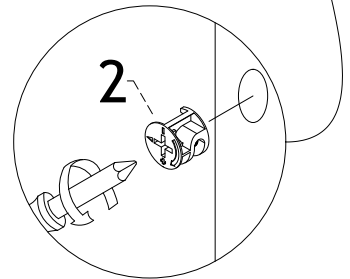


STEP 10

9		6 pcs
---	--	-------




STEP 11

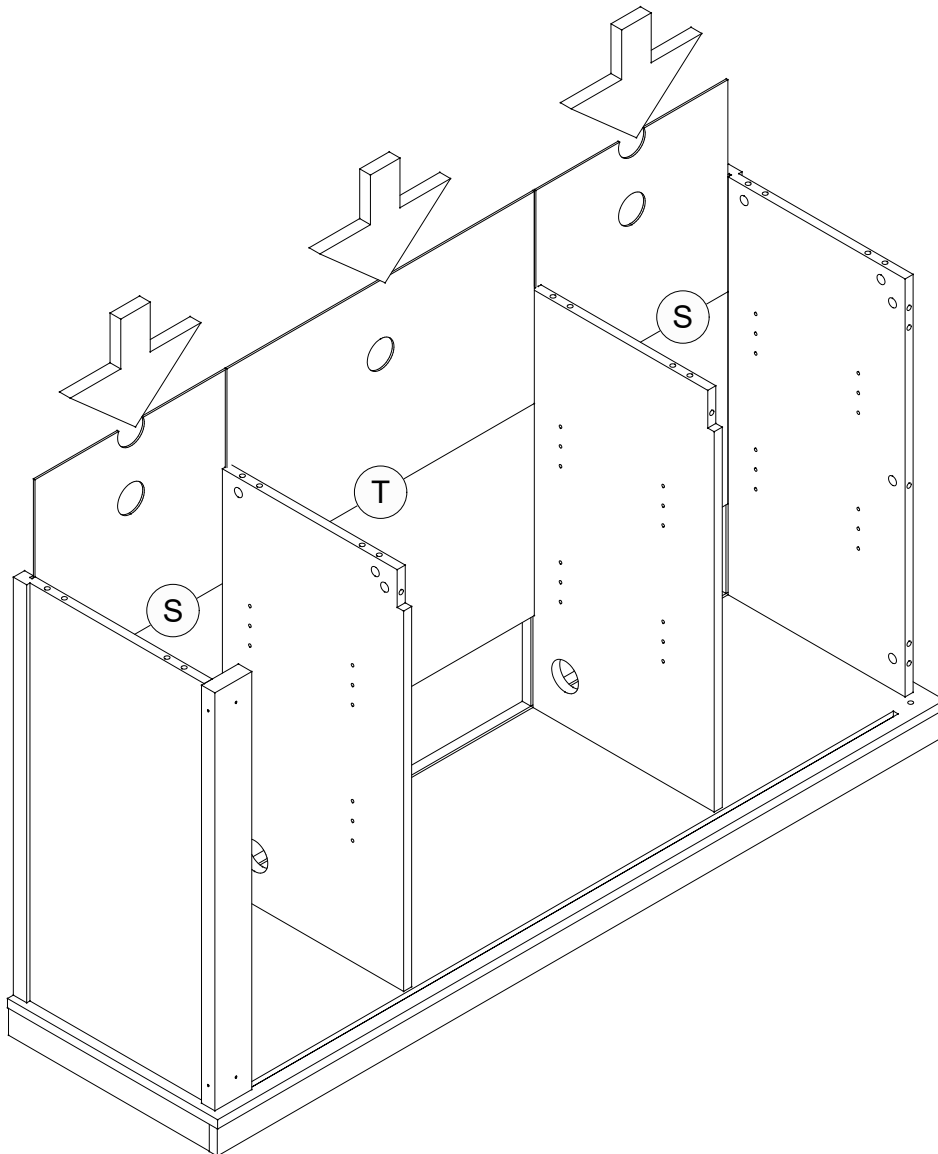


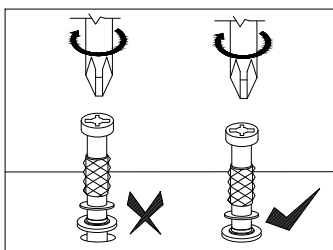
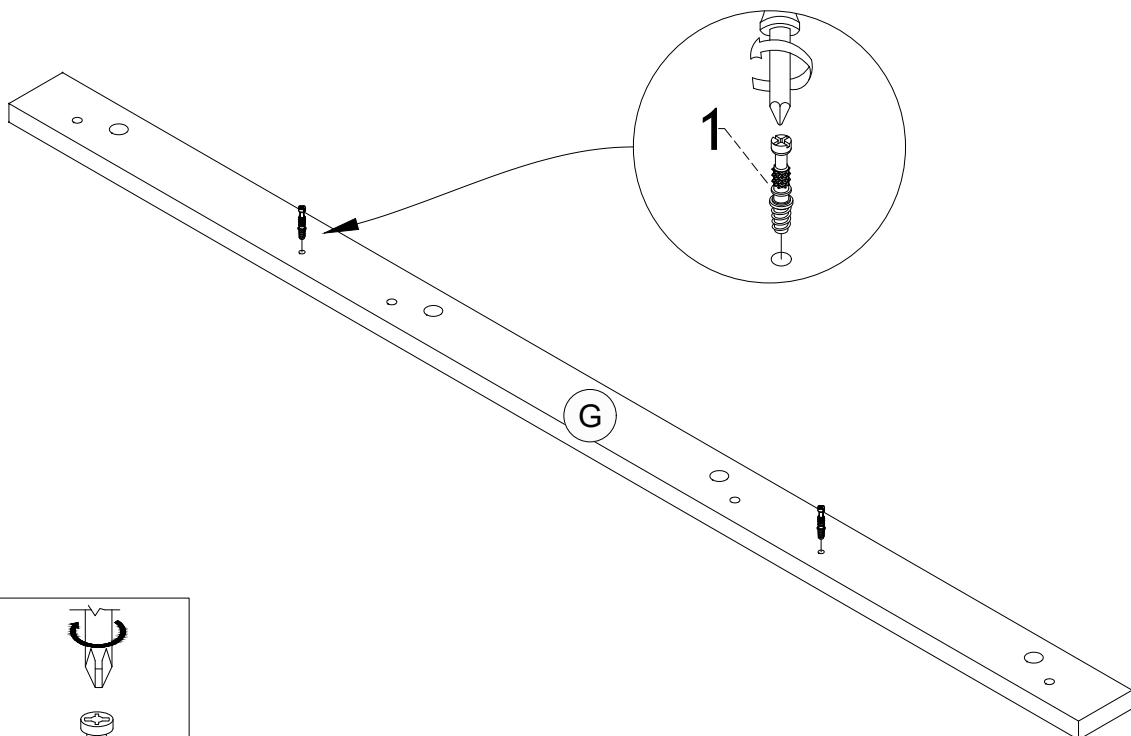
STEP 12

12  24 pcs

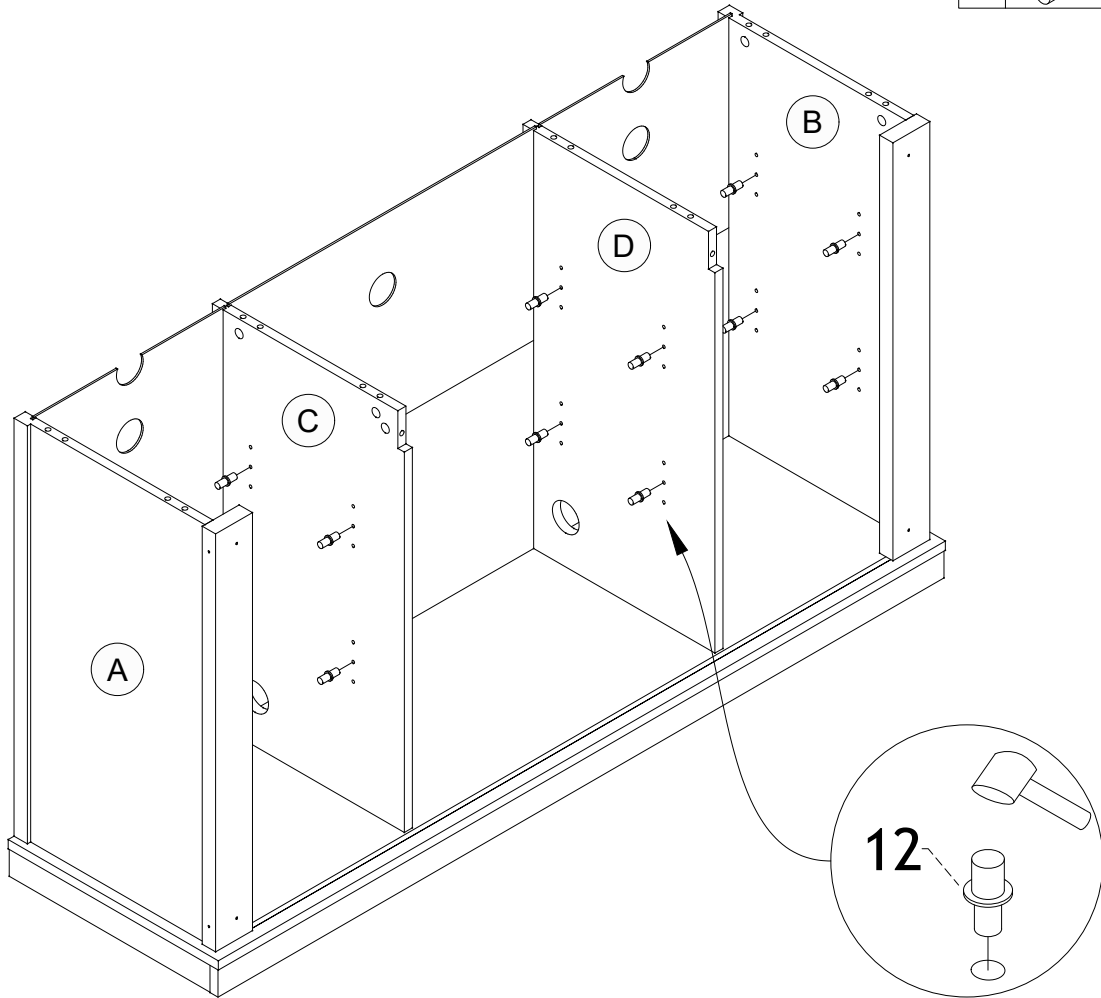


STEP 13


1  2 pcs






STEP 14

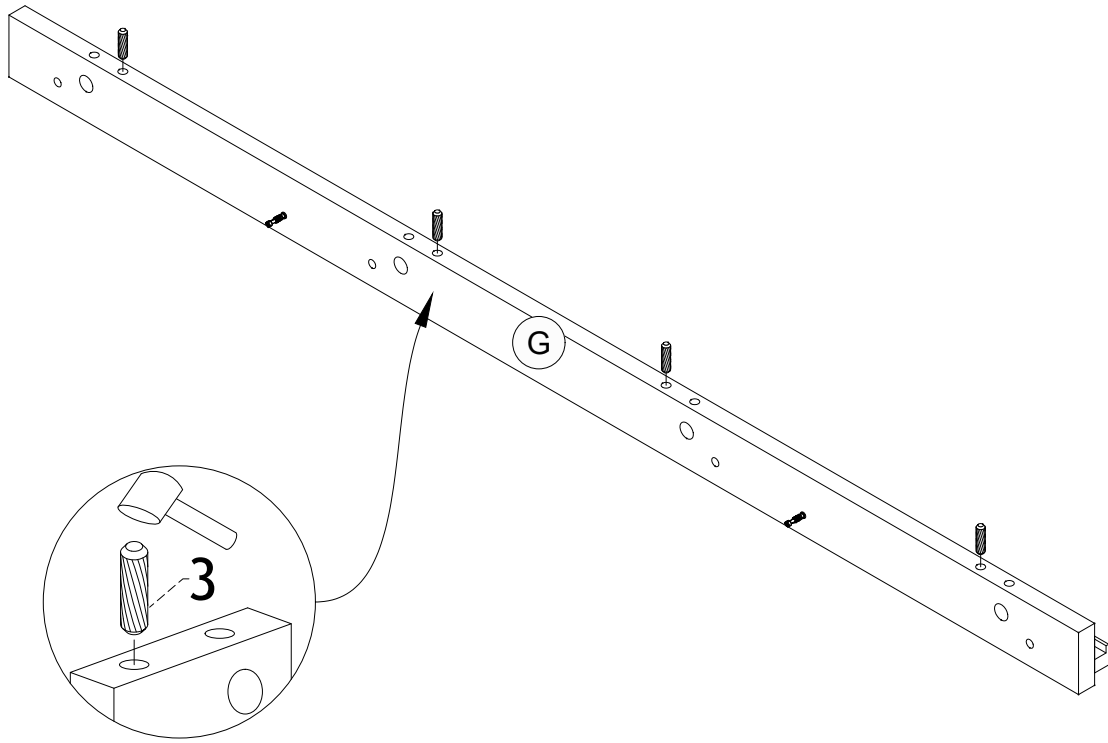



3		4 pcs
---	--	-------





STEP 15

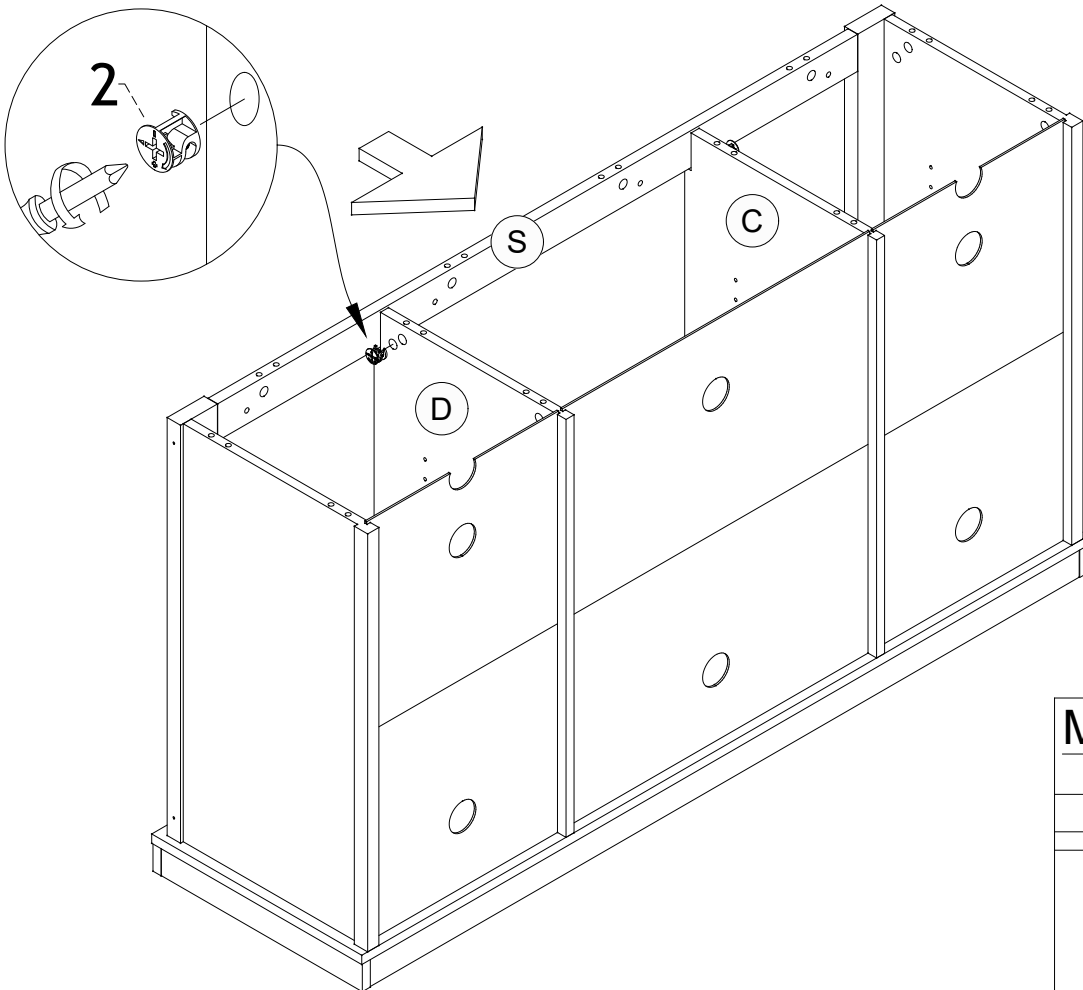
2		2 pcs
---	---	-------



<b>Minifix Setup :</b>	
	
	STEP 1 UNLOCK
	STEP 2
	STEP 3 LOCK

STEP 16


1		4 pcs
3		4 pcs

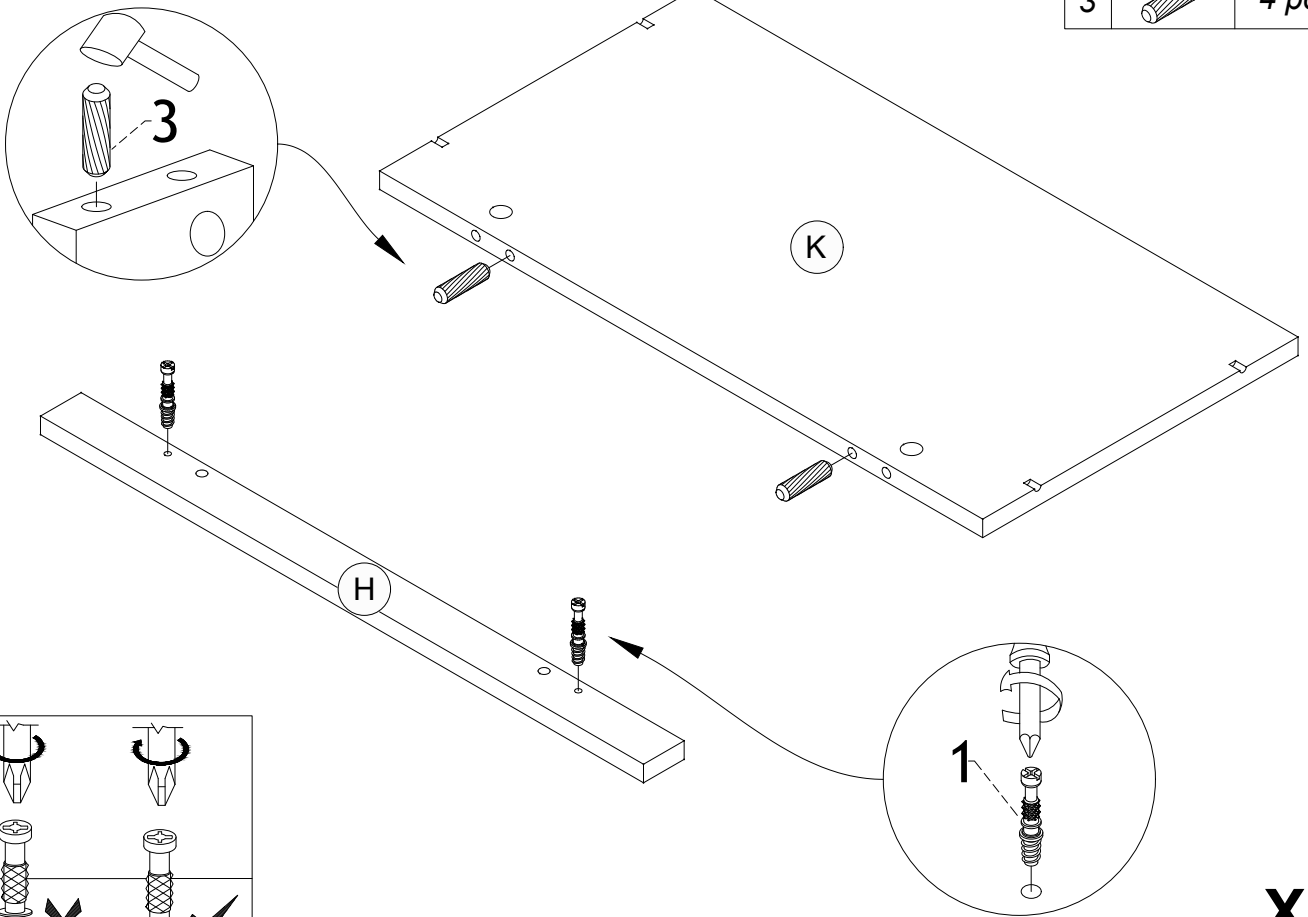





**X2**

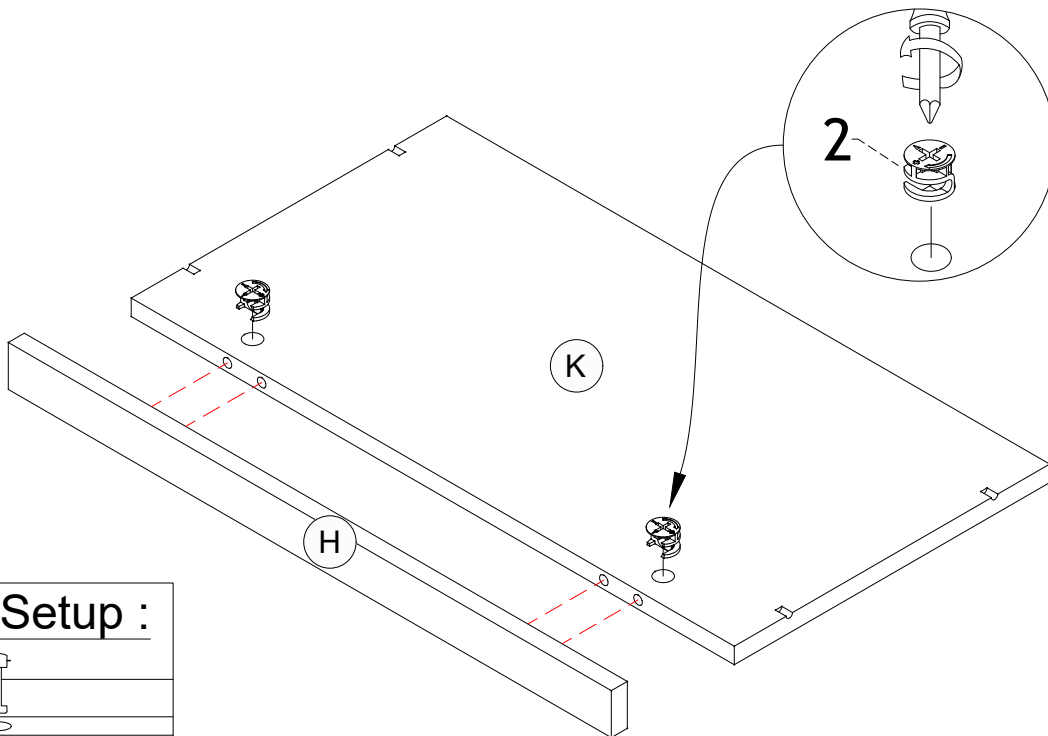STEP 17

2		4 pcs
---	---	-------




**Minifix Setup :**


	
	STEP 1 UNLOCK
	STEP 2
	STEP 3 LOCK






**X2**

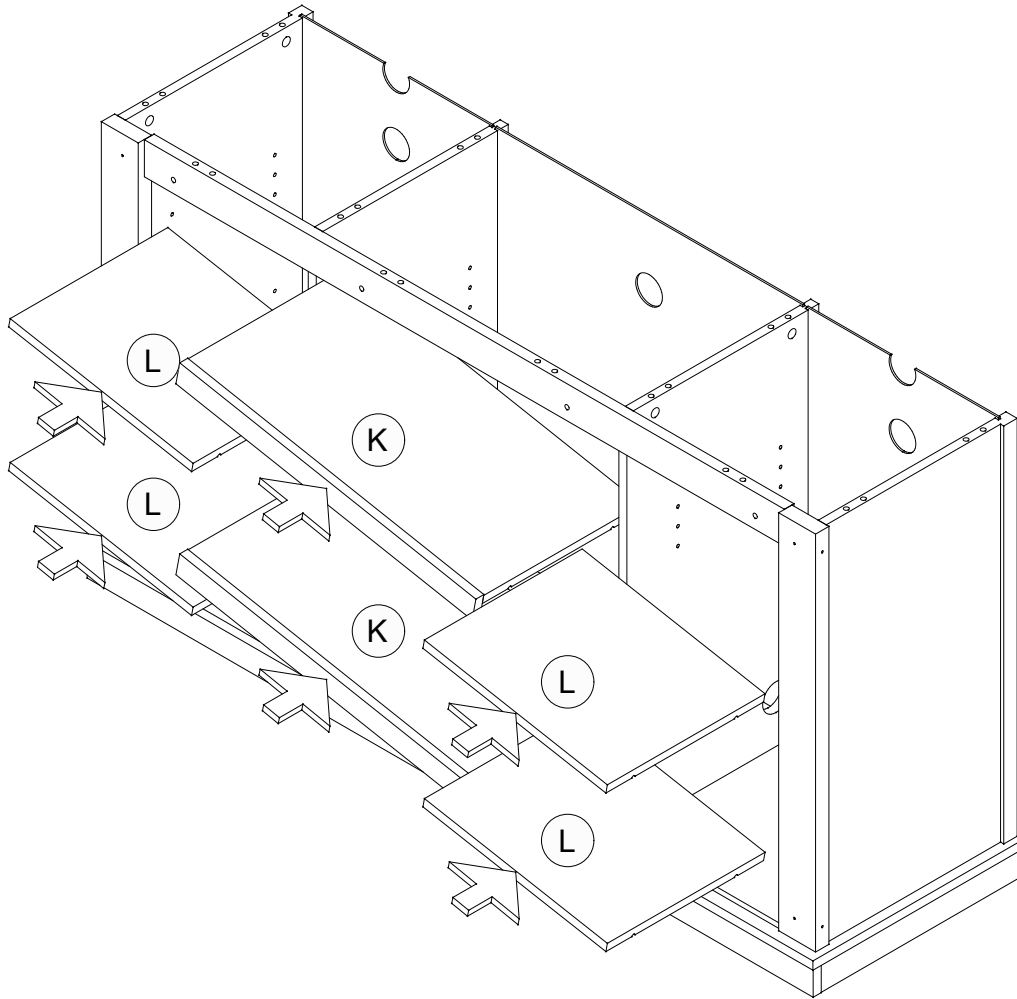**STEP 18**



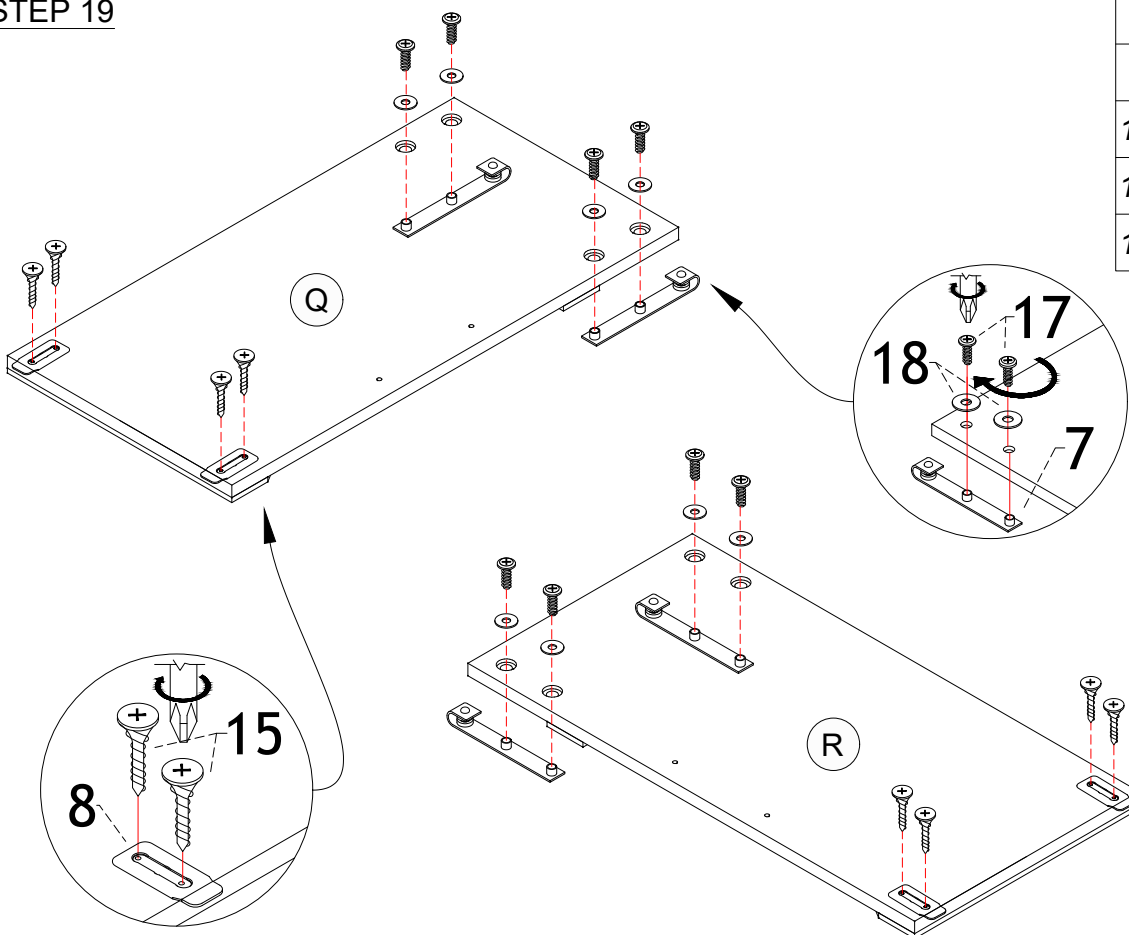


**STEP 19**




7		4 pcs
8		4 pcs
15		8 pcs
17		8 pcs
18		8 pcs

STEP 20

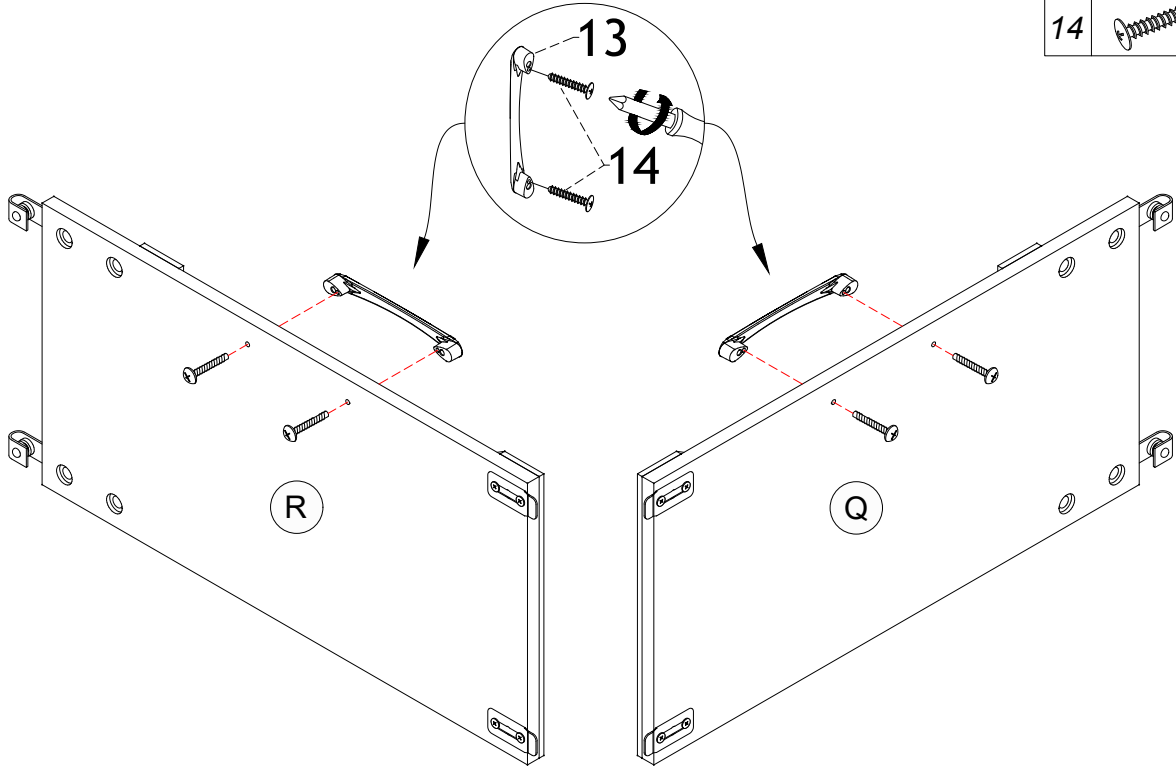


13		2 pcs
14		2 pcs

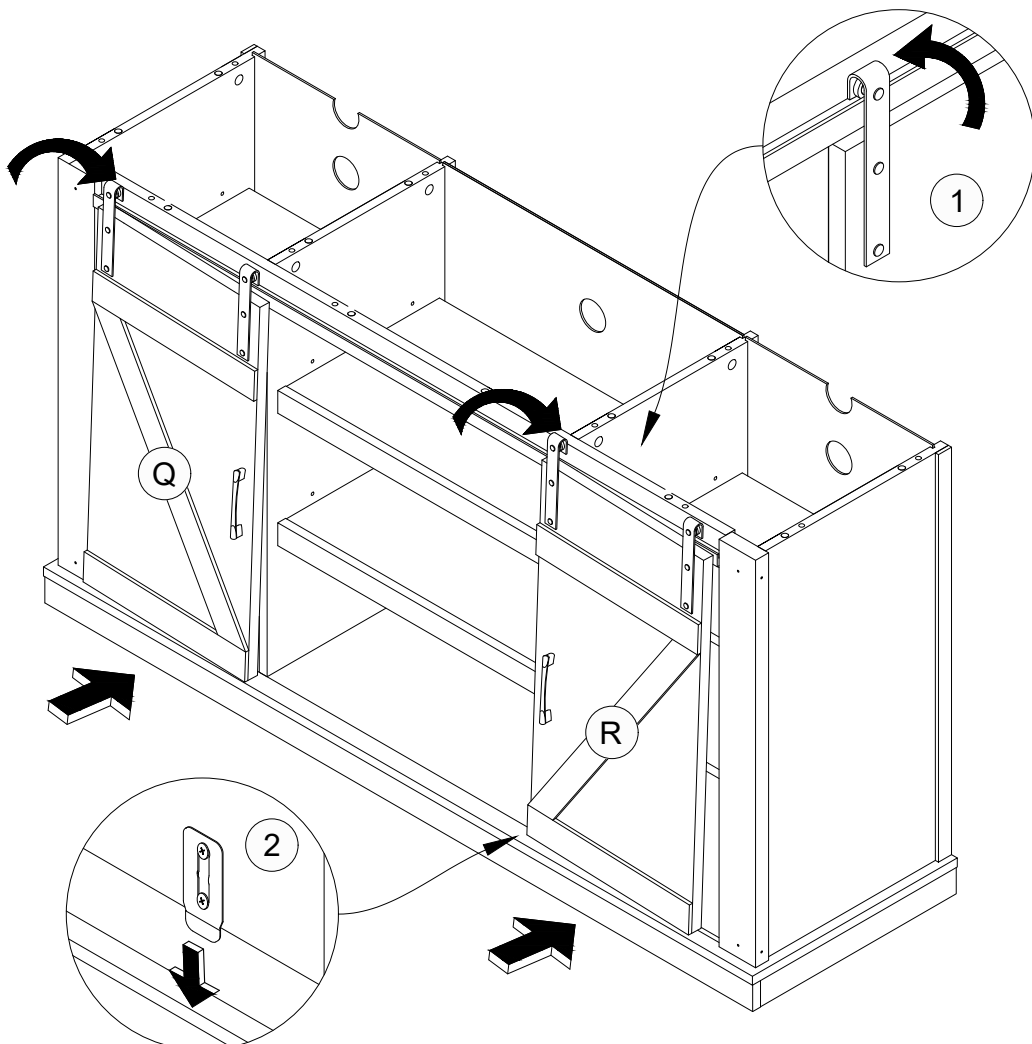


STEP 21




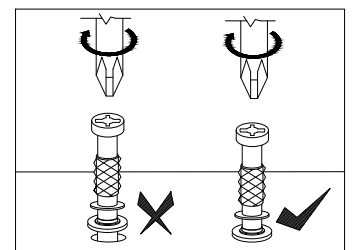
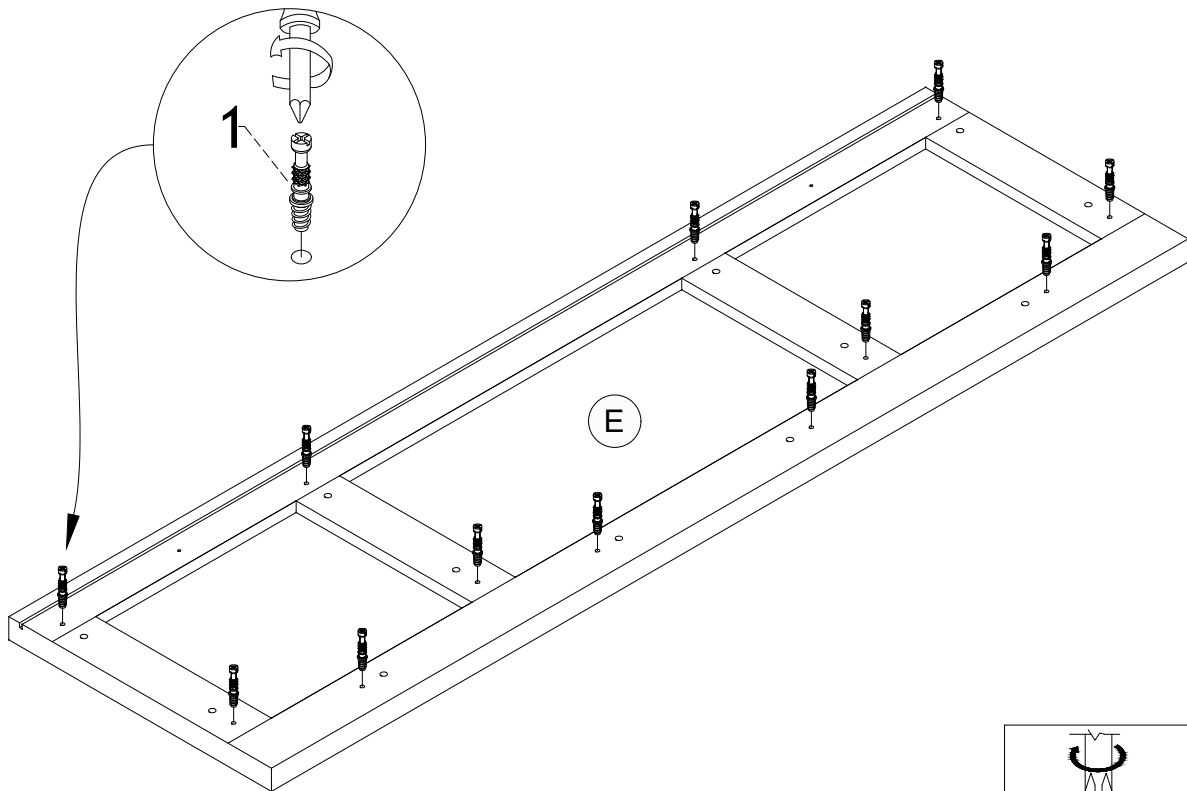
STEP 22

20		2 pcs
21		2 pcs
22		2 pcs

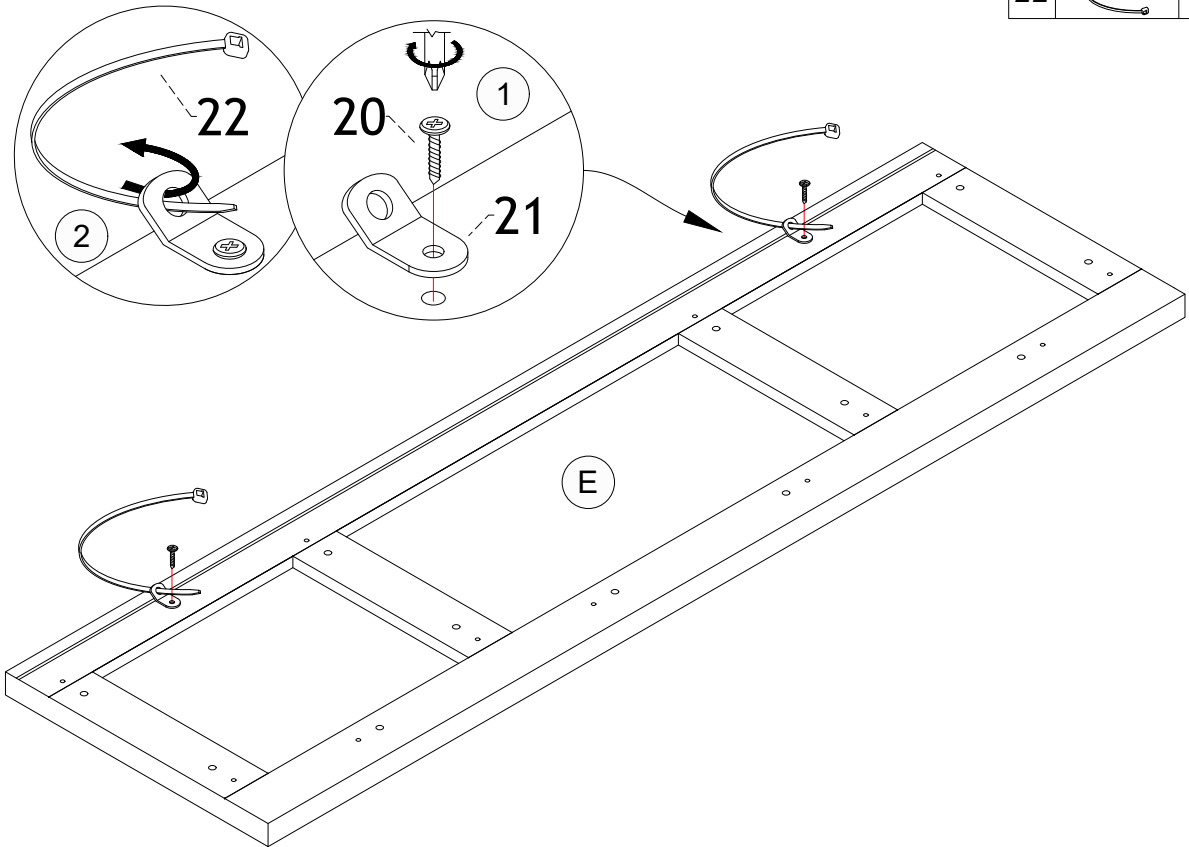



STEP 23

1		12 pcs
---	---	--------






STEP 24

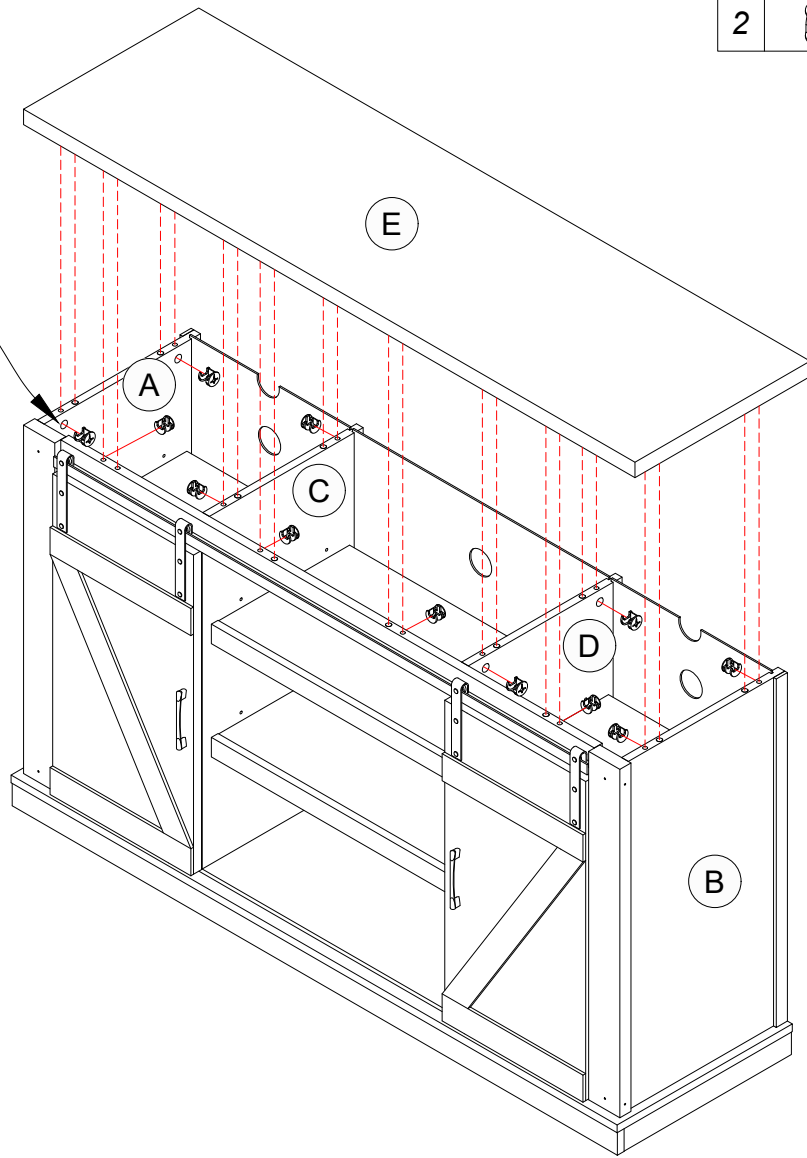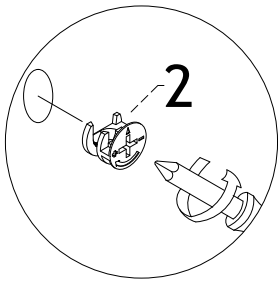2		12 pcs
---	--	--------








Minifix Setup :





-  STEP 1  
UNLOCK
-  STEP 2
-  STEP 3  
LOCK


STEP 25

5		4 pcs
6		8 pcs

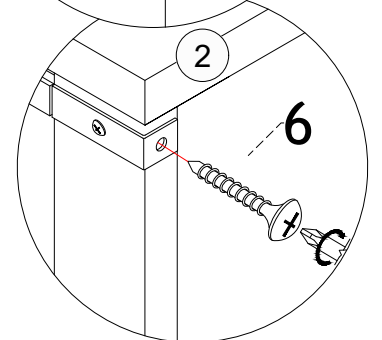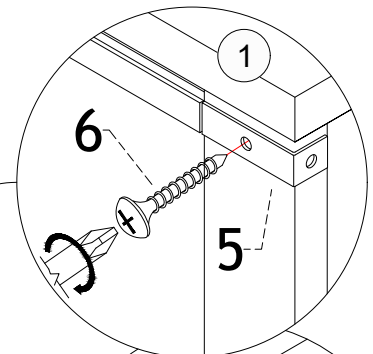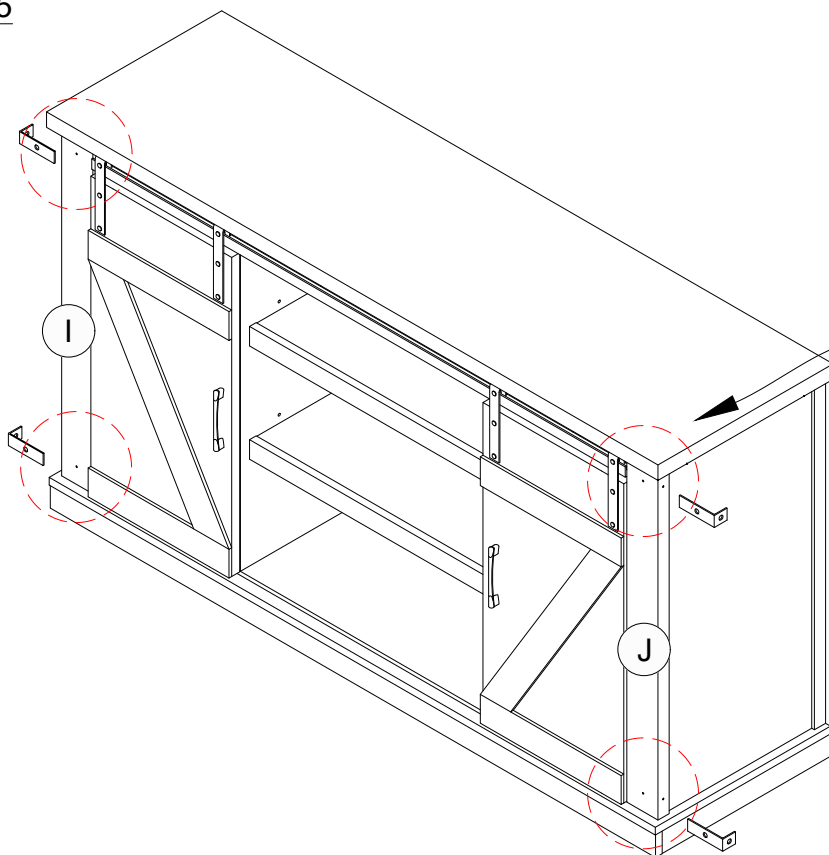


STEP 26





10		8 pcs
11		8 pcs

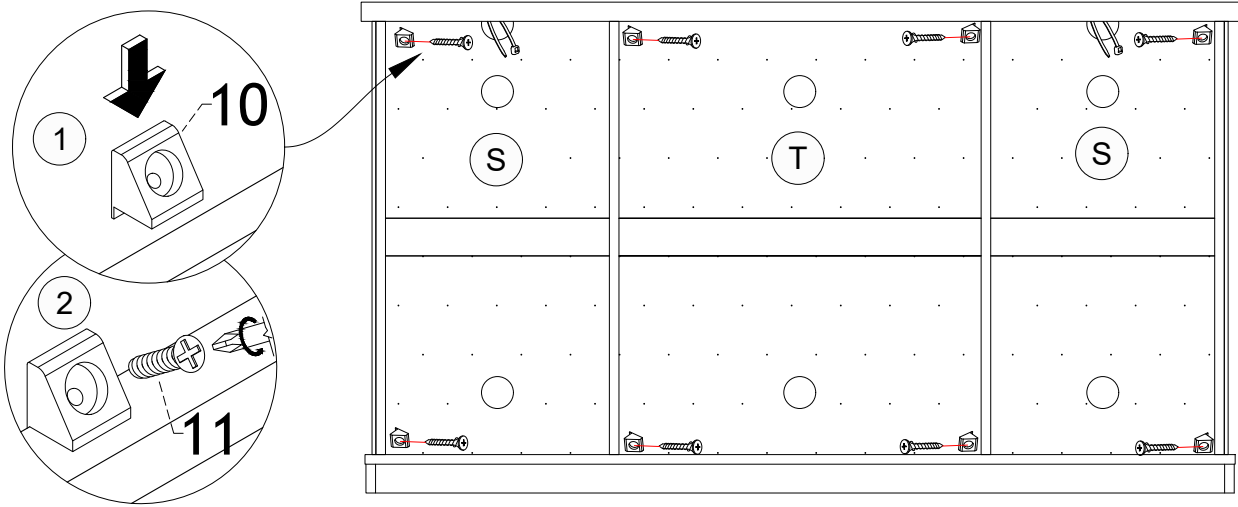

STEP 27

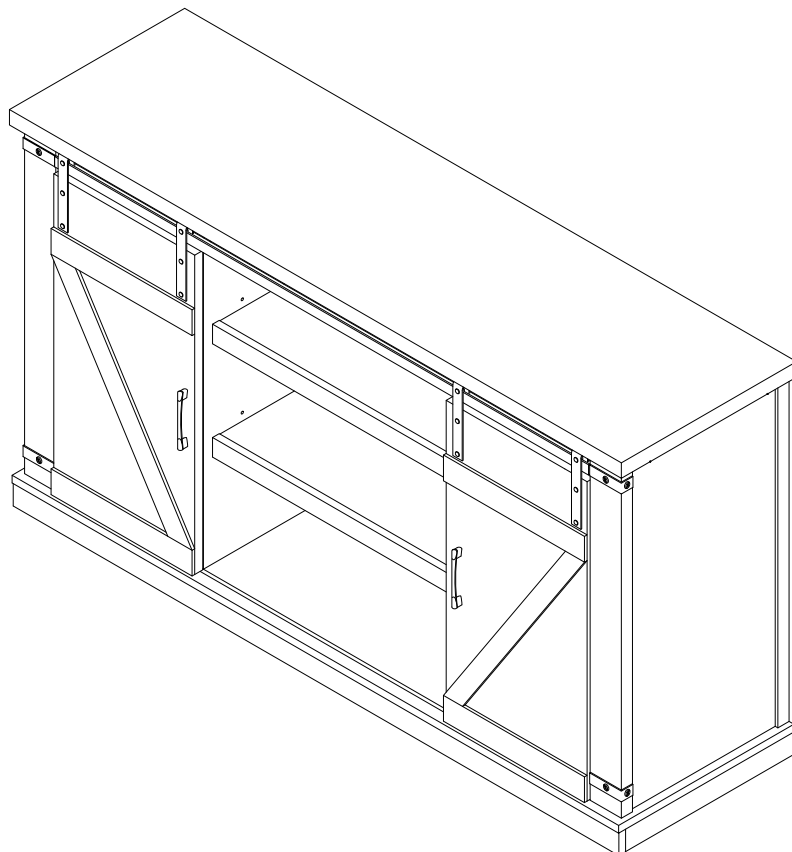




**⚠ WARNING ⚠**  
**AVERTISSEMENT / ADVERTENCIA**

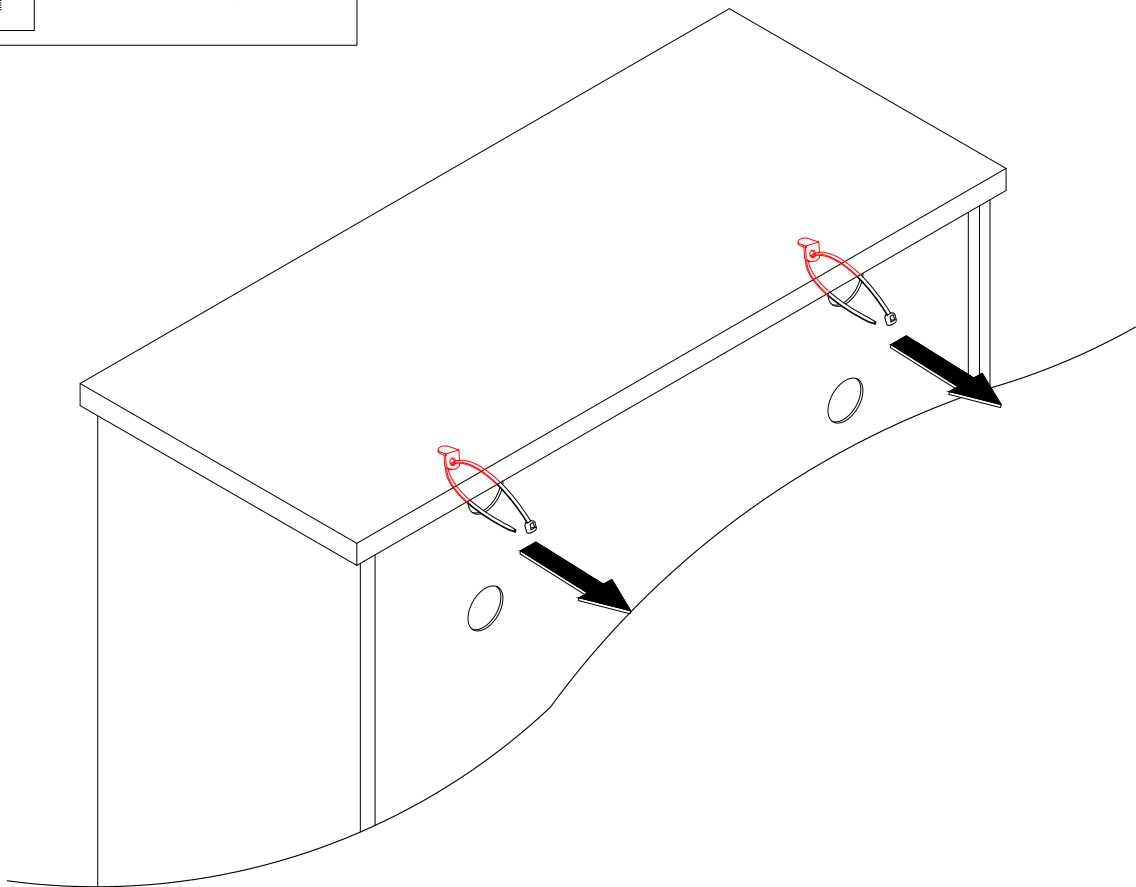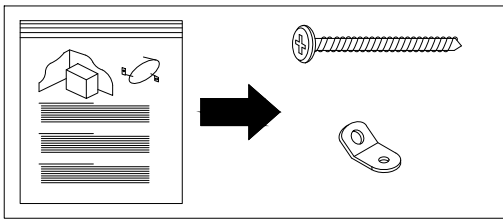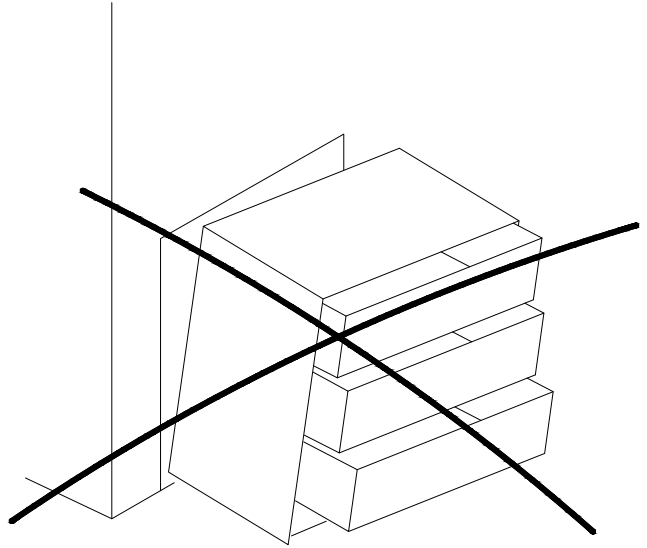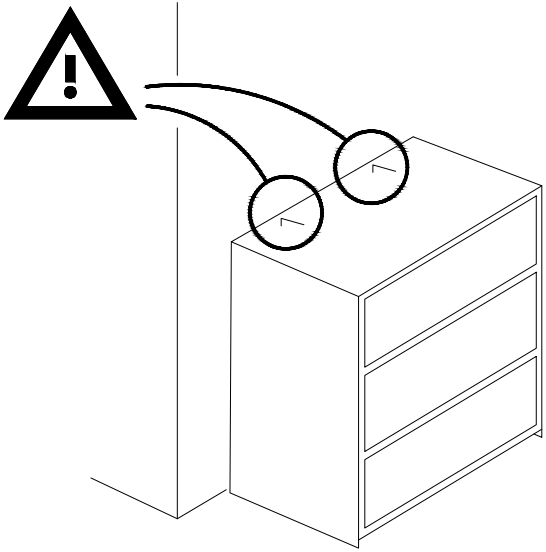



- Move the furniture unit to its final position to the wall.
- Locate a stud in the wall behind the unit. Does not have to be centered.

19		2 pcs
21		2 pcs

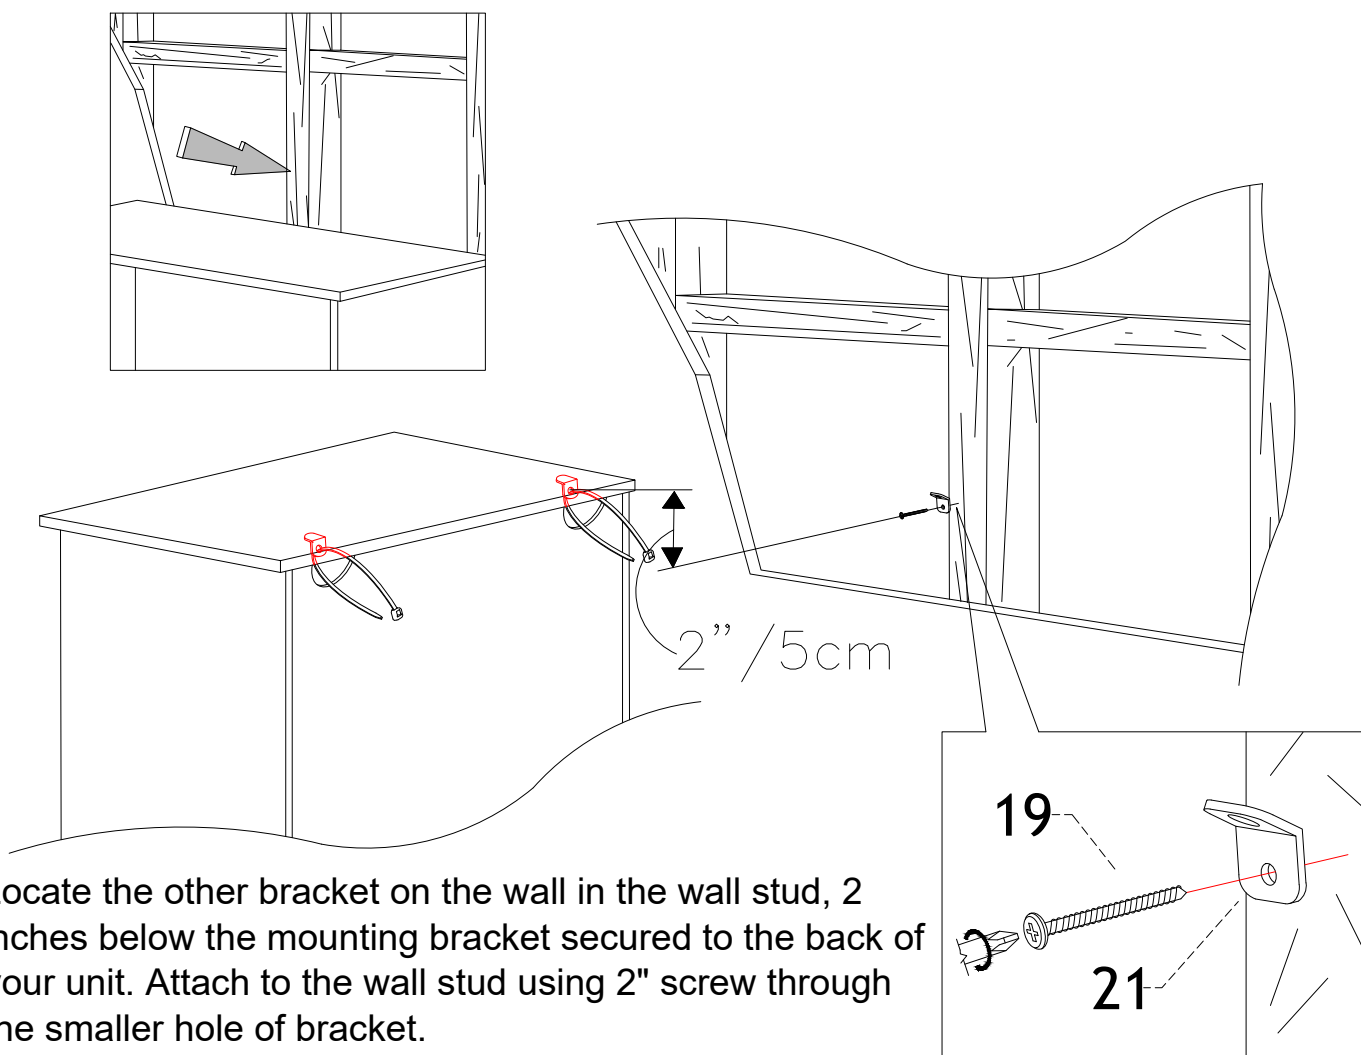

Locate the other bracket on the wall in the wall stud, 2 inches below the mounting bracket secured to the back of your unit. Attach to the wall stud using 2" screw through the smaller hole of bracket.

Place the furniture into position so both mounting brackets are vertically in line. Lace the end of the restraint strap through the larger hole in each mounting bracket. Confirm that the strap is securely laced and locked.

