


## Installation process for placing crystals into the fireplace

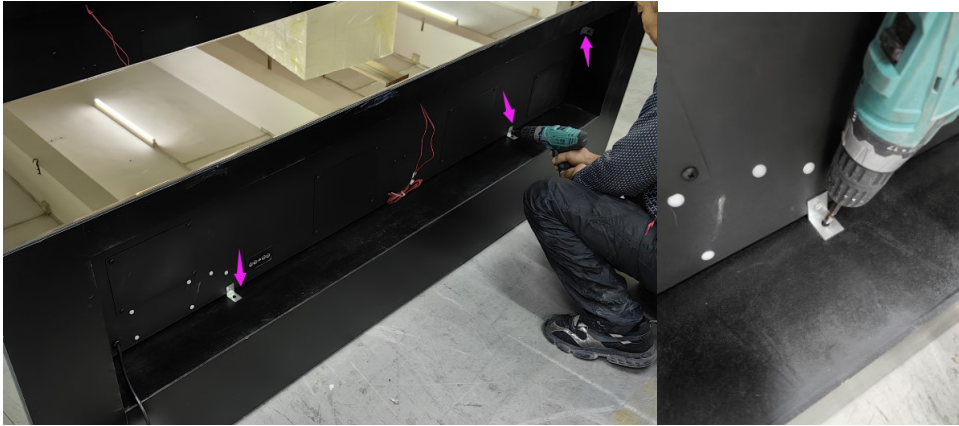

1. Unscrew the screws from the back of TV cabinet



2. Take out the fireplace core from the front of the TV cabinet



3. Unscrew all the screws on the fireplace core frame



4. Remove the side strip



5. Slide the front glass to the right and put the pack of stones inside the fireplace core, and then slide the front glass back into place.



6. Replace the side strip on and tighten the screws



7. Put the fireplace core into the TV cabinet, and then tighten the screws from the back of TV cabinet