


Part # OFC-AC-MSTR XX

20-0213

PARTS

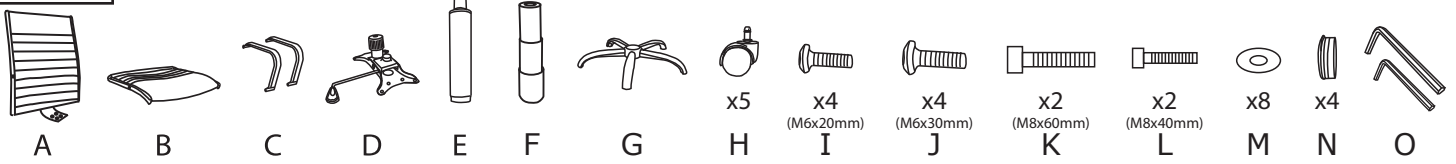

1

REMOVE BLACK CAP AND THROW AWAY

2

80% tighten

3

100% tighten

4

5

6

SIT TO SECURE



Do not over tighten.
Do not use power tools to assemble.