













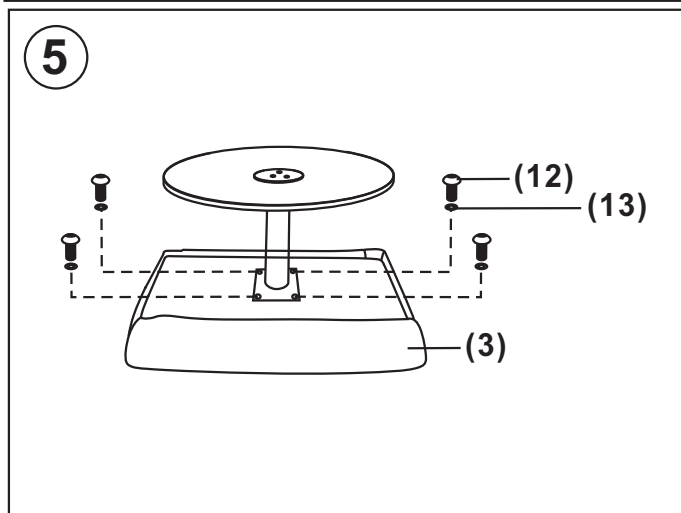
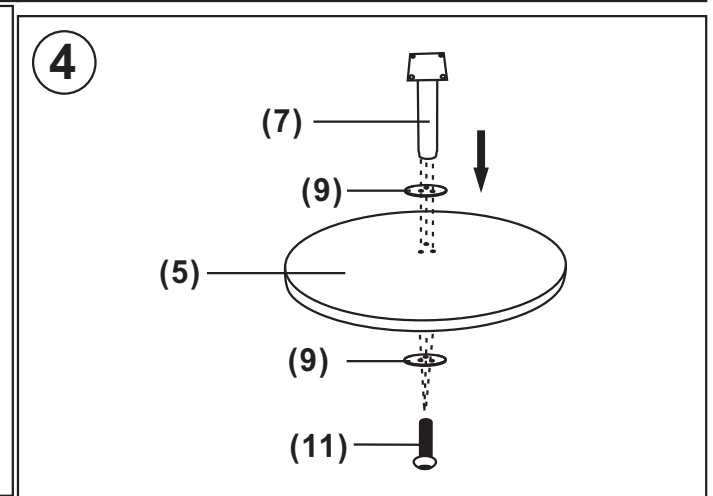
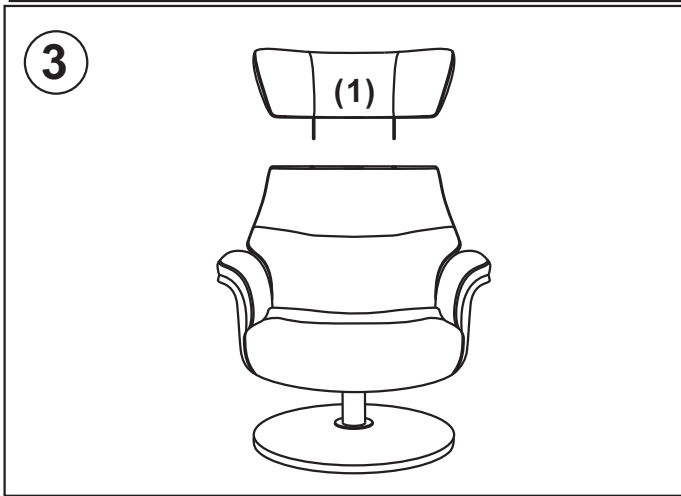
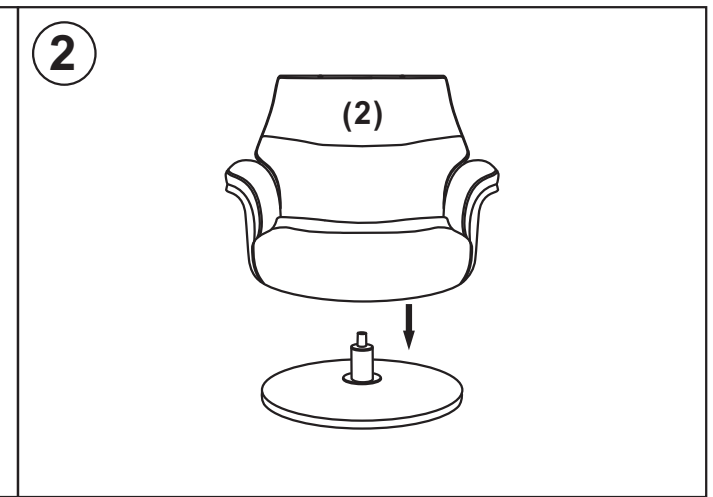
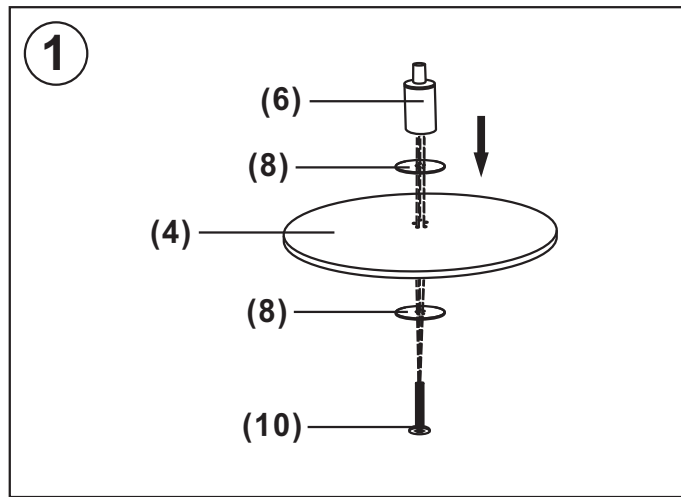


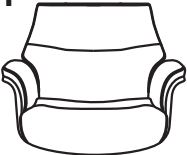

<p>(1)X1</p>  <p>U1 headrest</p>	<p>(8)X2</p>  <p>M8 plate</p>
<p>(2)X1</p> <p>U2a back U2b seat U2c arm frame</p> 	<p>(9)X2</p>  <p>M9 plate</p>
<p>(3)X1</p>  <p>U3 ottoman cushion</p>	<p>(10)X5</p>  <p>M10 bolt</p>
<p>(4)X1</p>  <p>M4 chair base</p>	<p>(11)X3</p>  <p>M11 bolt</p>
<p>(5)X1</p>  <p>M5 ottoman base</p>	<p>(12)X4</p>  <p>M12 bolt</p>
<p>(6)X1</p>  <p>M6 center column</p>	<p>(13)X4</p>  <p>M13 washer</p>
<p>(7)X1</p>  <p>M7 ottoman frame support</p>	<p>(14)X1</p>  <p>M14 allen washer</p>

M10-14 hardware kit



6

ComfordChair

#729