


MOE'S

home collection

ASSEMBLY INSTRUCTIONS.

NOVA 3 DRAWER CHEST

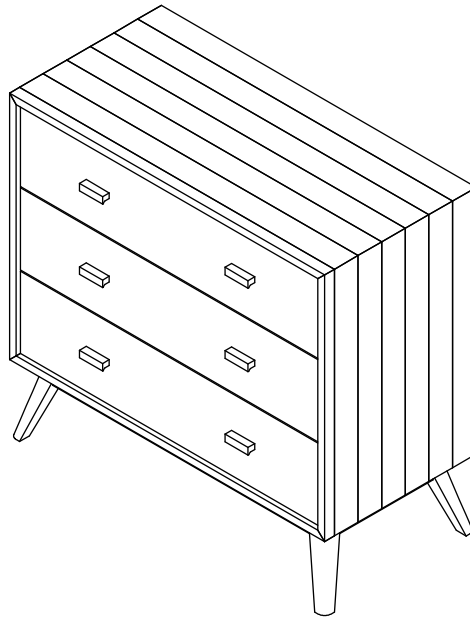

FR-1034-02








THANK YOU FOR YOUR PURCHASE!

PARTS AND HARDWARE.

PARTS LIST

NO.	DESCRIPTION	IMAGE	Q'TY
P1	CABINET		1
P2	LEGS		4

HARDWARE LIST


NO.	DESCRIPTION	IMAGE	Q'TY
H1	BOLT M8x60		8
H2	SPRING WASHER M8		8
H3	WASHER M8		8
H4	SPANNER 13MM		1
H5	ANTITIP KIT		1

NOTES.


Thank you for purchasing this quality product! Be sure to check all packing material carefully for small part that may have come loose inside the carton during shipping.

CAUTION: The item is heavy, assembly should be performed by two people.

STEP 1.

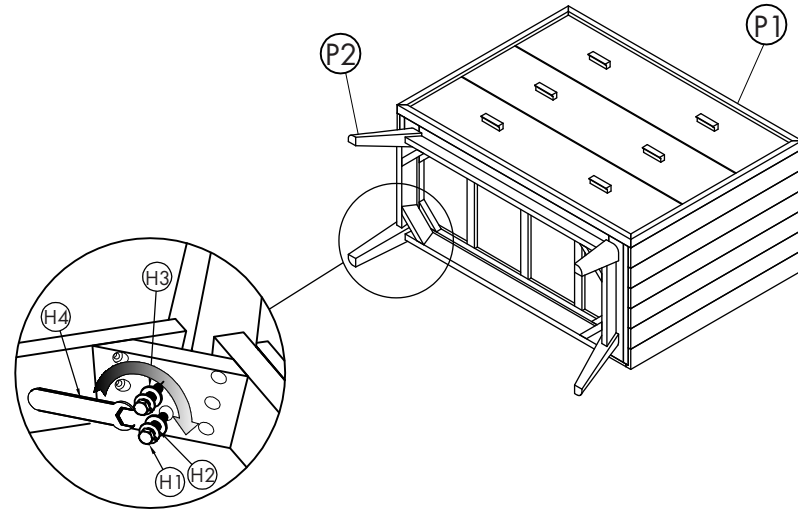

STEP 2.

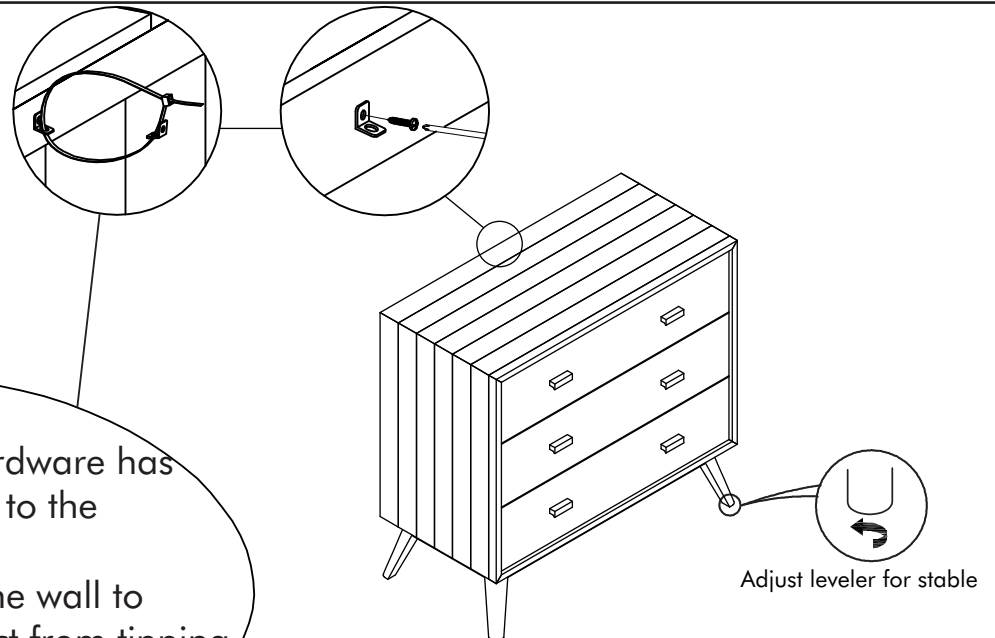

Anti Tip Kit hardware has been attached to the product.
Pls, install to the wall to prevent product from tipping