
ASSEMBLY INSTRUCTIONS SKU - #477-S

meridian.

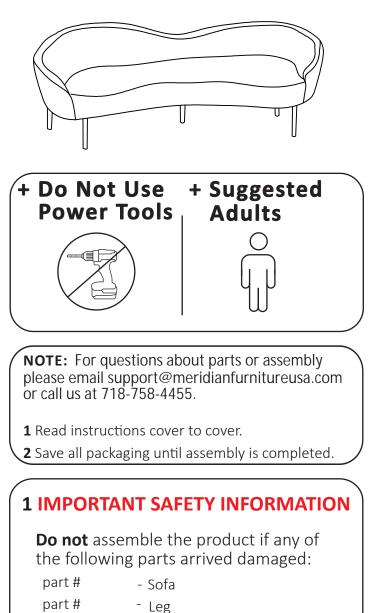

Do not assemble if any of the following Hardware parts are missing:

part # - Allen wrench part # - Bolt M8*25mm part # - Washer M8*16mm

2 IMPORTANT ASSEMBLY INFORMATION

Assembly Step If loosening persists, please make sure to tighten all the bolts periodically, or use a thread locker adhesive.

