

## ASSEMBLY INSTRUCTIONS


901 / 902 / 903 - C

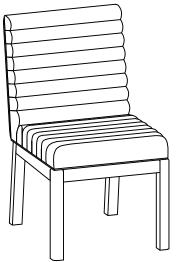

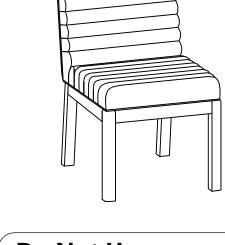





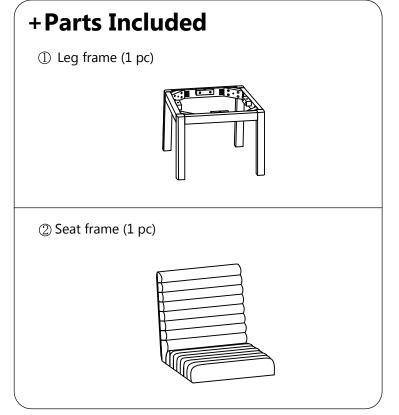

**NOTE**: For questions about parts or assembly please email support@meridianfurnitureusa.com or call us at 718-758-4455.

- 1 Read instructions cover to cover.
- **2** Save all packaging until assembly is completed.

#### 1 IMPORTANT SAFETY INFORMATION

**Do not** assemble the product if the parts arrived damaged.

**Do not** assemble if Hardware parts are missing.

#### 2 IMPORTANT ASSEMBLY INFORMATION

Assembly Step If loosening persists, please make sure to tighten all the bolts periodically, or use a thread locker adhesive.

### +Parts Included

A. Bolt Ø8x45mm (4 pcs)



B. Spring Washer Ø8xØ13mm (4 pcs)



C. Flat Washer Ø8xØ19mm (4 pcs)



D. Allen Key (1 pc)



# **ASSEMBLY INSTRUCTIONS**

meridian.

901 / 902 / 903 - C

