
### ASSEMBLY INSTRUCTION

Lucia Bed- K

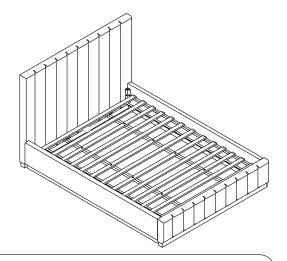



#### + Do Not Use Power Tools



# +Suggested Adults



**NOTE**: For quetions about parts or assenbly please email supports@meridianfurnitureusa.com or call us at 818-758-4488

- 1 Read instructions cover to caver.
- 2 Save all packaging until assembly is completed.

### +Parts Included 1 Headboard 2 Footboard (1pc) (1pc) (4) Center slat support (3) Wood strip for (2pcs) Side rail (2pcs) 5 Side rail 6 Slats (2pcs) (13pcs) 7 Center leg 8 Wood Block on Headboard & Footboard (8pcs) (4pcs)

#### 1 IMPORTANT SAFETY INFORMATION

**Do not** assemble the product it any of the following parts arrived damaged:

Part#1 -Headboard Part#7 -Center leg

Part#2 -Footboard

Part#3 -Wood strip for Side rail

Part#4 -Center slat support


Part#5 -Side rail Part#8 -Wood Block on Part#6 -Slats Part#8 Footboard

**Do not** assemble it any of the following Hardware parts are missing:

Part#B,E, -Bolt Part#D, -Lock wassher Part#A, -Allen Key Part#G -Metal bracket Part#C.H -Flat washer Part#F -screw

#### 2 IMPORTANT SAFETY INFORMATION

**Assembly** Step if loosening persists, please make sure to tighten all the bolts periodically, or use a thread locker adhessive.

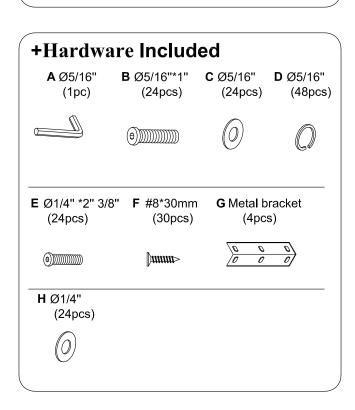


### **ASSEMBLY INSTRUCTION**


Lucia Bed- K




Step 1. Attach Metal Bracket (G) to side rail (#5),Headboard (#1) and Footboard (#2) with Bolt (B), Lock washer (D) and Flat washer (C) .Tighten with Allen Key (A).

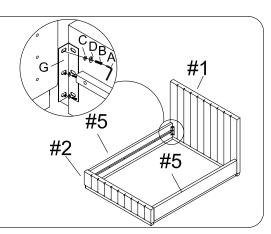


Step 2. Attach Wood strip for Side rail (#3) to side rail (#5) with Bolt (E), Lock washer (D) and Flat washer (H) .Tighten with Allen Key (A).

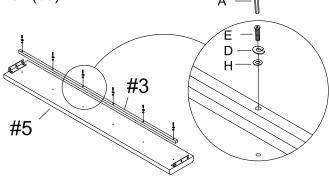

Step 3. Attach Wood Block on (#8) to Headboard (#1) and Footboard (#2) with Bolt (E), Lock washer (D) and Flat washer (H) .Tighten with Allen Key (A).

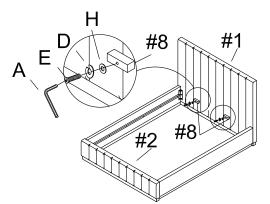

Step 4. Attach Middle surport rail of Slats (#4) to Headboard (#1) and Footboard (#2) with Screw(F).

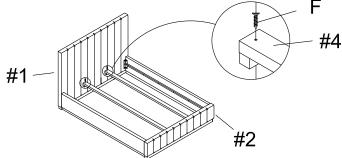


NOTE: For question aboout parts or assembly please email support@meridianfurnitureusa.com or call us at 718-758-4455


## **ASSEMBLY INSTRUCTION**





Step 5. Attach Center leg (#7) to Middle surport rail (#4) and Slats (#6) with Bolt (E), Lock washer (D) and #6 Flat washer (H) .Tighten with Allen Key (A).

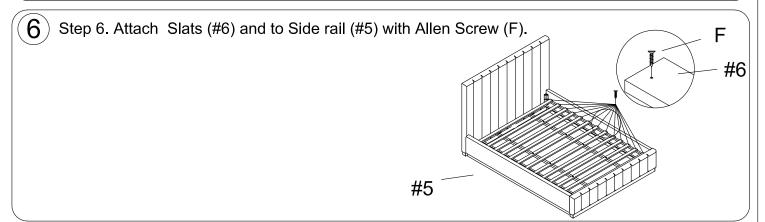

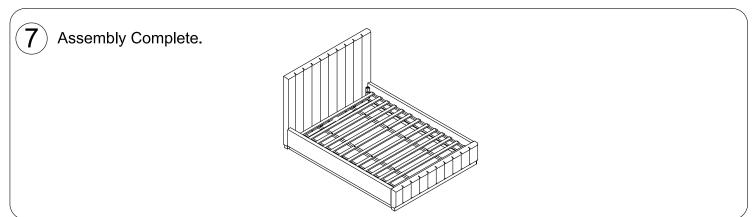

NOTE: For question aboout parts or assembly please email support@meridianfurnitureusa.com or call us at 718-758-4455