



ASSEMBLY INSTRUCTIONS

B1655-115 OBSIDIAN 5/6-6/0 EK/WK HEADBOARD, FOOTBOARD & SLATS
B1655-235 OBSIDIAN 6/0 WK SIDE RAILS


Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts, which may have come loose inside the carton during shipment. Identify and count all items and compare with the parts list and/or hardware list shown.

PARTS LIST


NO	COMPONENT	DRAWING	QTY
A	Headboard		1 pc
B	Footboard		1 pc
C	Headboard Right Side Facing (RSF) Leg		1 pc
D	Headboard Left Side Facing (LSF) Leg		1 pc
E	Slat		4 pcs
F	Slat Support Leg		8 pcs
G	Side Rail		2 pcs
H	Headboard Stretcher		1 pc

HARDWARE LIST


NO	COMPONENT	DRAWING	QTY
1	JCBC M6 x 1 3/16" Blk		6 pcs
2	Spring Washer 1/4" Blk		6 pcs
3	Flat Washer 1/4"IDx4/8"OD Blk		6 pcs
4	Allen Key M4 x 2 9/16" Blk		1 pc
5	Allen Key M5 x 2 9/16" Blk		1 pc
6	Pan Head Chipboard Screw M3.5 x 5/8"mm Blk		12 pcs

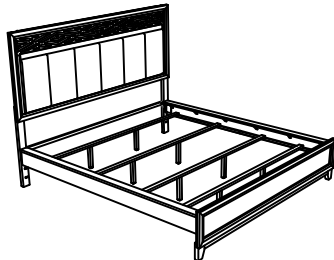

STEP 1 : Attach Head Board Leg (C & D) to Head Board (A) as shown using JCBC BOLT (1) with Spring Washer (2), Flat washer (3) and securing with Allen Key (4).

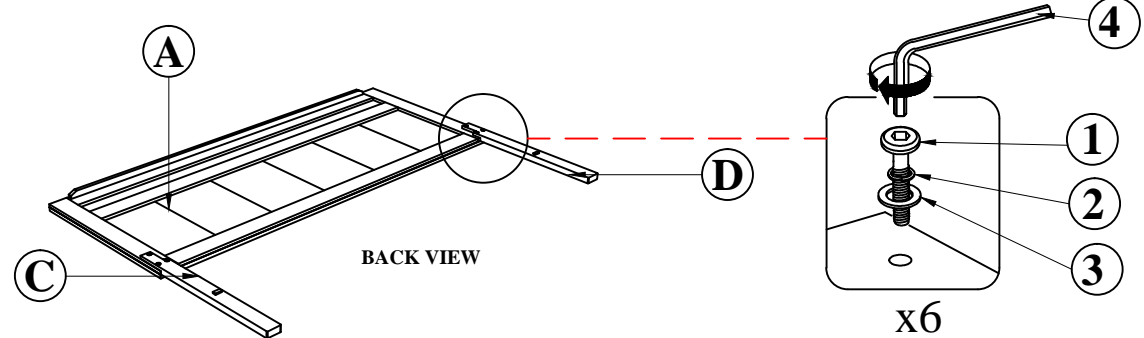


STEP 2 : Assemble Headboard Stretcher (H) to Headboard Legs (C & D) by using a screwdriver with Csk Screw (6).

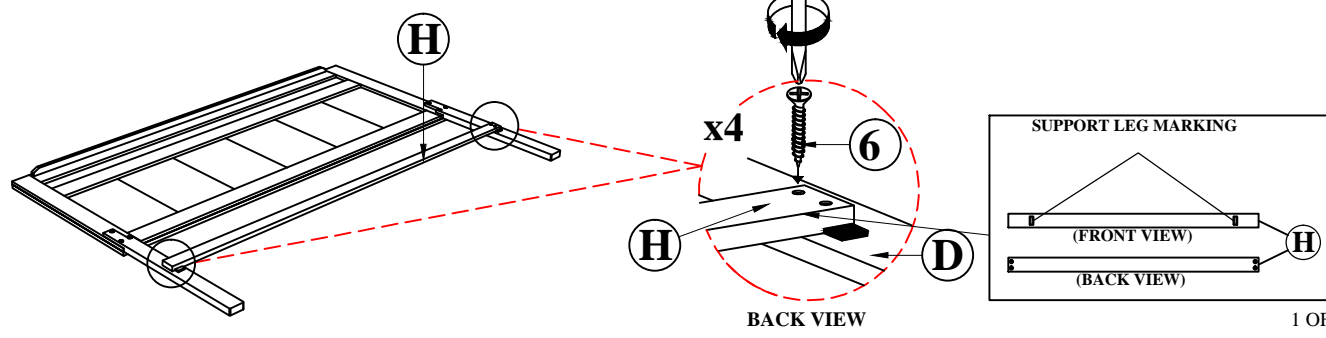


NOTE : MUST TIGHTEN SCREWS PERIODCALLY WITH USE SCREW WILL BECOME LOOSE CHECK TIGHTNESS OF ALL SCREW EVERY 6-8 WEEKS.

STEP 3 : Hook side rail (G) to Headboard legs (C & D) and push it down to fit. Repeat with the other end of rail to hook onto Footboard (B). Tighten the 4 corners with Allen Key (5)


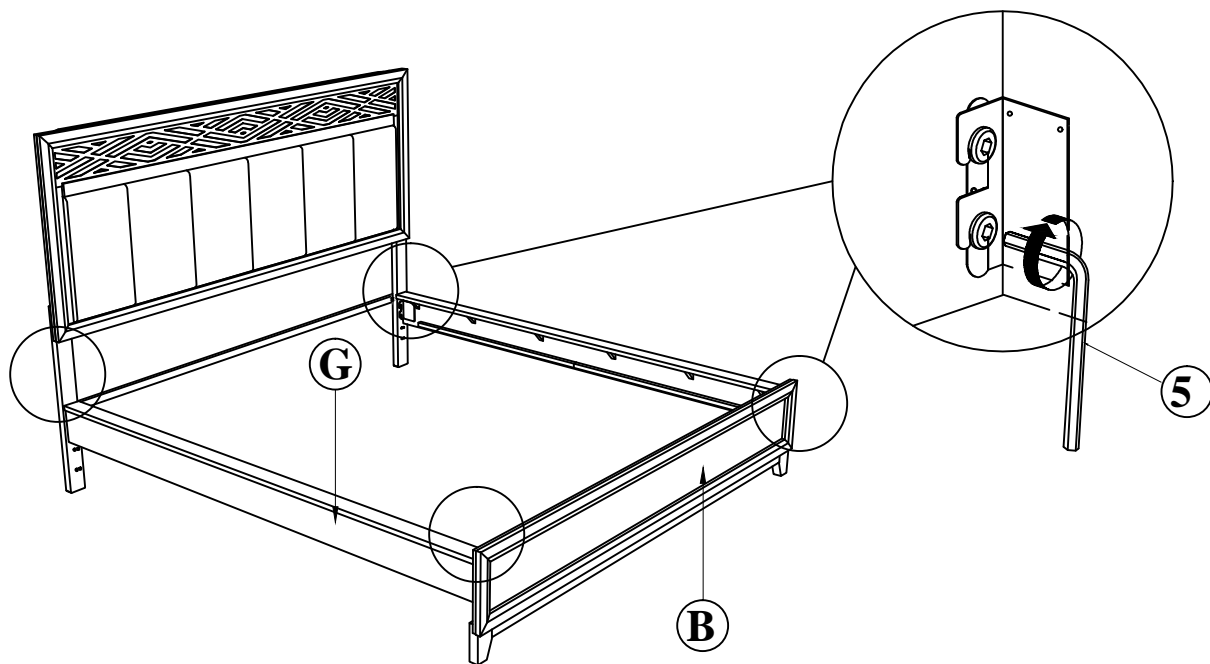


STEP 4 : Install the Slat support legs (F) to the Slats (E). Assemble the slats (E) to the side rails (G) by using a screwdriver with hardware (6).
(Note: THE SET UP MUST BE DONE AT THE DESIGNATED LOCATIONS FOR THE BED TO BE STABLE)

STEP 4.1 :

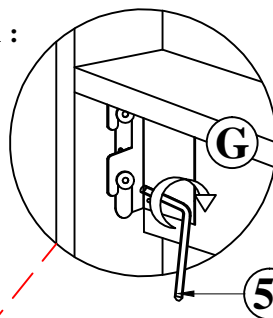


STEP 4.2 :

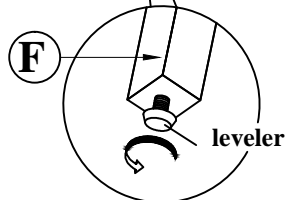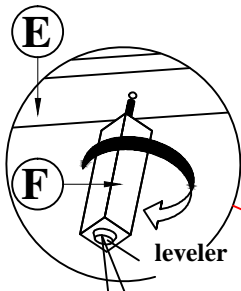

STEP 4.3 :

REMARK

Make sure adjust the L-bracket accordingly before tighten at side rail.

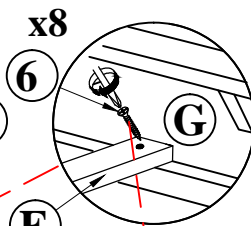

REMARK

Make sure screw in angular position