



New  
Classic®  
FURNITURE

# Assembly Instructions

B976-110 RADIANCE 6/6-6/0 K HEADBOARD

B976-310 RADIANCE 5/0 Q HEADBOARD

Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts, which may have come loose inside the carton during shipment. Identify and count all items and compare with the parts list and hardware list shown below.


PARTS LIST			
NO	DESCRIPTION	SKETCH	QTY
A	HEADBOARD		1 PC
B	LEG (LEFT)		1 PC
C	LEG (RIGHT)		1 PC
D	STRETCHER		1 PC

HARDWARE LIST			
NO	DESCRIPTION	SKETCH	QTY
1	JCBB BOLT - M8 x 1 1/2"		6 PCS
2	SPRING WASHER - M8		6 PCS
3	FLAT WASHER - M8		6 PCS
4	ALLEN KEY - M5		1 PC
5	JCBC BOLT - M6 x 2"		2 PCS
6	SPRING WASHER - M6		2 PCS
7	U WASHER		2 PCS
8	ALLEN KEY - M4		1 PC

PLACE WOOD PARTS ON A  
CLEAN NON-ABRASIVE SURFACE

**STEP 1 :** Install the STRETCHER (D) to the RIGHT LEG (C) by using the ALLEN KEY (8) with hardware (5), (6) and (7).

Repeat STEP 1 with the other end of the STRETCHER (D) to assemble the LEFT LEG (B).

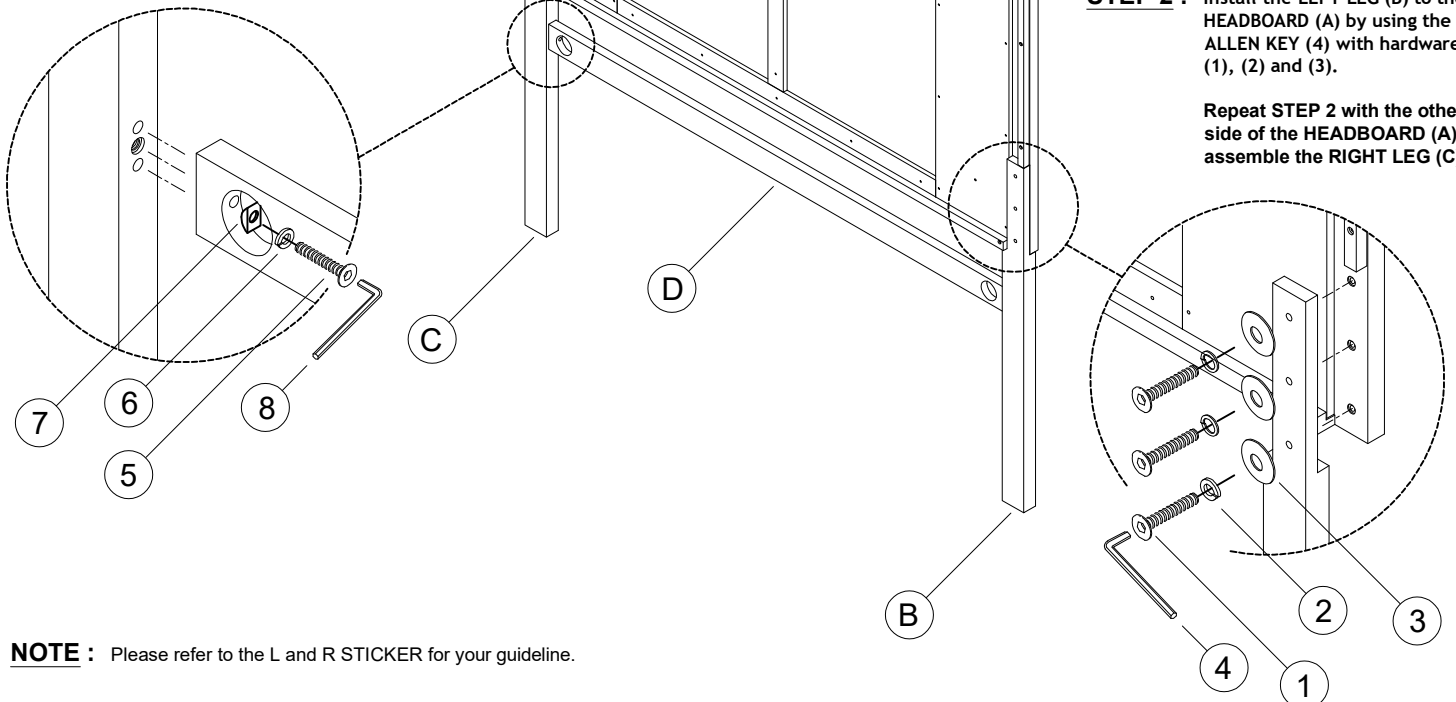

**STEP 2 :** Install the LEFT LEG (B) to the HEADBOARD (A) by using the ALLEN KEY (4) with hardware (1), (2) and (3).

Repeat STEP 2 with the other side of the HEADBOARD (A) to assemble the RIGHT LEG (C).

**NOTE :** Please refer to the L and R STICKER for your guideline.

