

Assembly Instructions

BH1040/013-510 Versailles/Belle Rose 3/3 F Headboard
BH1040/013-520 Versailles/Belle Rose 3/3 F Footboard W/Slats
BH1040/013-530 Versailles/Belle Rose 4/6 and 3/3 Side Rails

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts, which may have come loose inside the carton during shipment. Identify, count all parts and compare with the HARDWARE LIST below.

Caution: Please read the instructions thoroughly before assembly.

- 1. We recommend that you assemble this product with the assistance of another person: this will make the assembly easier, and will help eliminate damage to the product or injury to persons during assembly.
- 2. Please do not over tighten screws or bolts until the assembly is completed.
- 3. Please put all parts on a non-abrasive floor before assembly, and follow the assembly steps to assemble your newly purchased product correctly and efficiently

PART LISTS

NO:	COMPONENT	DRAWING	Q'TY
Α	Headboard		1PC
В	Footboard		1PC
С	Side Rail		2PCS
D	Slats		4PCS
E	Rail Trim		4PCS

HARDWARE LISTS

NO:	COMPONENT	DRAWING	Q'TY
1	Screw: #8*32mm	<-mmur9	8pcs
2	Screw: #8*25mm	<-mmil@	20pcs

PAGE: 1 of 2







Assembly Instructions

BH1040/013-510 Versailles/Belle Rose 3/3 F Headboard
BH1040/013-520 Versailles/Belle Rose 3/3 F Footboard W/Slats
BH1040/013-530 Versailles/Belle Rose 4/6 and 3/3 Side Rails


STEP 1

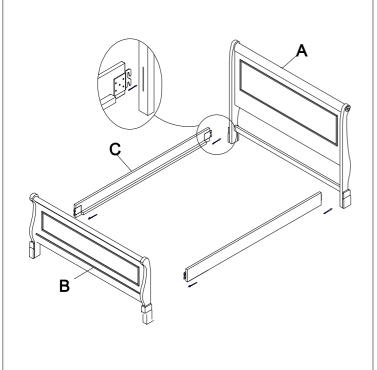

STEP 2

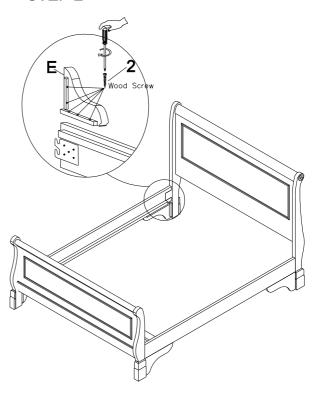

STEP 3

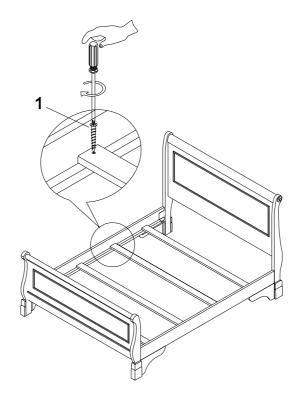

MADE IN VIETNAM

PAGE: 2 of 2