



Assembly Instructions





D058 B / W-20: PRAIRIE POINT SIDE CHAIR

Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts, which may have come loose inside the carton during shipment. Identify and count all items and compare with the PARTS LIST and/or HARDWARE LIST shown below.








Caution: Please read the instructions thoroughly before assembly.


1. We recommend that you assemble this product with the assistance of another person; this will make the assembly easier, and will help eliminate damage to the product or injury to persons during assembly.
2. Please do not over tighten screws or bolts until the assembly is completed.
3. Please put all parts on a non-abrasive floor before assembly, and follow the assembly steps to assemble your newly purchased product correctly and efficiently.

PARTS LIST

NO.	COMPONENT	DRAWING	Q'TY
A	CHAIR BACK		1 PCS
B	SEAT BOX		1 PCS
C	STRETCHER		2 PCS
D	LEG		2 PCS

HARDWARE LIST

NO.	COMPONENT	DRAWING	Q'TY
1	SHORT BOLT 5/16" x 1-1/4"		2 PCS
2	MIDDLE BOLT 5/16" x 2-3/8"		4 PCS
3	LONG BOLT 5/16" x 3"		4 PCS
4	LOCK WASHER 5/16" Dia		10 PCS
5	FLAT WASHER 5/16" Dia		10 PCS
6	OPEN WRENCH		1 PCS
7	SCREWS #8 x 1-1/2"		4 PCS

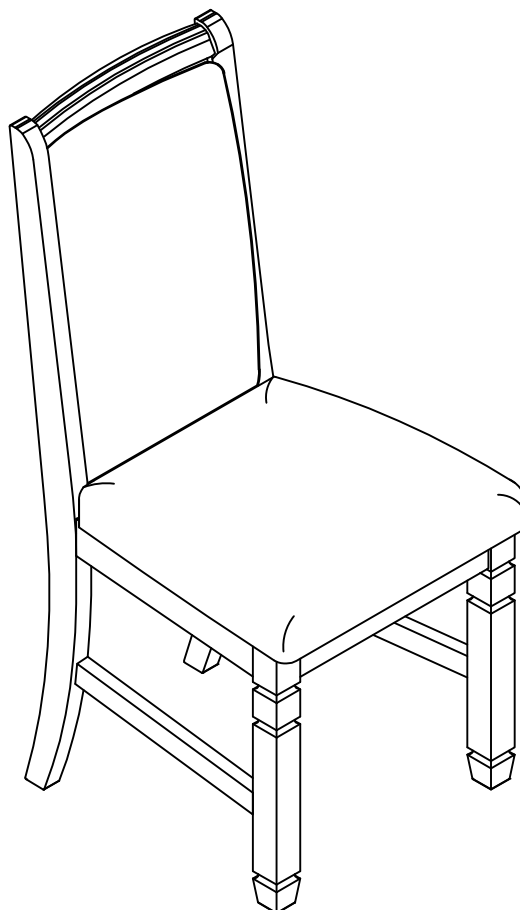


MADE IN VIET NAM

PAGE: 1 OF 2


Assembly Instructions

D058 B / W-20: PRAIRIE POINT SIDE CHAIR


STEP 1

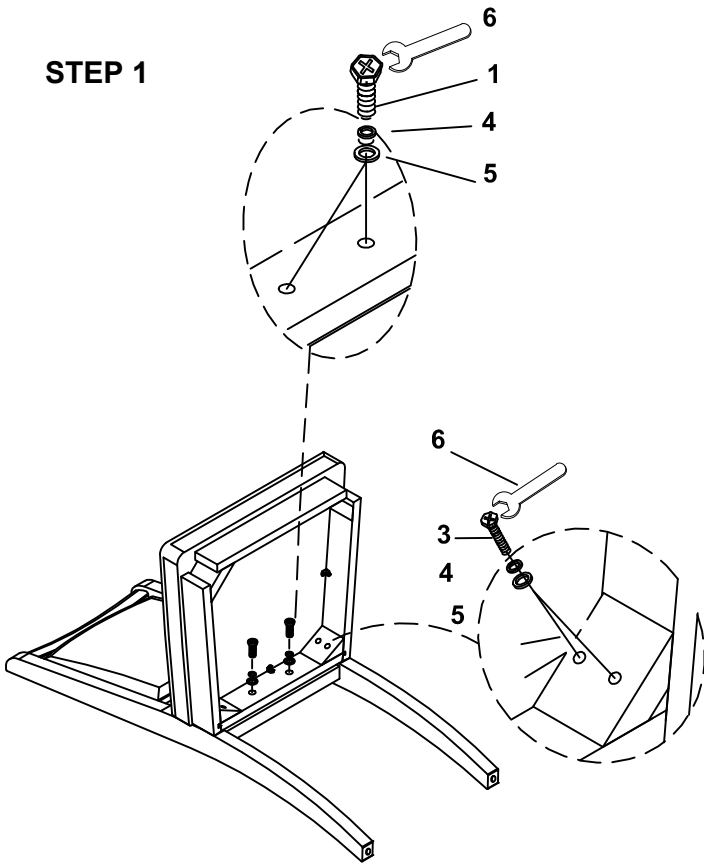

STEP 2

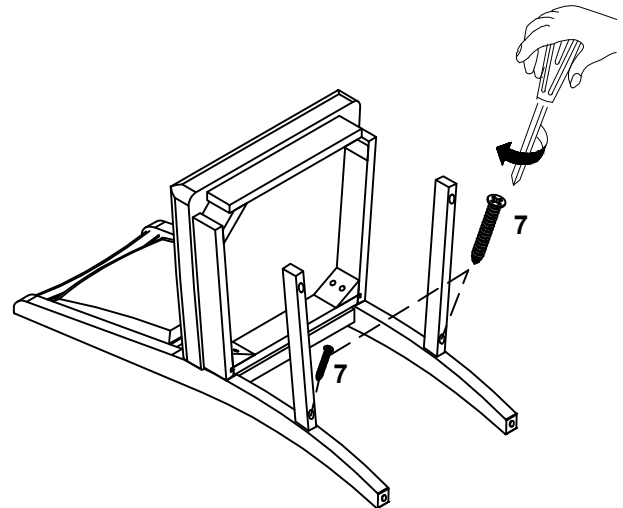

STEP 3

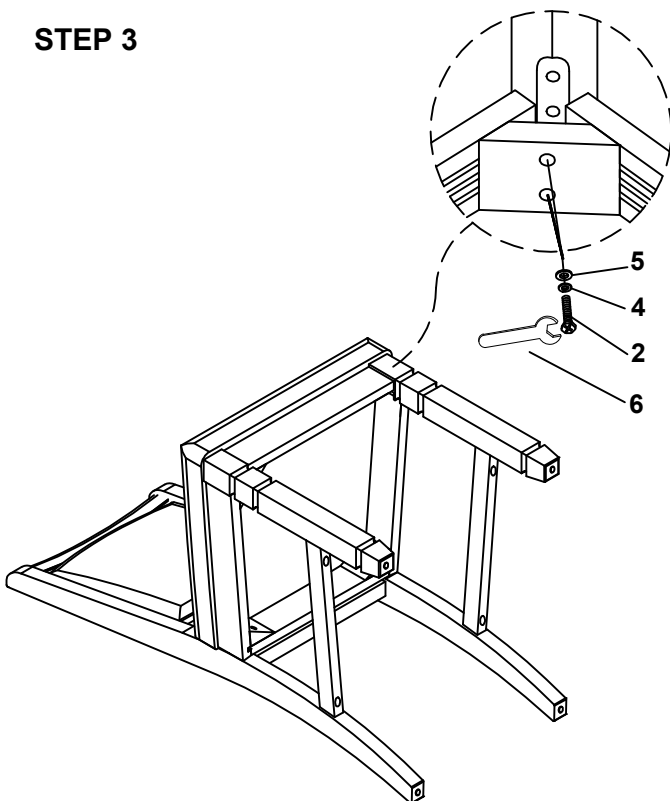

STEP 4

