

ASSEMBLY INSTRUCTIONS

CONSTANTINE COLLECTION U532T-30 CONSTANTINE SOFA

Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts, which may have come loose inside the carton during shipment. Identify and count all items and compare with the PARTS LIST and/or HARDWARE LIST shown below.


CAUTION: Read the instructions carefully before assembly.

1. We recommend that you assemble this product with the assistance of another person to eliminate damage to the product during assembly.

2. When you want to reposition the product, please always "LIFT & MOVE".

| PARTS LIST | | | | |
|------------|-----------------------------------|--------|---------------|--|
| NO. | DESCRIPTION | SKETCH | Q'TY (PCS) | |
| Α | SEAT FRAME | | 1 | |
| В | LEFT SIDE FACING (LSF) ARM | | 1 | |
| O | RIGHT SIDE FACING (RSF) ARM | | 1 | |
| D | BACKREST | | 1 | |
| E | SEAT CUSHION | | 2 | |
| F | LEG | | 2 | |
| G | SUPPORT LEG | | 2 | |


| HARDWARE LIST | | | | | |
|---------------|---------------------------------|------------------|---------------|--|--|
| NO. | DESCRIPTION | SKETCH | Q'TY (PCS) | | |
| 1 | FLAT WASHER Ø5/16 x 3/4" | 0 | 16 | | |
| 2 | WASHER Ø5/16 x 1/2" | 0 | 16 | | |
| 3 | BOLT Ø5/16 x 2" | (MINIMUM 1975) | 4 | | |
| 4 | ALLEN KEY Ø5/16 x 31/4" | | 1 | | |
| 5 | BOLT Ø5/16 x 31⁄4" | (a) | 10 | | |
| 6 | THREAD BOLT Ø5/16 x 31/4" | | 2 | | |
| 7 | HEX NUT Ø5/16 x 1/2" | | 2 | | |
| 8 | WRENCH 1/2" x 3½" | <u> </u> | 1 | | |
| 9 | SCREWS D4 x 2¾" | | 4 | | |

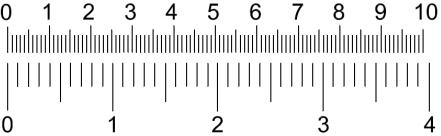




STEP 1:

Place the seat frame (A) upside down. Assemble the legs (F) to both left and right back side of the seat frame (A) by using the Allen Key (4) with hardware 1, 2, and 3.

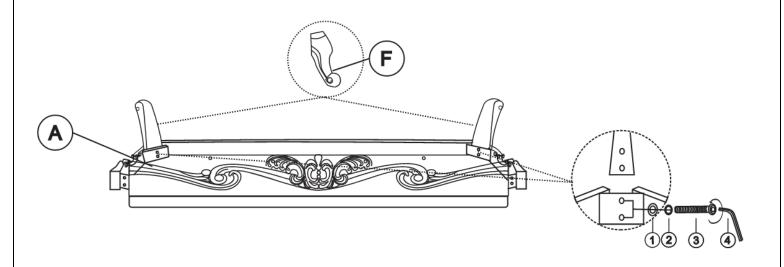

STEP 2:


Lay the seat frame (A) on its backside to reach the holes to secure the bolts for the arms. Align and assemble the LSF arm (B) and RSF arm (C) to the seat frame (A) by using the Allen Key (4) with hardware 1, 2, and 5.

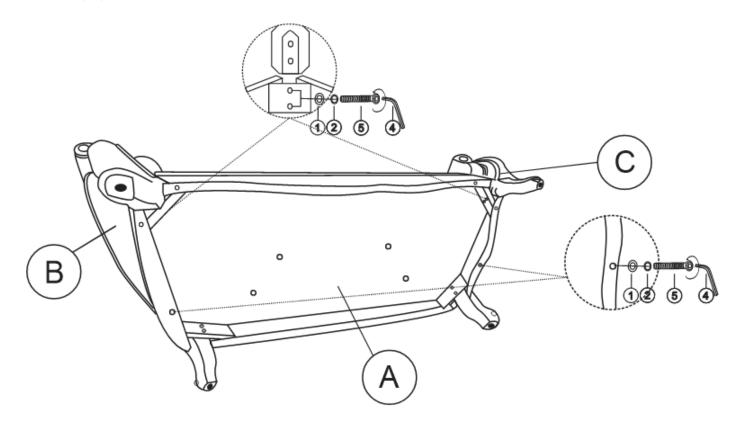




STEP 3:

Assemble and secure the front legs of the LSF arm (B) and RSF arm (C) to the seat frame (A) by using a screwdriver with hardware 9.

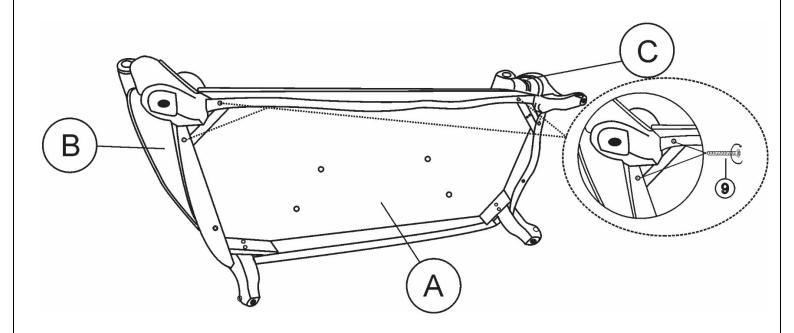

STEP 4:


Place the backrest (D) on its backside. Install the thread bolts (6) into the holes on the bottom of the backrest (D) by using your hands to rotate the bolts about 25 mm into the backrest (D).

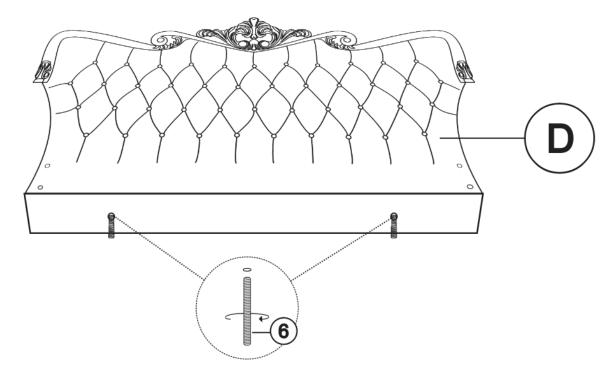




STEP 5:

Place the frame up right and install the backrest (D) to the LSF arm (B) and RSF arm (C) by sliding the brackets all the way until it is secured.

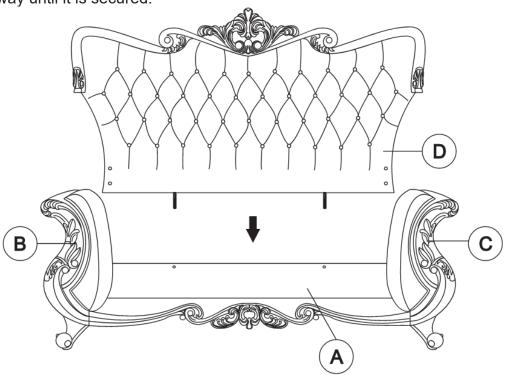

STEP 6:


Open the Velcro cover on the RSF arm (B) and LSF arm (C) to reach the holes to secure the bolts for the backrest. Assemble the backrest (D) to the LSF and RSF arms (B & C) by using Allen Key (4) with hardware 1, 2, and 5.

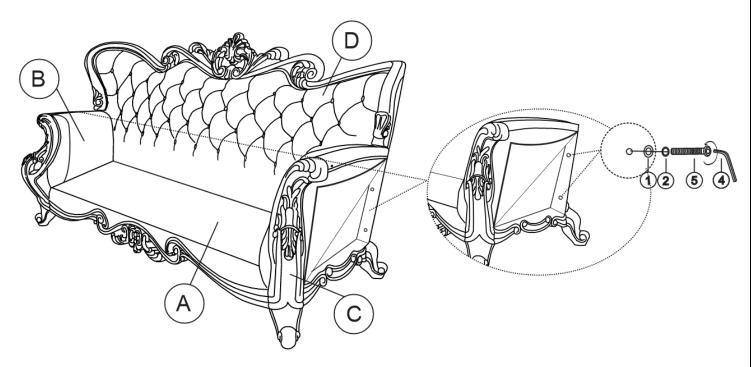




STEP 7:

Place the chair on its back on a clean and soft surface to reach the thread bolts (6). Secure the backrest (D) to the seat frame (A) by using the Wrench (8) with hardware 1,2, and 7.

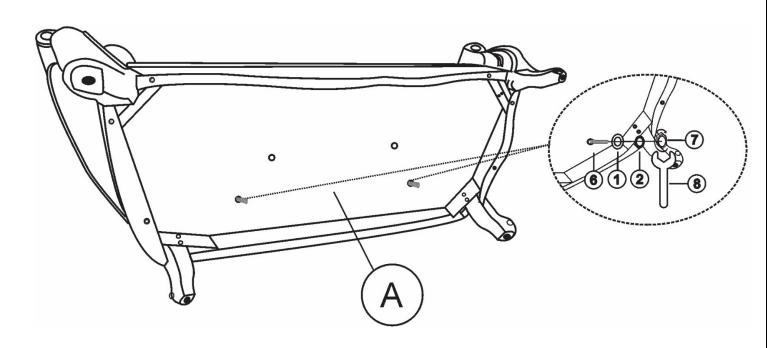

STEP 8:

Screw the support legs (G) to the bottom of seat frame (A).

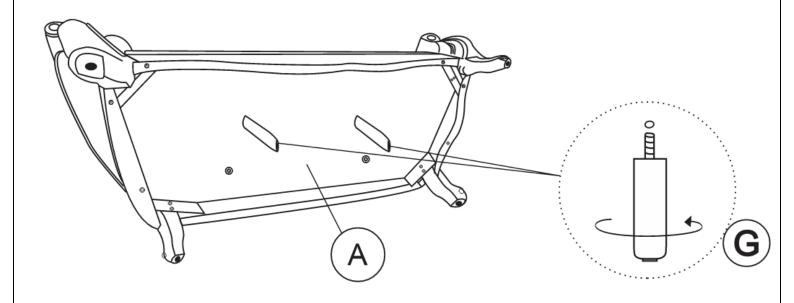




ASSEMBLY INSTRUCTIONS

CONSTANTINE COLLECTION U532T-30 CONSTANTINE SOFA

STEP 9:

Place the sofa up right and install the seat cushion (E) to the seat frame (A).

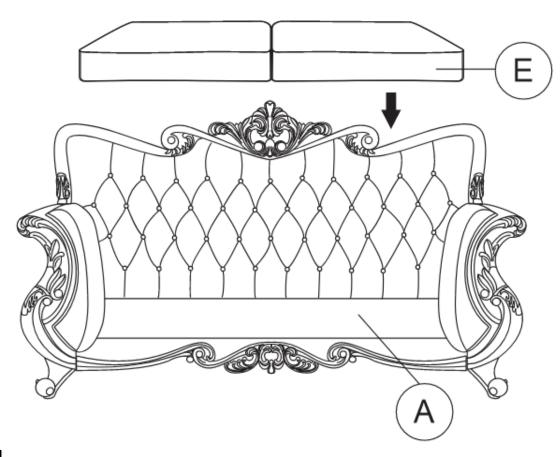

FINISH

