

ASSEMBLY INSTRUCTIONS

MONTECITO COLLECTION




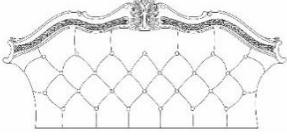



U7624-30A
U7624-30B






MONTECITO SOFA FRAME, CUSHION, ARMS, LEGS & 5 PILLOWS
MONTECITO SOFA BACKREST


Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts, which may have come loose inside the carton during shipment. Identify and count all items and compare with the PARTS LIST and/or HARDWARE LIST shown below.

CAUTION: Read the instructions carefully before assembly.

1. We recommend that you assemble this product with the assistance of another person to eliminate damage to the product during assembly.
2. When you want to reposition the product, please always "LIFT & MOVE."

PARTS LIST			
NO.	DESCRIPTION	SKETCH	Q'TY (PCS)
A	SEAT FRAME		1
B	LEFT SIDE FACING (LSF) ARM		1
C	RIGHT SIDE FACING (RSF) ARM		1
D	BACKREST		1
E	SEAT CUSHION		1
F	LEG		4
G	SUPPORT LEG		1

HARDWARE LIST			
NO.	DESCRIPTION	SKETCH	Q'TY (PCS)
1	FLAT WASHER Ø5/16 x 3/4"		11
2	WASHER Ø5/16 x 1/2"		11
3	BOLT Ø5/16 x 2 1/4"		8
4	ALLEN KEY Ø5/16 x 3 1/4"		1
5	BOLT Ø5/16 x 3 1/4"		3

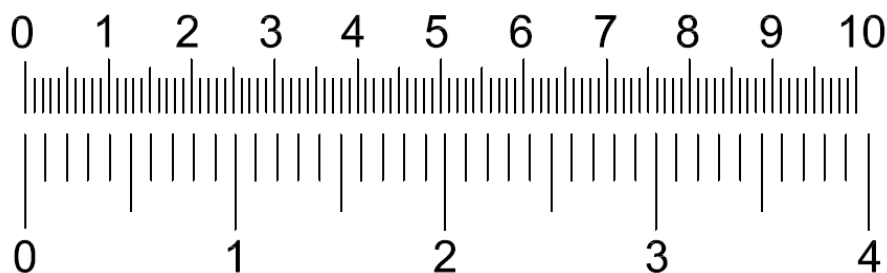

ASSEMBLY INSTRUCTIONS


MONTECITO COLLECTION

U7624-30A
U7624-30B

MONTECITO SOFA FRAME, CUSHION, ARMS, LEGS & 5 PILLOWS
MONTECITO SOFA BACKREST


STEP 1:

Lay the seat frame (A) on its back side to reach the holes to secure the bolts for the arms. Assemble the LSF arm (B) and RSF arm (C) to the seat frame (A) using Allen Key (4) with hardware, 1, 2, and 3.

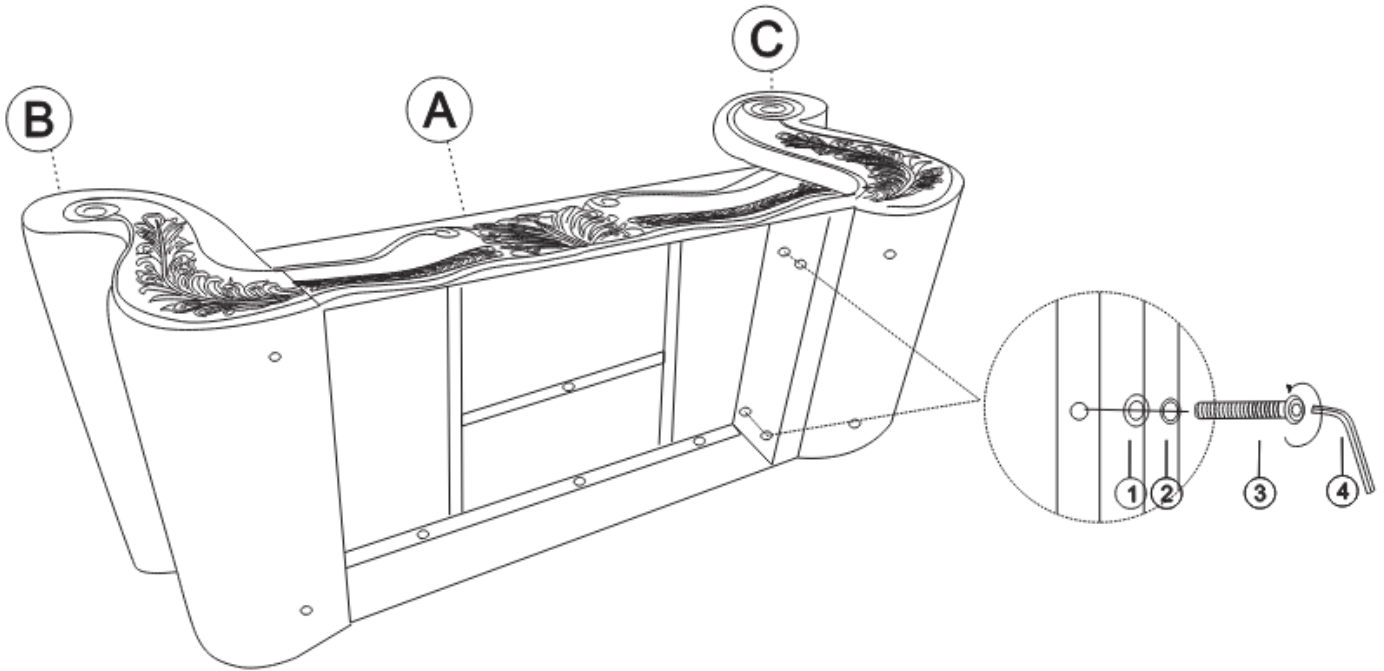


STEP 2:

Align and install the legs (F) to the bottom of the arms (B & C)

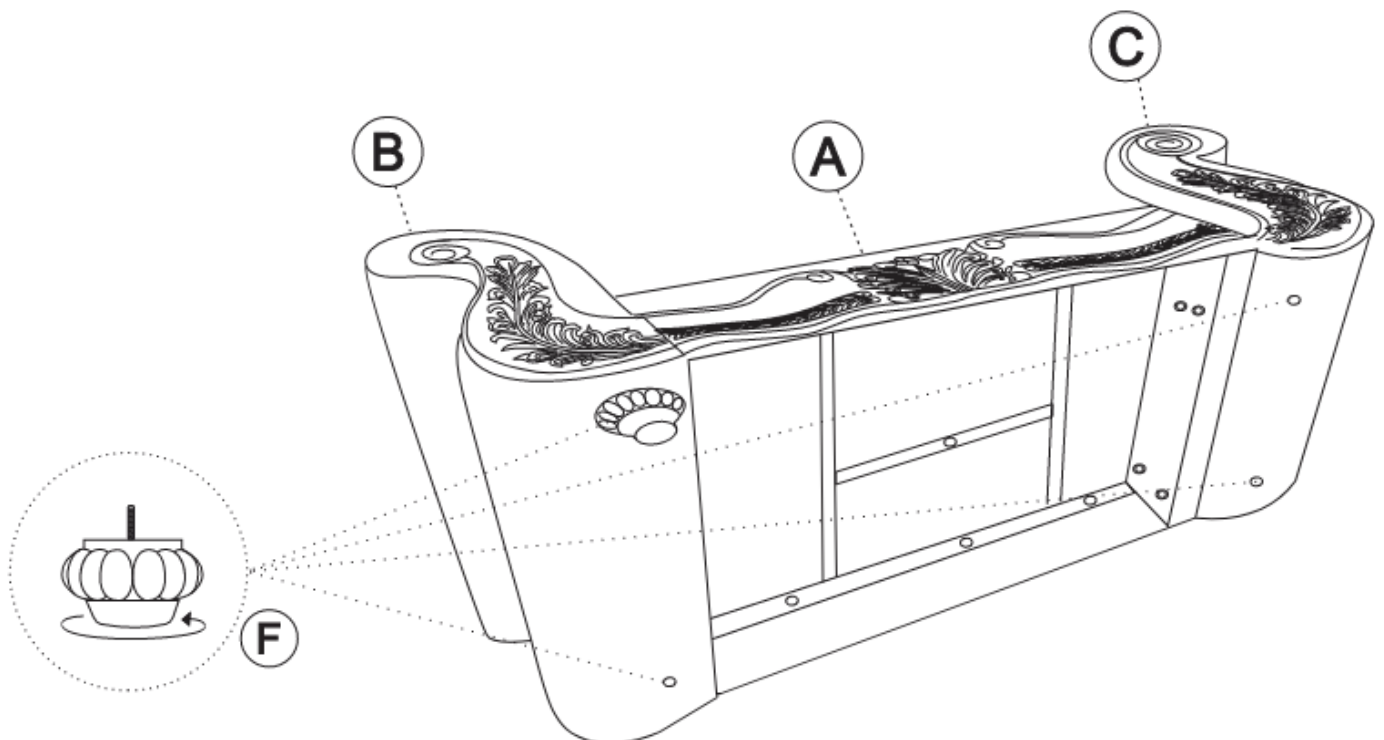


STEP 3:

Place the frame up right and install the backrest (D) to the LSF arm (B) and RSF arm (C) by sliding the brackets all the way until it is secured.

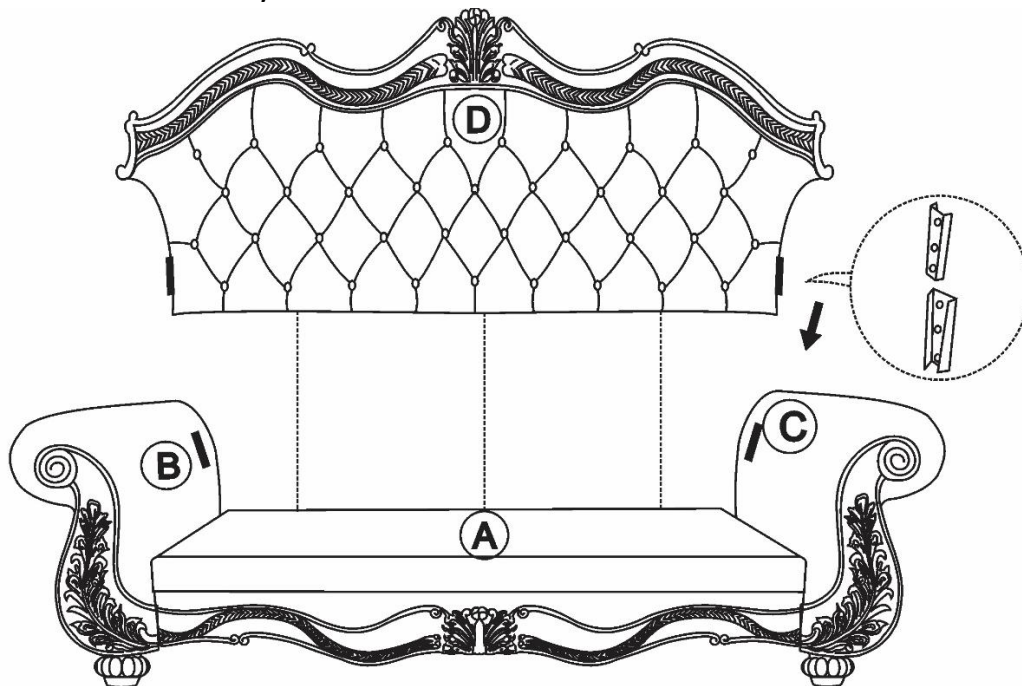

STEP 4:

Place the chair on its back on a clean and soft surface and secure the bolts for the chair back (D) at bottom the seat frame (A) by using the Allen key (4) with hardware 1, 2 and 5.

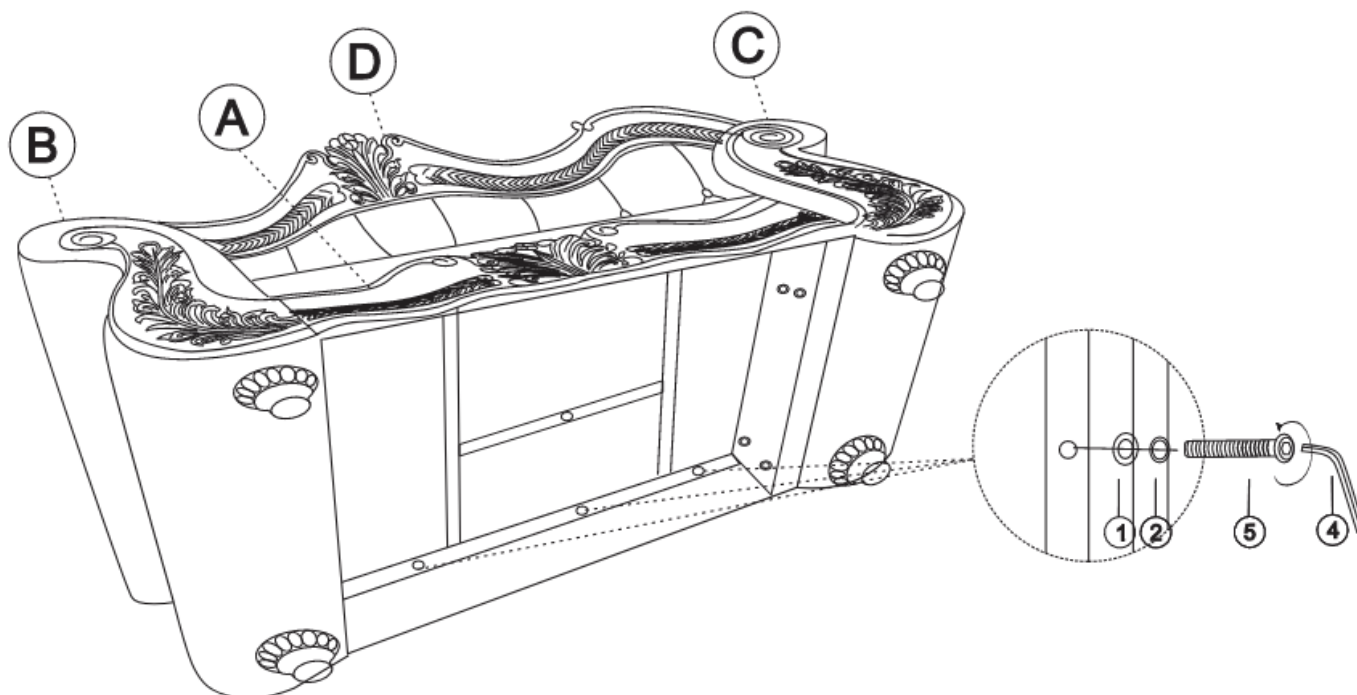

ASSEMBLY INSTRUCTIONS


MONTECITO COLLECTION

U7624-30A
U7624-30B

MONTECITO SOFA FRAME, CUSHION, ARMS, LEGS & 5 PILLOWS
MONTECITO SOFA BACKREST


STEP 5:

Screw the support leg (G) to the bottom of seat frame.

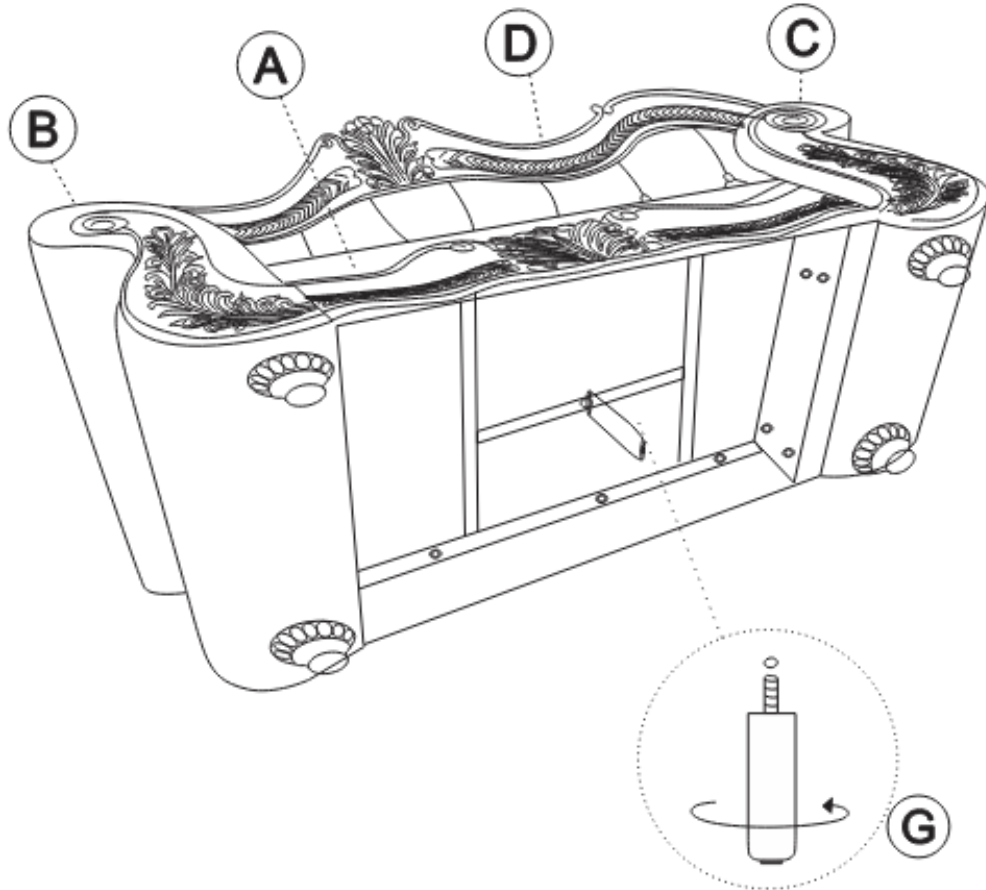

STEP 6:

Place the frame up right and place the seat cushion (E) to the seat frame.

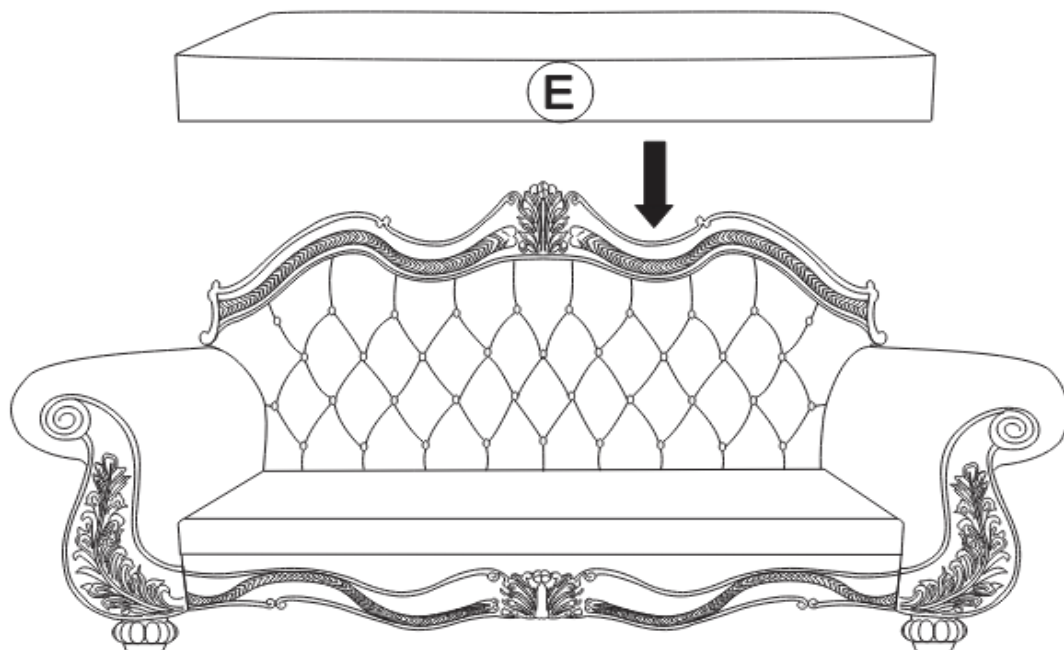

ASSEMBLY INSTRUCTIONS

MONTECITO COLLECTION

U7624-30A
U7624-30B

MONTECITO SOFA FRAME, CUSHION, ARMS, LEGS & 5 PILLOWS
MONTECITO SOFA BACKREST

FINISH

