





ASSEMBLY INSTRUCTIONS DALTON COLLECTION MDAL#812

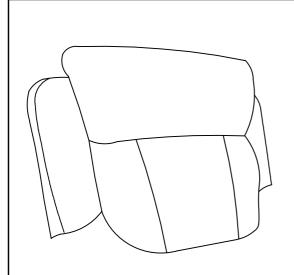

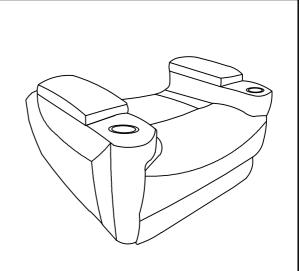

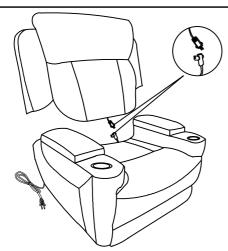

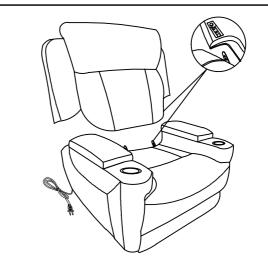

Connect wire behind seat to wire under the headrest, then slide back onto connecting brackets and push until you hear a clicking sound.

