








Assembly Instruction

Item NO:PRO#456

NO	Description	Sketch	Q'TY
A	Allen Wrench 4mm		1
B	Touch up Pen		2
C	Connector Bolt Ø1/4**1-1/2"		8
D	Ladder Rail Finial		1
E	Allen Wrench 2.5mm		1
F	Connector Bolt Ø2.5mm		2

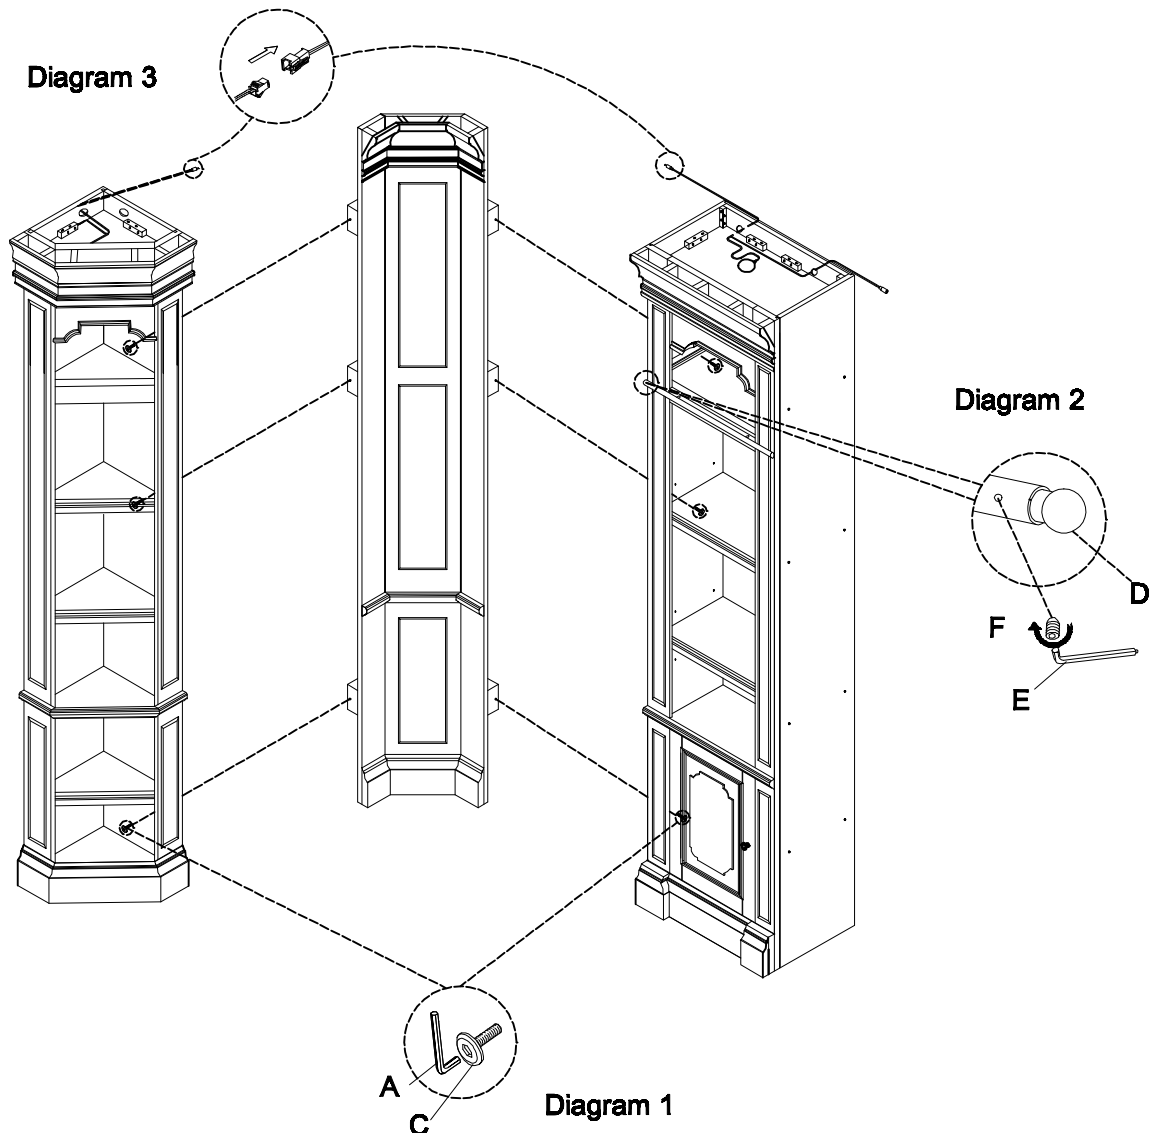

1. To connect each cabinet,remove the wood plugs located on the side of each cabinet to allow for insertion of Connector Bolt C.
2. It is recommended to connect the inside Corner fully on the side to a cabinet near its final position,starting first with the Connector Bolt C, See Diagram 1.slide both connected pieces into final resting position.Align and connect second cabinet in its final resting position.
3. To complete finished look,secure Ladder Rail Finial E to ladder rail end.See Diagram 2.

4. Connect female and male airjack light cable to properly ensure power to all LED lights. See Diagram 3. Connect light Kit LTKIT#499 (sold seacratly) to right most cabinet by connecting remaining air jack cable to Control Box and securing Touch Cable to touch post located in front right corner of cabinet top. See assembly instruction sheet provided with LTKIT#499 for more details