
Progressive® ASSEMBLY INSTRUCTION furniture Model No: B123-50 MIRROR

Model No: B123-50 MIRROR

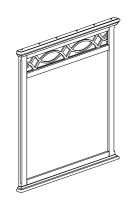

IMPORTANT NOTE:

- Place all wooden parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.
- Check to be sure that you have all parts and hardware.
- Remove all wrapping materials, including staples & packing straps before you start to assemble.
- Do not tighten all screws / bolts until all completely assembled.
- Keep all hardware parts out of reach of children!
- Tighten screws periodically! With the use of this product bolts and screws may become loose over time!
- Don't attempt to modify parts!

PART LIST					
NO	DESCRIPTION		QTY/PCS		
1		MIRROR	1 PC		
2		MIRROR SUPPORT RAIL	2 PCS		

HARDWARE LIST				
NO		QTY/PCS		
A		BOLT M6 x 35mm	8 PCS	
В	3	SPRING WASHER M6	8 PCS	
С	0	FLAT WASHER 5/16" x 22mm	8 PCS	
D		ALLEN KEY M4	1 PC	

