


# PROGRESSIVE FURNITURE


MATTRESS WOODEN SUPPORTS  
INSTUCTION SHEET

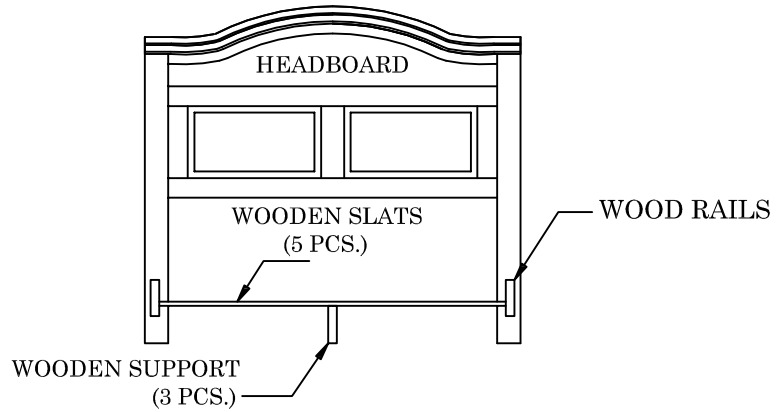

WOODEN SLATS DIMENSIONS  
TWIN:  $\frac{3}{4}$ " x 3" x  $39\frac{1}{4}$ "  
FULL:  $\frac{3}{4}$ " x 3" x  $53\frac{3}{4}$ "

# PROGRESSIVE FURNITURE


MATTRESS WOODEN SUPPORTS  
INSTUCTION SHEET

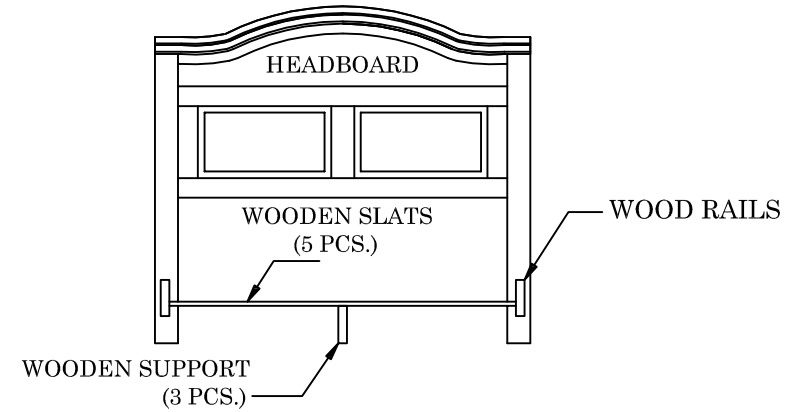

WOODEN SLATS DIMENSIONS  
TWIN:  $\frac{3}{4}$ " x 3" x  $39\frac{1}{4}$ "  
FULL:  $\frac{3}{4}$ " x 3" x  $53\frac{3}{4}$ "

# PROGRESSIVE FURNITURE


MATTRESS WOODEN SUPPORTS  
INSTUCTION SHEET

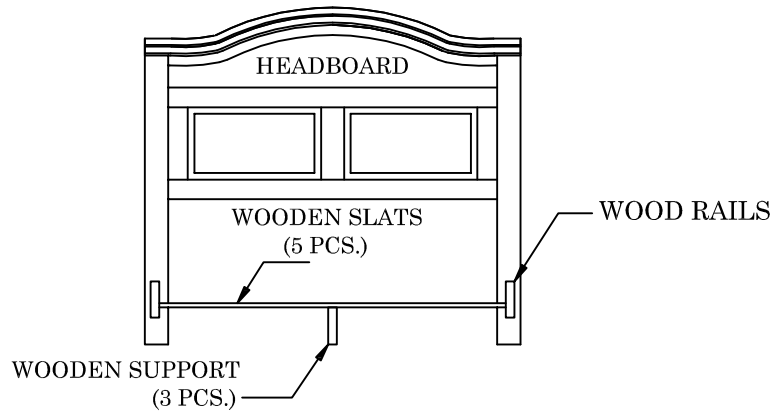

WOODEN SLATS DIMENSIONS  
TWIN:  $\frac{3}{4}$ " x 3" x  $39\frac{1}{4}$ "  
FULL:  $\frac{3}{4}$ " x 3" x  $53\frac{3}{4}$ "

# PROGRESSIVE FURNITURE

MATTRESS WOODEN SUPPORTS  
INSTUCTION SHEET

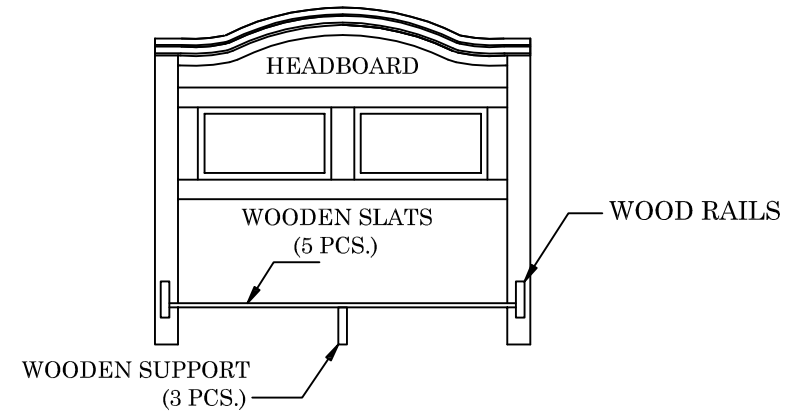


WOODEN SLATS DIMENSIONS  
TWIN:  $\frac{3}{4}$ " x 3" x  $39\frac{1}{4}$ "  
FULL:  $\frac{3}{4}$ " x 3" x  $53\frac{3}{4}$ "

# PROGRESSIVE FURNITURE

## MATTRESS WOODEN SUPPORTS

### INSTUCTION SHEET

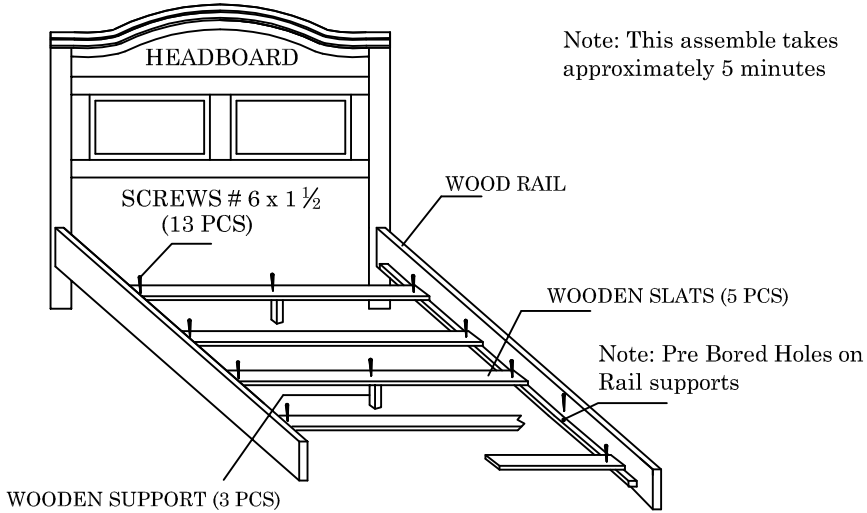


Note: This assemble takes approximately 5 minutes

# PROGRESSIVE FURNITURE

## MATTRESS WOODEN SUPPORTS

### INSTUCTION SHEET

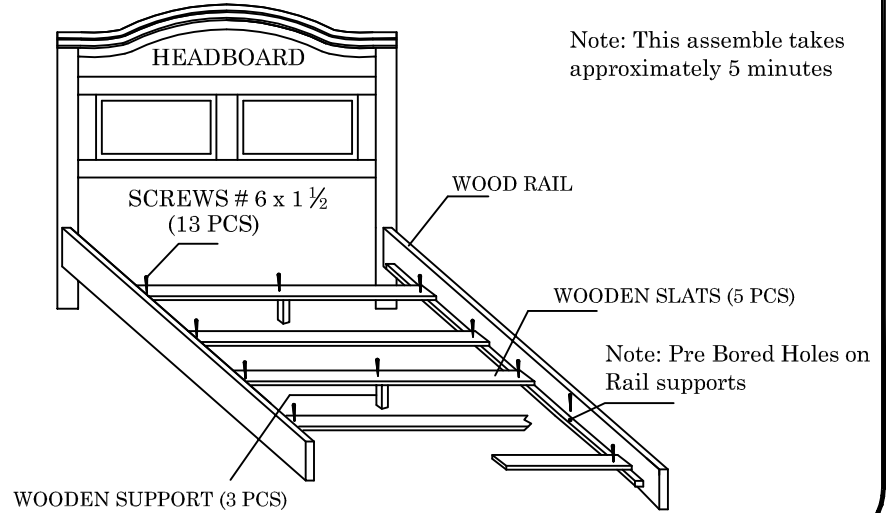


Note: This assemble takes approximately 5 minutes

# PROGRESSIVE FURNITURE

## MATTRESS WOODEN SUPPORTS

### INSTUCTION SHEET

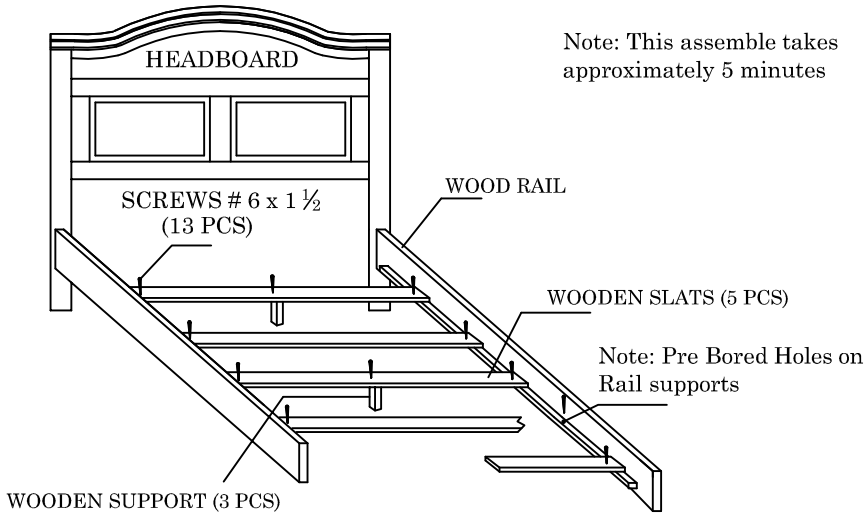


Note: This assemble takes approximately 5 minutes

# PROGRESSIVE FURNITURE

## MATTRESS WOODEN SUPPORTS

### INSTUCTION SHEET

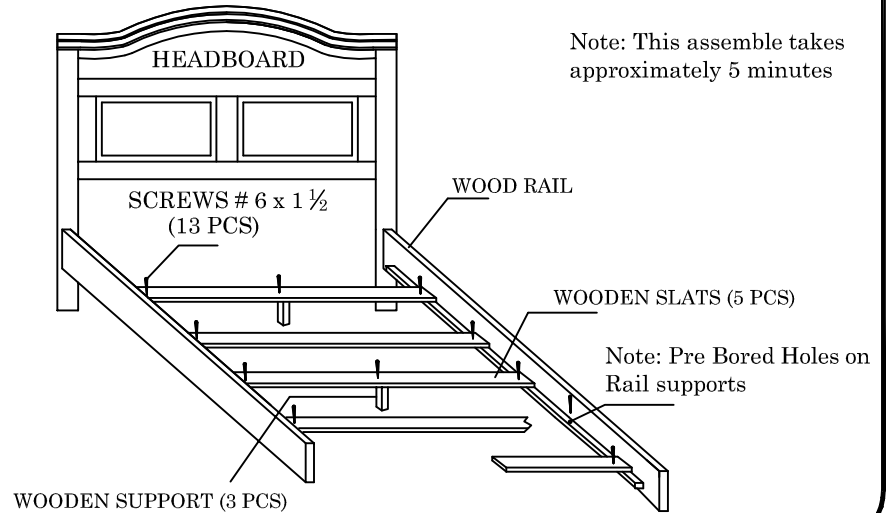

Note: This assemble takes approximately 5 minutes