


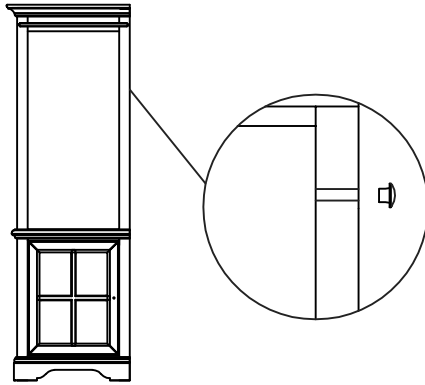
PROGRESSIVE FURNITURE

E707-20/22 PIER Assembly Instructions

1
PARTS LIST

(2x) 3/8" Plastic Plug


Step 1

If Pier Unit is Set Up without
Bridge, Insert (1) 2x 3/8" Plastic
Plugs in outside of Pier Unit.



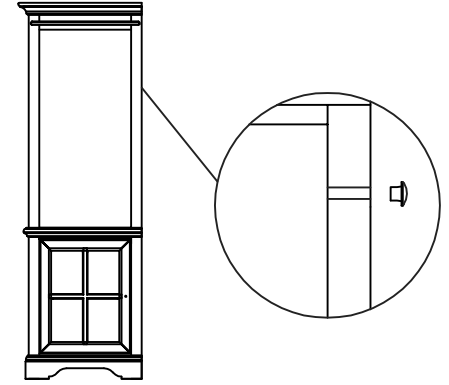
PROGRESSIVE FURNITURE

E707-20/22 PIER Assembly Instructions

1
PARTS LIST

(2x) 3/8" Plastic Plug


Step 1

If Pier Unit is Set Up without
Bridge, Insert (1) 2x 3/8" Plastic
Plugs in outside of Pier Unit.



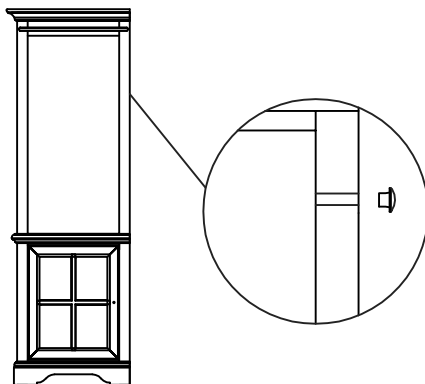
PROGRESSIVE FURNITURE

E707-20/22 PIER Assembly Instructions

1
PARTS LIST

(2x) 3/8" Plastic Plug


Step 1

If Pier Unit is Set Up without
Bridge, Insert (1) 2x 3/8" Plastic
Plugs in outside of Pier Unit.



PROGRESSIVE FURNITURE

E707-20/22 PIER Assembly Instructions

1
PARTS LIST

(2x) 3/8" Plastic Plug

Step 1

If Pier Unit is Set Up without
Bridge, Insert (1) 2x 3/8" Plastic
Plugs in outside of Pier Unit.

