



PROGRESSIVE FURNITURE

E707/E727 PIER

Assembly Instructions

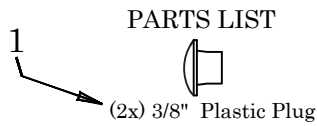


Step 1
If Pier Unit is Set Up without
Bridge, Insert (1) 2x 3/8" Plastic
Plugs in outside of Pier Unit.

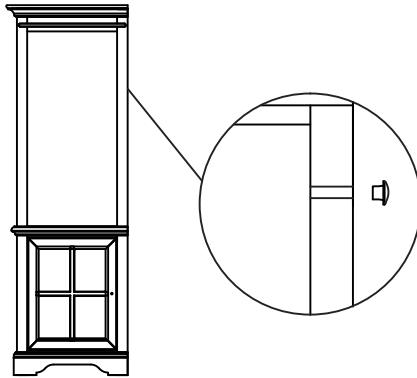


PROGRESSIVE FURNITURE

E707/E727 PIER

Assembly Instructions

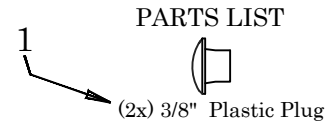


Step 1
If Pier Unit is Set Up without
Bridge, Insert (1) 2x 3/8" Plastic
Plugs in outside of Pier Unit.

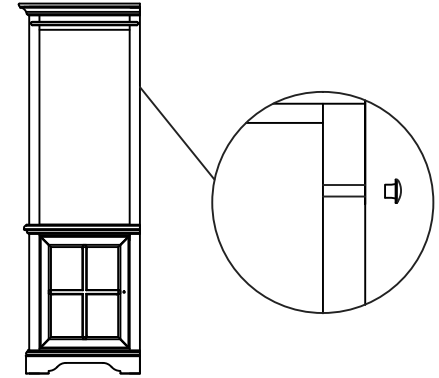


PROGRESSIVE FURNITURE

E707/E727 PIER

Assembly Instructions

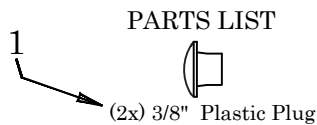


Step 1
If Pier Unit is Set Up without
Bridge, Insert (1) 2x 3/8" Plastic
Plugs in outside of Pier Unit.

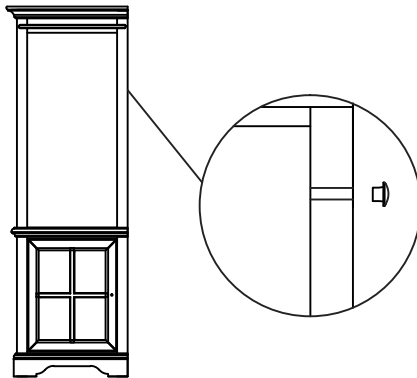

PROGRESSIVE FURNITURE

E707/E727 PIER

Assembly Instructions

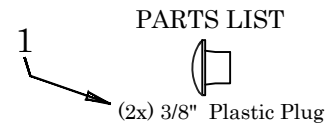

Step 1
If Pier Unit is Set Up without
Bridge, Insert (1) 2x 3/8" Plastic
Plugs in outside of Pier Unit.

