









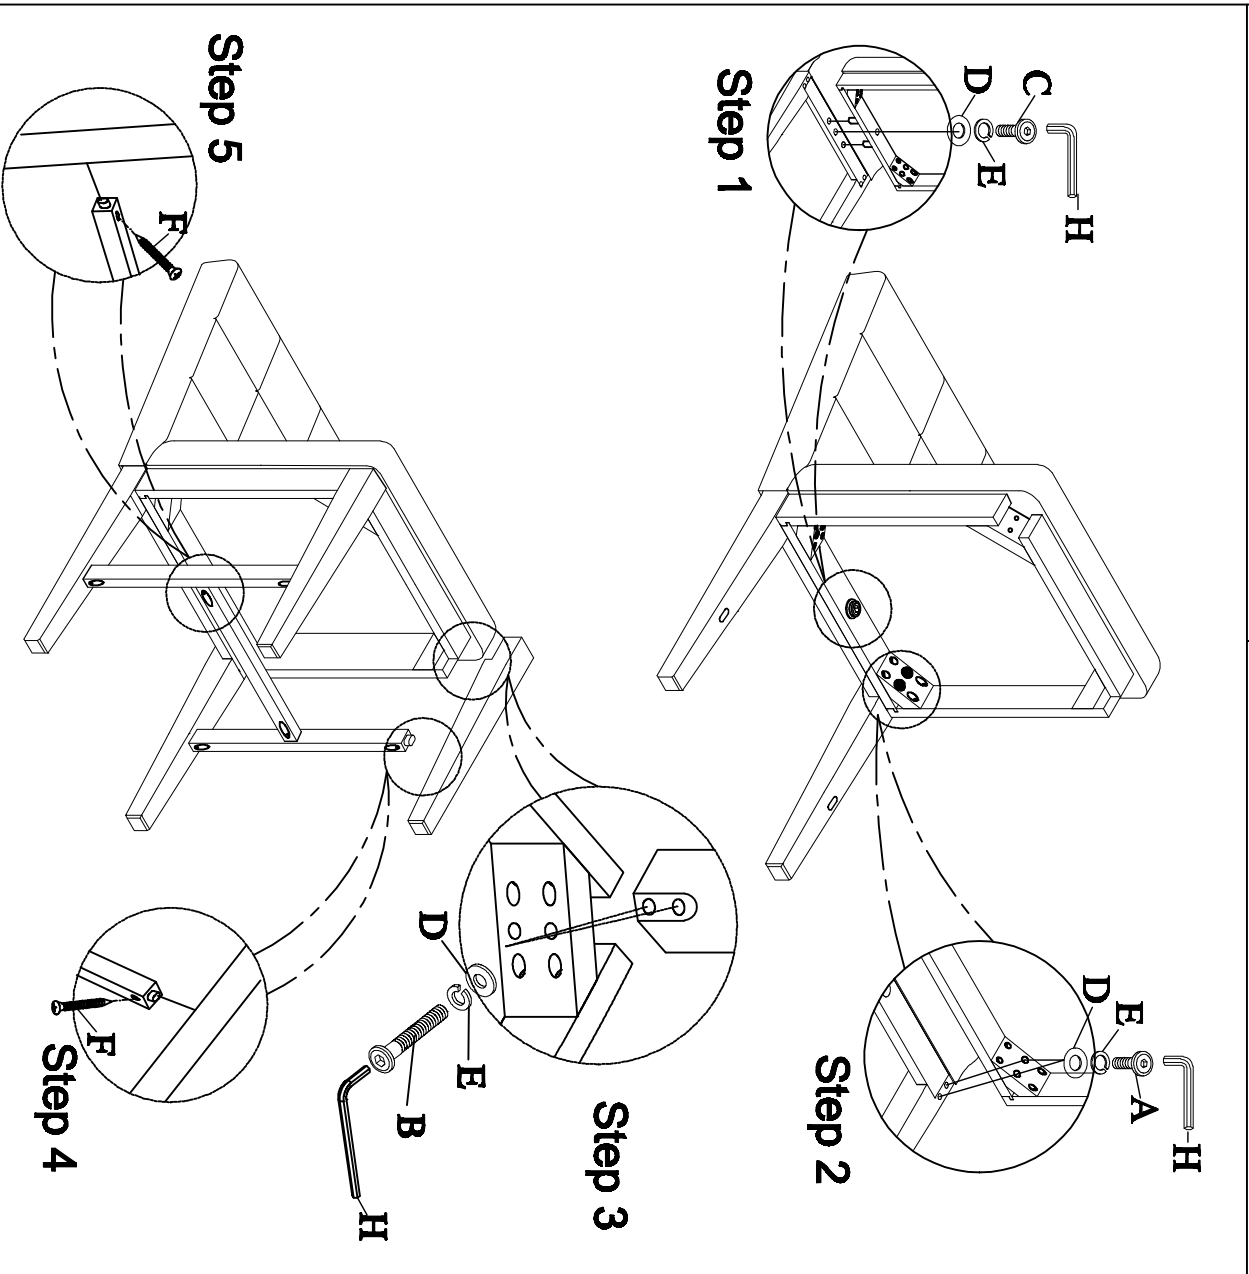
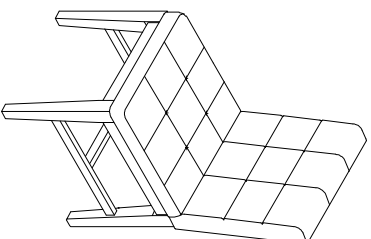
# ASSEMBLY INSTRUCTIONS

MODEL NO.:#P109-61 DINING CHAIR

## Hardware List

## MASTER

A		Bolt Ø5/16" x2" 3/4mm	4PCS
B		Bolt Ø5/16" x 2"	4PCS
C		Bolt Ø5/16" x 1" 1/4mm	1PC
D		Flat washer Ø5/16" x19mm	9PCS
E		Spring washer Ø5/16"	9PCS
F		Wood screw #M4 x 38mm	6PCS
G		Wood dowel Ø9.8 x25mm	2PCS
H		Allen key 4mm	1PC



MADE IN VIET NAM