



WOODLANDS DESIGNS

MIRROR ASSEMBLY INSTRUCTIONS

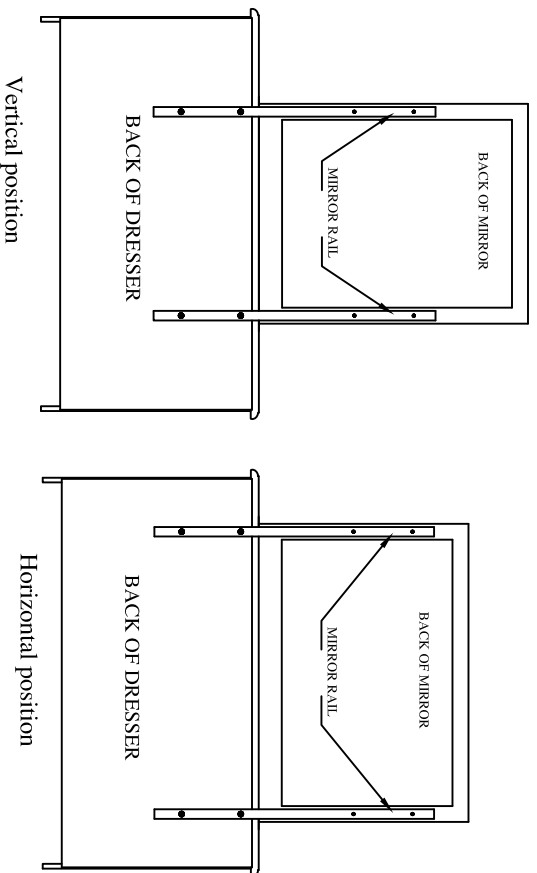


WOODLANDS DESIGNS

MIRROR ASSEMBLY INSTRUCTIONS

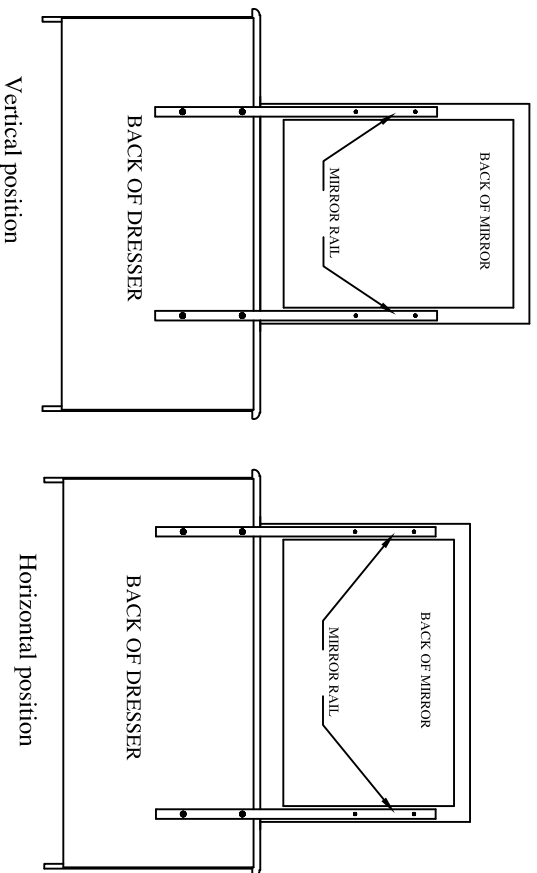


WOODLANDS DESIGNS

MIRROR ASSEMBLY INSTRUCTIONS

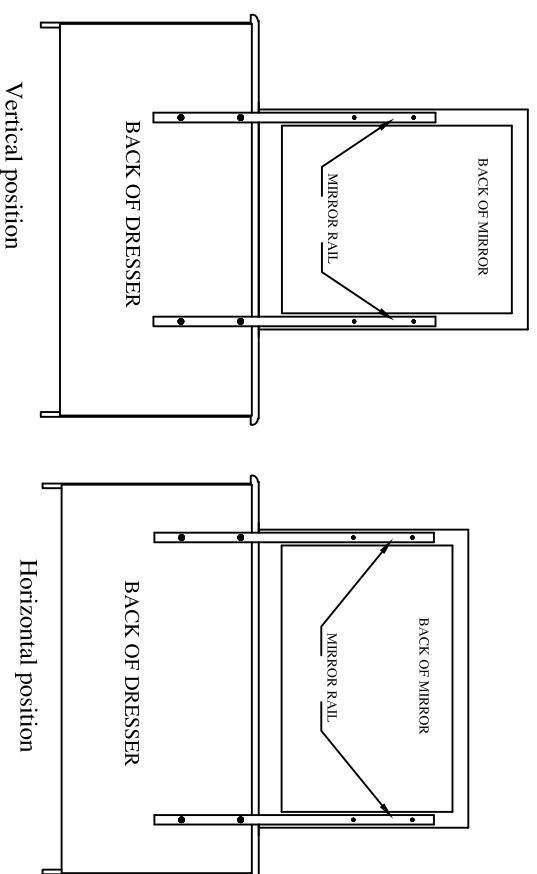

WOODLANDS DESIGNS

MIRROR ASSEMBLY INSTRUCTIONS

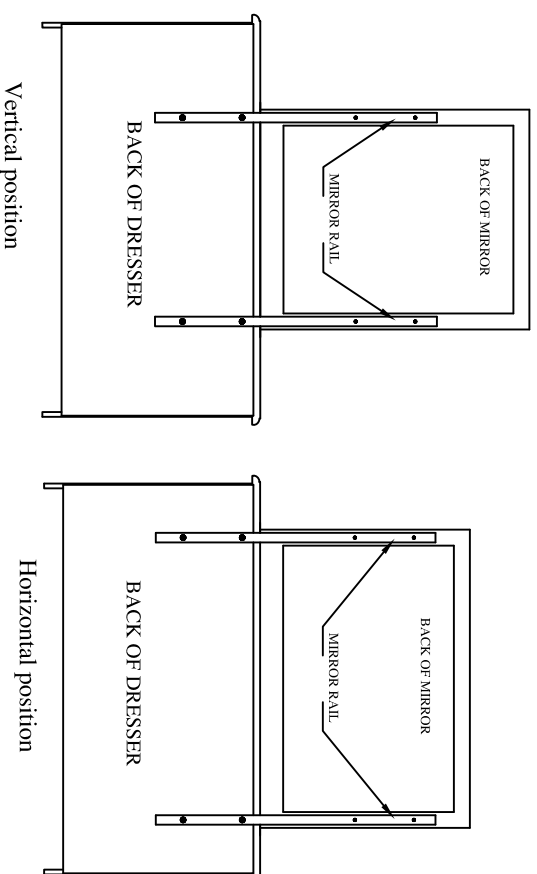


WOODLANDS DESIGNS

MIRROR ASSEMBLY INSTRUCTIONS

ASSEMBLY INSTRUCTIONS

- 1.- Put the mirror on the back of master dresser and center it by the marks already placed on the back of dresser.
- 2.- Located and screw the two pieces of wood boards from the back side of furniture using # 6 X 1 1/4" screws
(There are inside the box)
- 3.- There are 2 options to attached: Horizontal or Vertical
BE SURE ONE HALF OF THE WOOD BOARDS STAY ON THE MIRROR FRAME AND OTHER HALF ON THE DRESSER

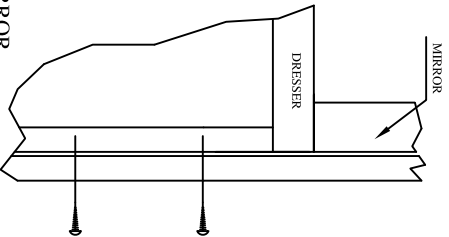


WOODLANDS DESIGNS

MIRROR ASSEMBLY INSTRUCTIONS

ASSEMBLY INSTRUCTIONS

- 1.- Put the mirror on the back of master dresser and center it by the marks already placed on the back of dresser.
- 2.- Located and screw the two pieces of wood boards from the back side of furniture using # 6 X 1 1/4" screws
(There are inside the box)
- 3.- There are 2 options to attached: Horizontal or Vertical
BE SURE ONE HALF OF THE WOOD BOARDS STAY ON THE MIRROR FRAME AND OTHER HALF ON THE DRESSER

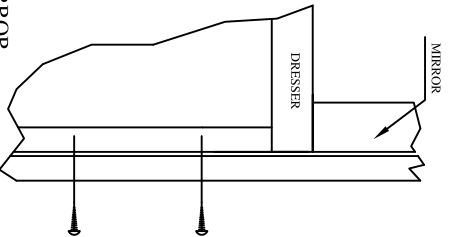


WOODLANDS DESIGNS

MIRROR ASSEMBLY INSTRUCTIONS

ASSEMBLY INSTRUCTIONS

- 1.- Put the mirror on the back of master dresser and center it by the marks already placed on the back of dresser.
- 2.- Located and screw the two pieces of wood boards from the back side of furniture using # 6 X 1 1/4" screws
(There are inside the box)
- 3.- There are 2 options to attached: Horizontal or Vertical
BE SURE ONE HALF OF THE WOOD BOARDS STAY ON THE MIRROR FRAME AND OTHER HALF ON THE DRESSER

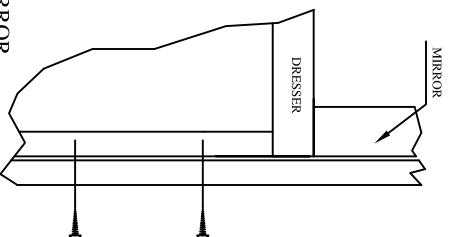

WOODLANDS DESIGNS

MIRROR ASSEMBLY INSTRUCTIONS

ASSEMBLY INSTRUCTIONS

- 1.- Put the mirror on the back of master dresser and center it by the marks already placed on the back of dresser.
- 2.- Located and screw the two pieces of wood boards from the back side of furniture using # 6 X 1 1/4" screws
(There are inside the box)
- 3.- There are 2 options to attached: Horizontal or Vertical
BE SURE ONE HALF OF THE WOOD BOARDS STAY ON THE MIRROR FRAME AND OTHER HALF ON THE DRESSER

