


PROGRESSIVE FURNITURE

P745/P765 Hardware Attachment

Assembly Instructions

PARTS LIST

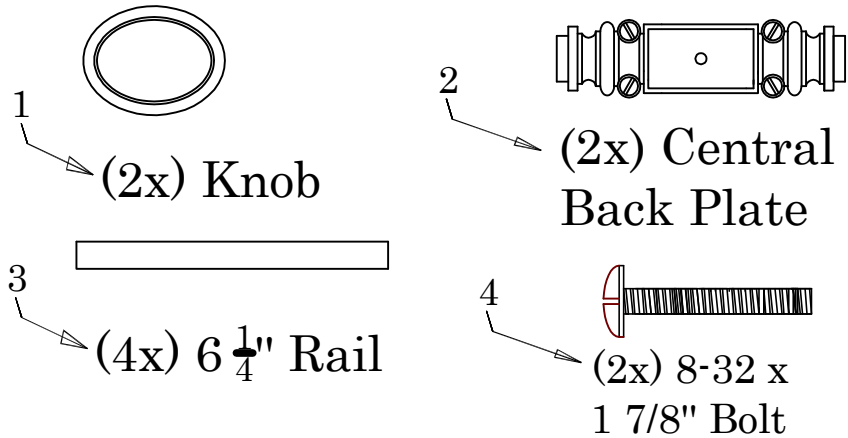


PROGRESSIVE FURNITURE

P745/P765 Hardware Attachment

Assembly Instructions

PARTS LIST

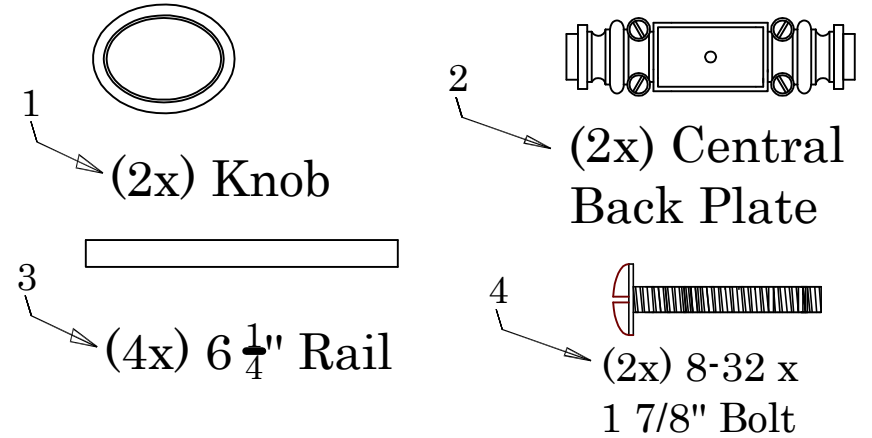


PROGRESSIVE FURNITURE

P745/P765 Hardware Attachment

Assembly Instructions

PARTS LIST

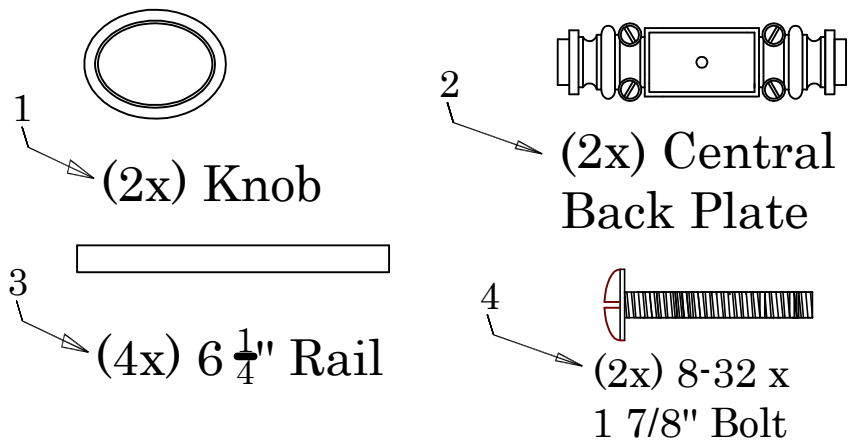


PROGRESSIVE FURNITURE

P745/P765 Hardware Attachment

Assembly Instructions

PARTS LIST

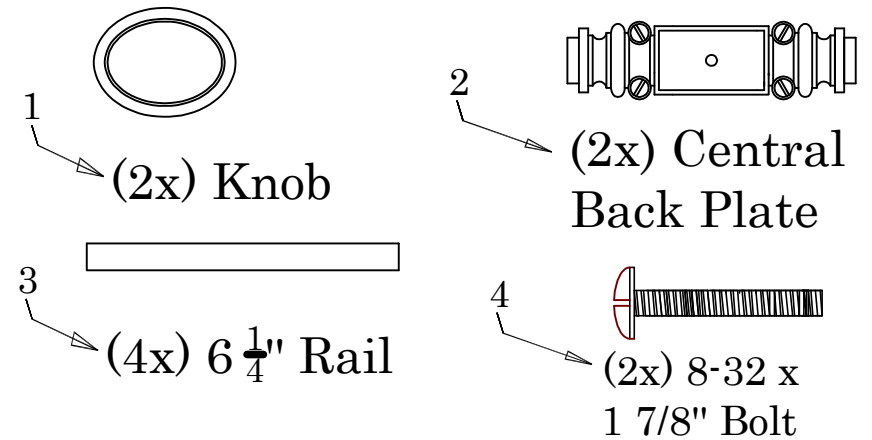

PROGRESSIVE FURNITURE

P745/P765 Hardware Attachment Assembly Instructions


Step 1

Insert (2x) 6 $\frac{1}{4}$ " Rails
into Hardware ends.

Note: Hardware Ends
are already attached to Doors.

Step 2

Attach Center Back plate piece
of hardware over rails with (1)
Knob and tighten using (4) (1x)
8-32 x 1 $\frac{7}{8}$ " Bolt.

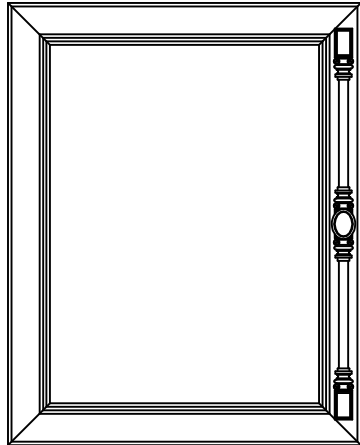

PROGRESSIVE FURNITURE

P745/P765 Hardware Attachment Assembly Instructions


Step 1

Insert (2x) 6 $\frac{1}{4}$ " Rails
into Hardware ends.

Note: Hardware Ends
are already attached to Doors.

Step 2

Attach Center Back plate piece
of hardware over rails with (1)
Knob and tighten using (4) (1x)
8-32 x 1 $\frac{7}{8}$ " Bolt.

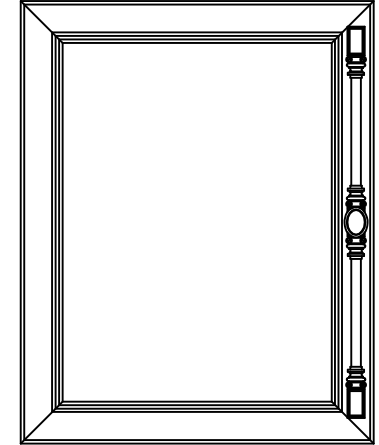

PROGRESSIVE FURNITURE

P745/P765 Hardware Attachment Assembly Instructions


Step 1

Insert (2x) 6 $\frac{1}{4}$ " Rails
into Hardware ends.

Note: Hardware Ends
are already attached to Doors.

Step 2

Attach Center Back plate piece
of hardware over rails with (1)
Knob and tighten using (4) (1x)
8-32 x 1 $\frac{7}{8}$ " Bolt.

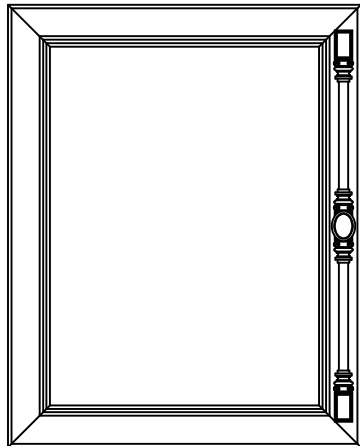

PROGRESSIVE FURNITURE

P745/P765 Hardware Attachment Assembly Instructions

Step 1

Insert (2x) 6 $\frac{1}{4}$ " Rails
into Hardware ends.

Note: Hardware Ends
are already attached to Doors.

Step 2

Attach Center Back plate piece
of hardware over rails with (1)
Knob and tighten using (4) (1x)
8-32 x 1 $\frac{7}{8}$ " Bolt.

