
Progressive® furniture

ASSEMBLY INSTRUCTION

Item No: T178-01

Description: COFFEE TABLE

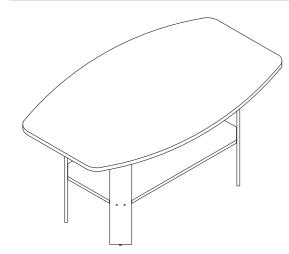

IMPORTANT NOTE:


- Place all wooden parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.
- Check to be sure that you have all parts and hardware.
- Remove all wrapping materials, including staples & packing straps before you start to assemble.
- Do not tighten all screws/bolts until all completely assembled.
- Keep all hardware parts out of reach of children.

Each Item


PARTS LIST			
NO	COMPONENT	QTY	
A	TOP PANEL	1 PC	
В	SHELF PANEL	1 PC	
С	LEG PANEL	4 PCS	

	HARDWARE LIST				
NO	DESCRIPTION		QTY		
1	WOODEN DOWEL M6 x 30MM		8 PCS		
2	CHIPBOARD SCREW M4 x 45MM	D mmmm>	8 PCS		
3	GLIDE	Q	4 PCS		
4	GLUE		1 PC		
5	L BRACKET		4 PCS		
6	PH TAPPING SCREW #8 x 1/2"	€)nm>	8 PCS		

STEP 1

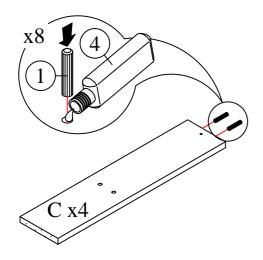

STEP 2

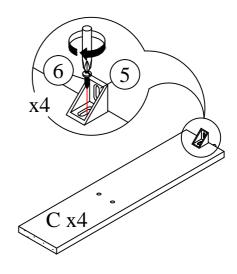


Progressive® furniture

ASSEMBLY INSTRUCTION


Item No: T178-01

Description: COFFEE TABLE


STEP 3

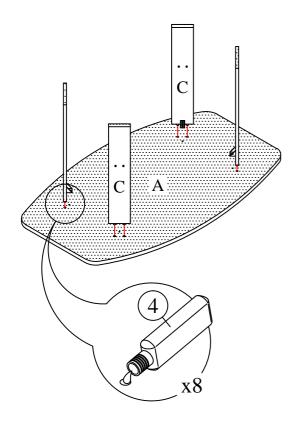

STEP 4

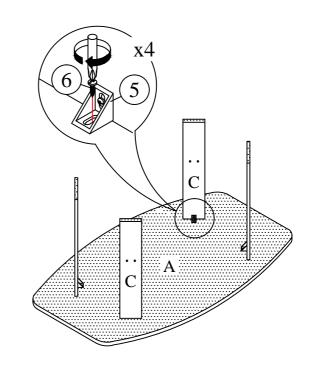

STEP 5

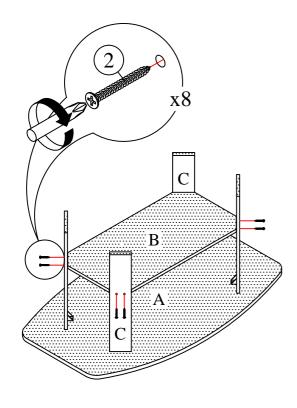

STEP 6

