


Phoebe LED Teardrop Wall Mirror

Phoebe

ASSEMBLY INSTRUCTIONS

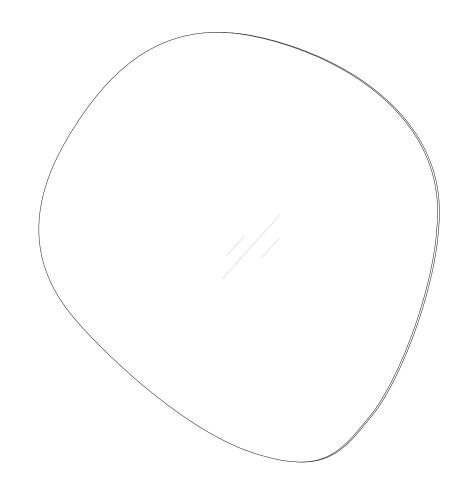

PARTS LIST

	PICTURE	DESCRIPTION	QTY
А		Mirror	1

HARDWARE

	PICTURE	DESCRIPTION	QTY
В		Screw	2
С	===	Anchor	2
D	Porilling Location Map(D) ●	Drilling Location Map	1

BEFORE BEGINNING ASSEMBLY:



Read instructions cover to cover



Have two adults on hand for assembly



Do NOT assemble on flooring or carpet. Assemble on a clean nonmarring surface (ex: packing foam)




Save all packaging until assembly is completed


Need a part? Call TOV at 516-888-3355 or email service@tovfurniture.com

ASSEMBLY STEPS

STEP 1: Open the battery box and load the battery(4 AA batteries)
(Batteries are not included)

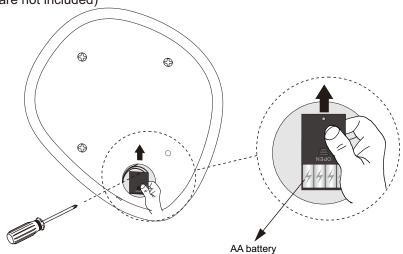

STEP 2:Using the Drilling Location Map(D), measure out a distance of 290 mm (11.4") on your wall to mark the two drill points.

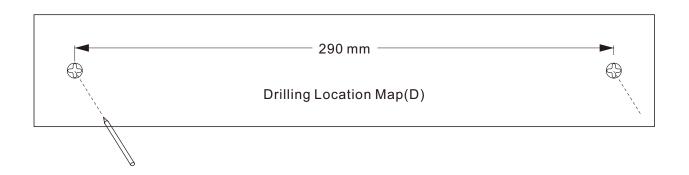


STEP 3: Drill the holes into the wall.






ASSEMBLY STEPS

STEP 4: Install the included anchors and screws to the wall. The mirror can now be hung either vertically or horizontally as illustrated in steps 4 and 5.

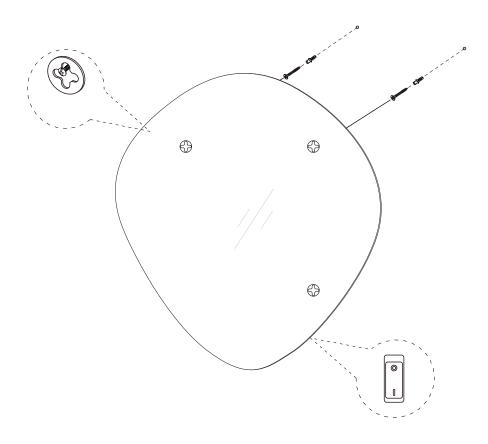

STEP **5:**

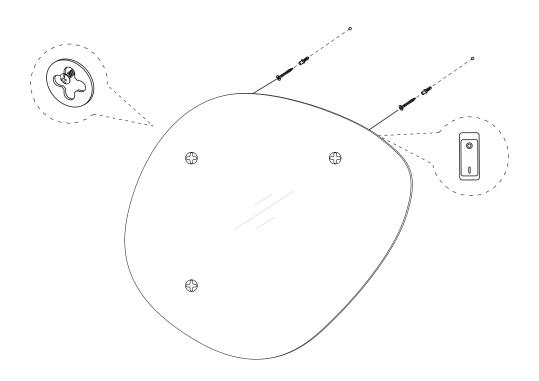

CARE & MAINTENANCE -



Do not put hot items directly on furniture surface.



Do not clean furniture with harsh cleansers or polish.



Dust and wipe up spills using a clean, non-colored, lint-free cloth.



Stains may be removed with mild soap solution and a damp cloth.



Do not place furniture under direct sunlight.



Do not place furniture near heating or cooling vents.



Do not write on furniture without a padded barrier to protect the surface.



Do not place furniture outside, for indoor use only.