



Phoebe LED Wall Mirror

Phoebe




ASSEMBLY INSTRUCTIONS

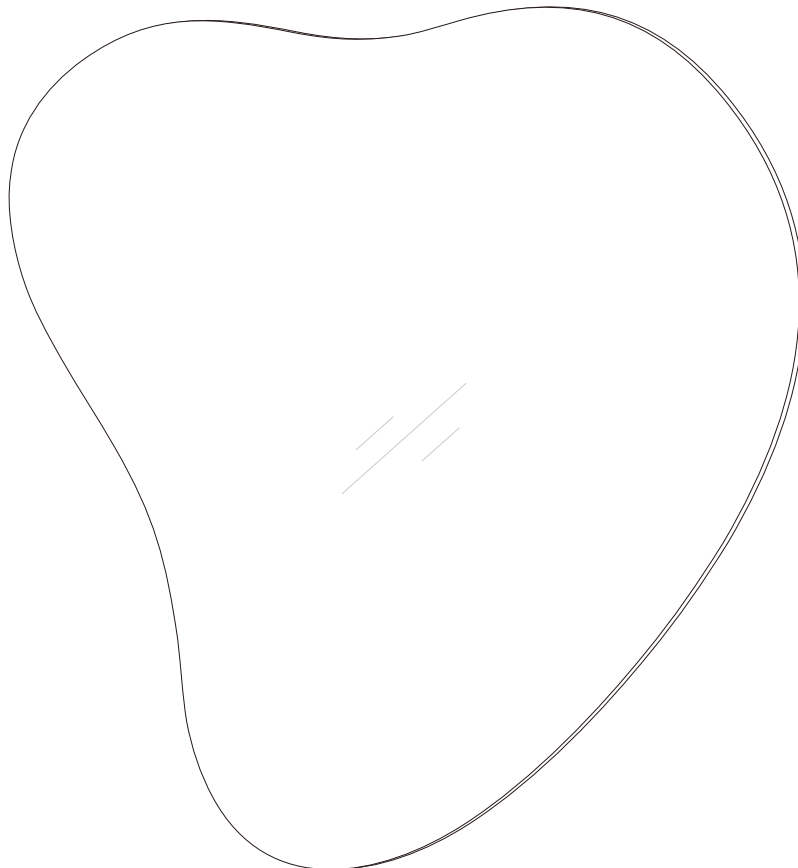

PARTS LIST

	PICTURE	DESCRIPTION	QTY
A		Mirror	1

HARDWARE

	PICTURE	DESCRIPTION	QTY
B		Screw	2
C		Anchor	2
D		Drilling Location Map	1

BEFORE BEGINNING ASSEMBLY:



Read instructions cover to cover



Have two adults on hand for assembly



Do NOT assemble on flooring or carpet. Assemble on a clean non-marring surface (ex: packing foam)




Save all packaging until assembly is completed


*Need a part? Call TOV at **516-888-3355** or email service@tovfurniture.com*

ASSEMBLY STEPS

STEP 1: Open the battery box and load the battery(4 AA batteries)
(Batteries are not included)

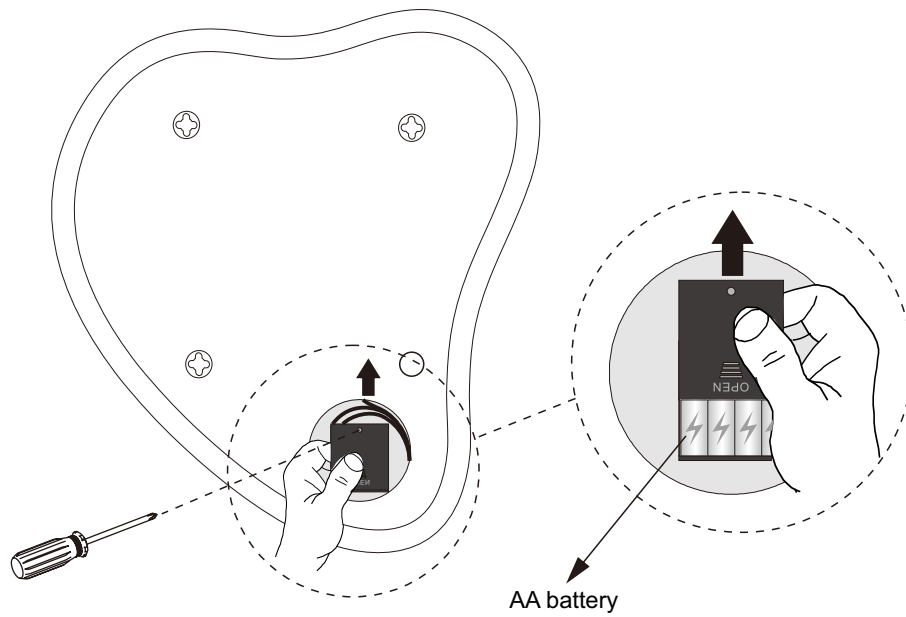

STEP 2 : Using the Drilling Location Map(D), measure out a distance of 290 mm (11.4")
on your wall to mark the two drill points.

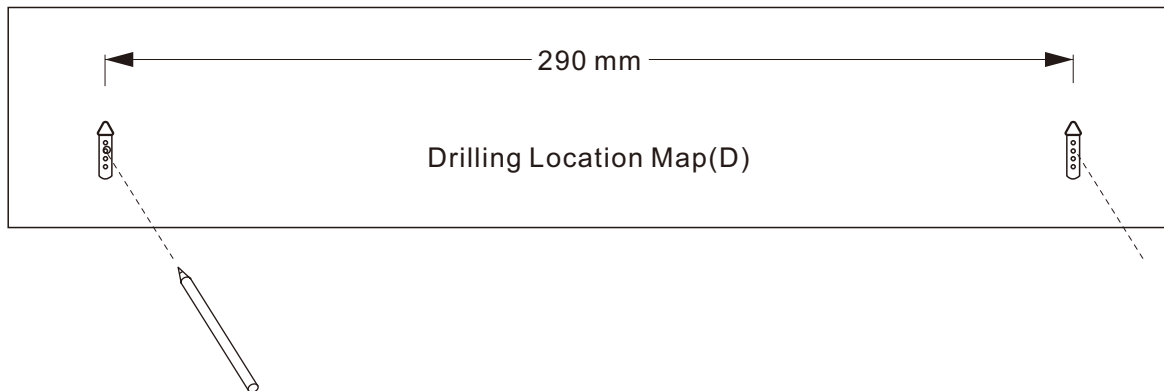


STEP 3: Drill the holes into the wall .




ASSEMBLY STEPS

STEP 4: Install the included anchors and screws to the wall. The mirror can now be hung either vertically or horizontally as illustrated in steps 4 and 5.

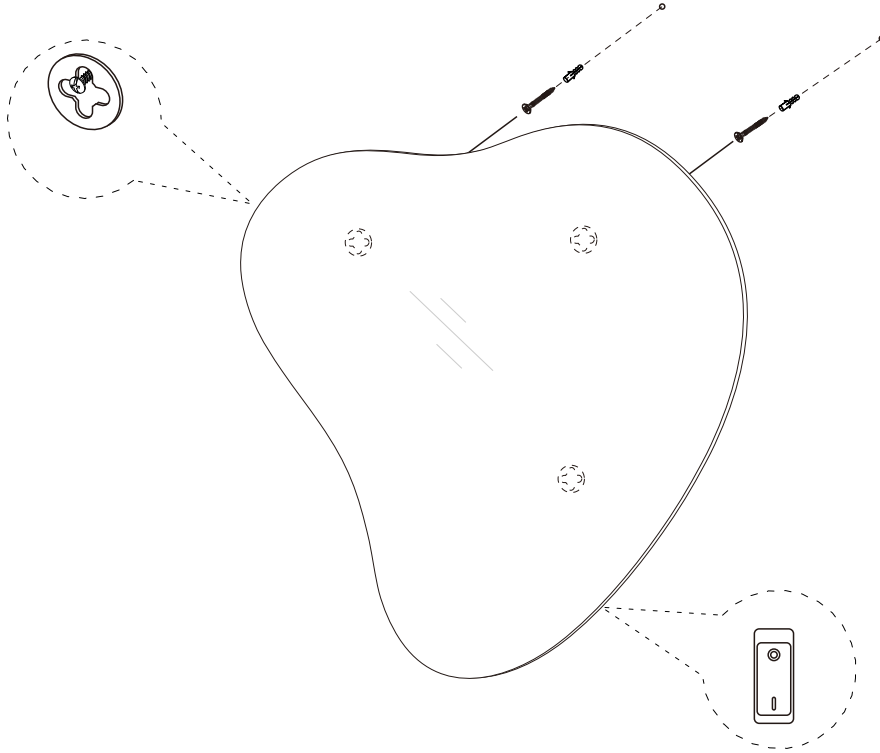

STEP 5:

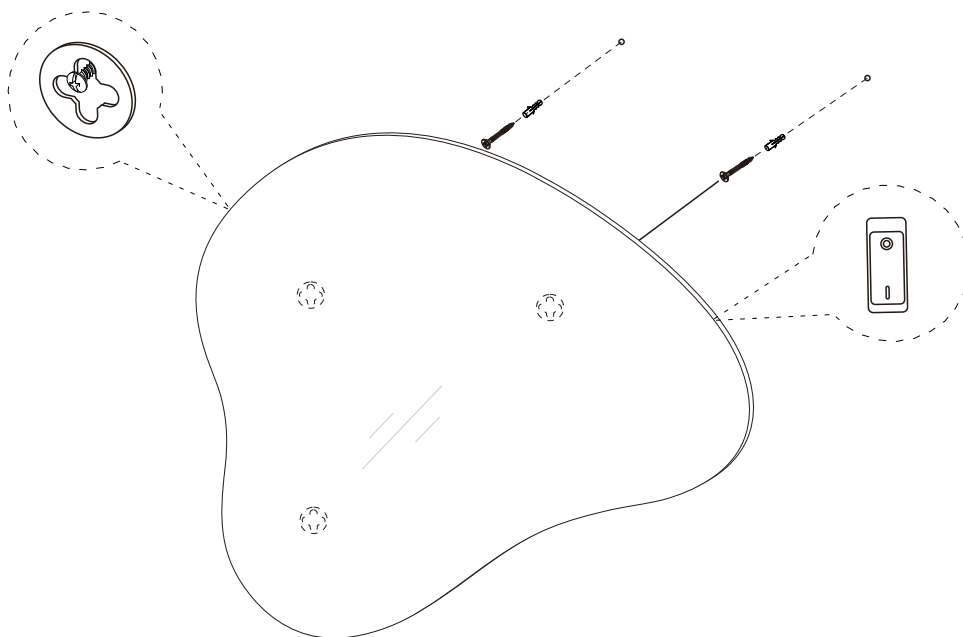

CARE & MAINTENANCE



Do not put hot items directly on furniture surface.



Do not clean furniture with harsh cleansers or polish.



Dust and wipe up spills using a clean, non-colored, lint-free cloth.



Stains may be removed with mild soap solution and a damp cloth.



Do not place furniture under direct sunlight.



Do not place furniture near heating or cooling vents.



Do not write on furniture without a padded barrier to protect the surface.



Do not place furniture outside, for indoor use only.