




Lally Prism Wall Mirror


# LALLY

---



## ASSEMBLY INSTRUCTIONS

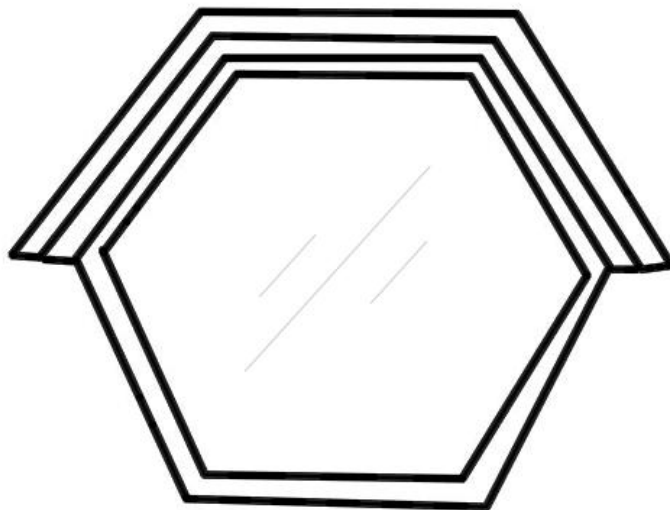

# PARTS LIST

	PICTURE	DESCRIPTION	QTY
A		Mirror	1

# HARDWARE

	PICTURE	DESCRIPTION	QTY
B		Screw	2
C		Anchor	2

## BEFORE BEGINNING ASSEMBLY:



*Read instructions cover to cover*



*Have two adults on hand for assembly*



*Do NOT assemble on flooring or carpet. Assemble on a clean non-marring surface (ex: packing foam)*




*Save all packaging until assembly is completed*

*Need a part? Call TOV at **516-888-3355** or email [service@tovfurniture.com](mailto:service@tovfurniture.com)*

# ASSEMBLY STEPS


STEP 1: Measure out a distance of 550 mm (21.65") or 225mm(8.86") on your wall to mark the two drill points.

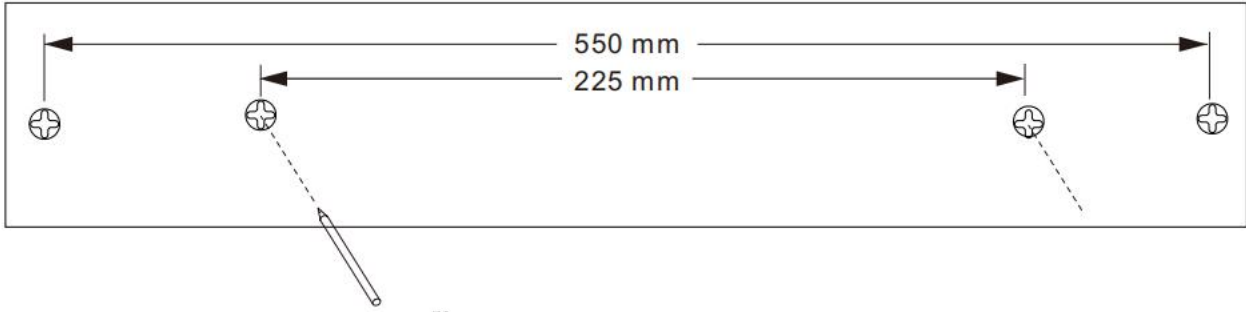

STEP 2: Drill the holes into the wall .



STEP 3: Install the included anchor, hook and screw to the wall . The mirror can now be hung as illustrated .

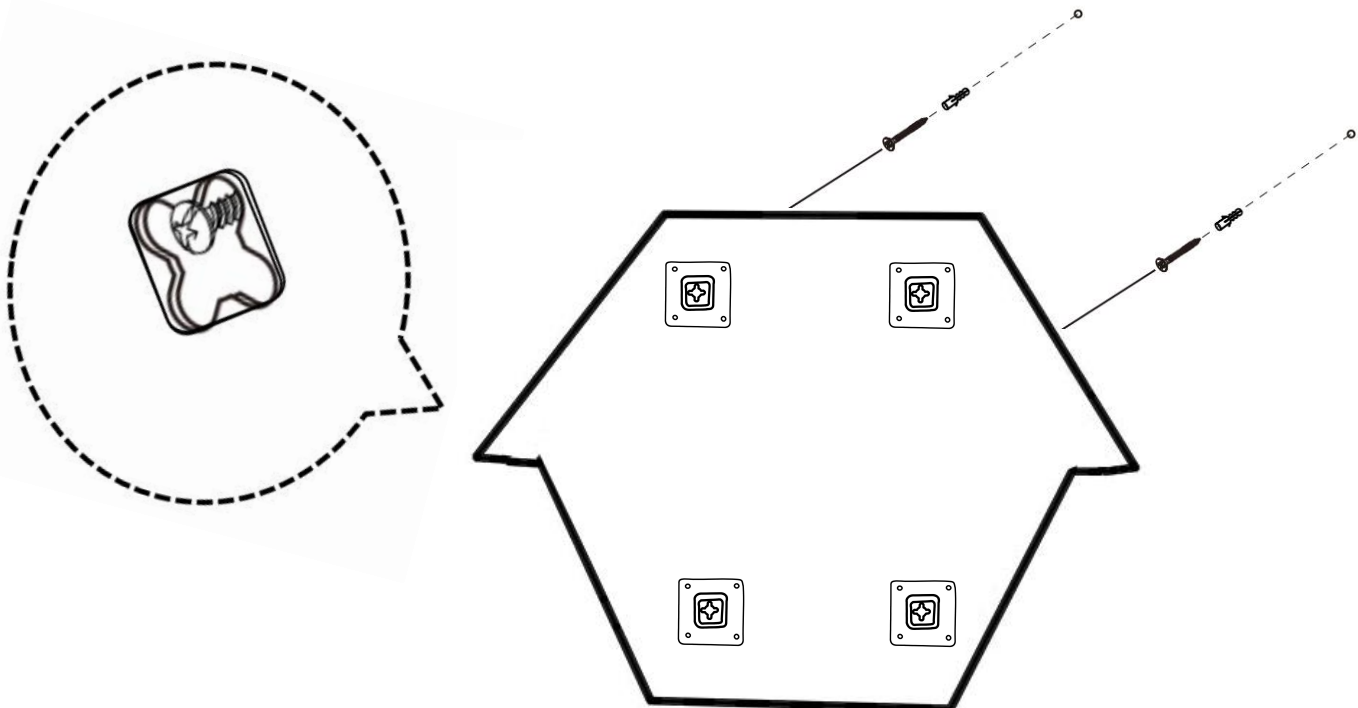

## CARE & MAINTENANCE



**Do not put hot items directly on furniture surface.**



**Do not clean furniture with harsh cleansers or polish.**



**Dust and wipe up spills using a clean, non-colored, lint-free cloth.**



**Stains may be removed with mild soap solution and a damp cloth.**



**Do not place furniture under direct sunlight.**



**Do not place furniture near heating or cooling vents.**



**Do not write on furniture without a padded barrier to protect the surface.**



**Do not place furniture outside, for indoor use only.**