CARE AND MAINTENANCE

- 1. Do not use acids or alkaline cleaning agents.
- 2. Sharp objects will damage and scratch the surface.
- 3. Wipe the surface with a soft, damp cloth.
- 4. Please make sure that you have all parts indicated before You begin assembly of this item.
- 5. This item should be assembled on a soft surface to prevent Scratching the finish during assembly.
- 6. This item may require periodic tightening.

TOV

PALANI WOODEN BEAD CHANDELIER ASSEMBLY INSTRUCTIONS



Need a part? Call TOV at 516-888-3355 or email service@tovfurniture.com

Part List and Hardware List

PART	DESCRIPTION	PICTURE	QUANTITY
A	CANOPY		1x
В	MOUNTING PLATE		1x
С	SIDE SCREW		2x
D	SCREW	• • • • • • • • • • • • • • • • • • •	2x
E	CONNECTOR		3x
F	METAL CORD GRIP		2x
G	LIGHT FIXTURE		1x


Preparation

Before beginning assembly of product, make sure all parts are present.

Compare parts with the package contents list and hardware contents list.

If any parts are missing or damaged, do not attempt to assemble the product.

Estimated assembly time:10 minutes

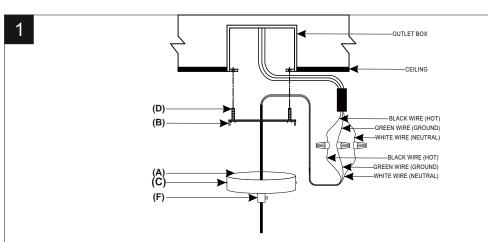

- (1) SECURE THE MOUNTING PLATE (B) WITH SCREWS (D) IN THE OUTLET BOX.
- (2) AFTER SECURING THE MOUNTING PLATE. CONNECT THE THREE WIRES COMING OUT FROM THE CEILING TO THE CONNECTOR(E).
- (3) TIGHTEN THE CANOPY (A) WITH SIDE SCREWS (C) TO THE MOUNTING PLATE (B) AND TIGHTEN THE SCREW ON THE METAL CORD GRIP (F).
- (4) SECURE THE LIGHT BULB / 1 x E-26 INTO THE HOLDER. (BULB NOT INCLUDED)

