


# Assembly for FMT-DT84MT



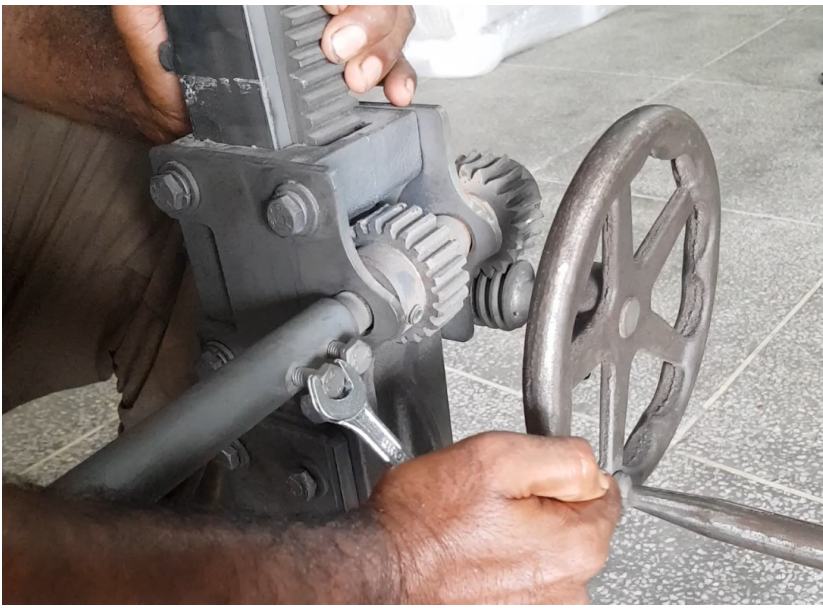

Step 1. Loosen the bolts which holds Bar stretcher to base.



Step 2. Insert the Iron plate making Sure all the holes are aligned.



Step 3. Tighten the 4 bolts(2 on top and 2 on bottom) using spanner.



Step 4. Tighten the 2 stretcher Bolts using spanner.