WI12938

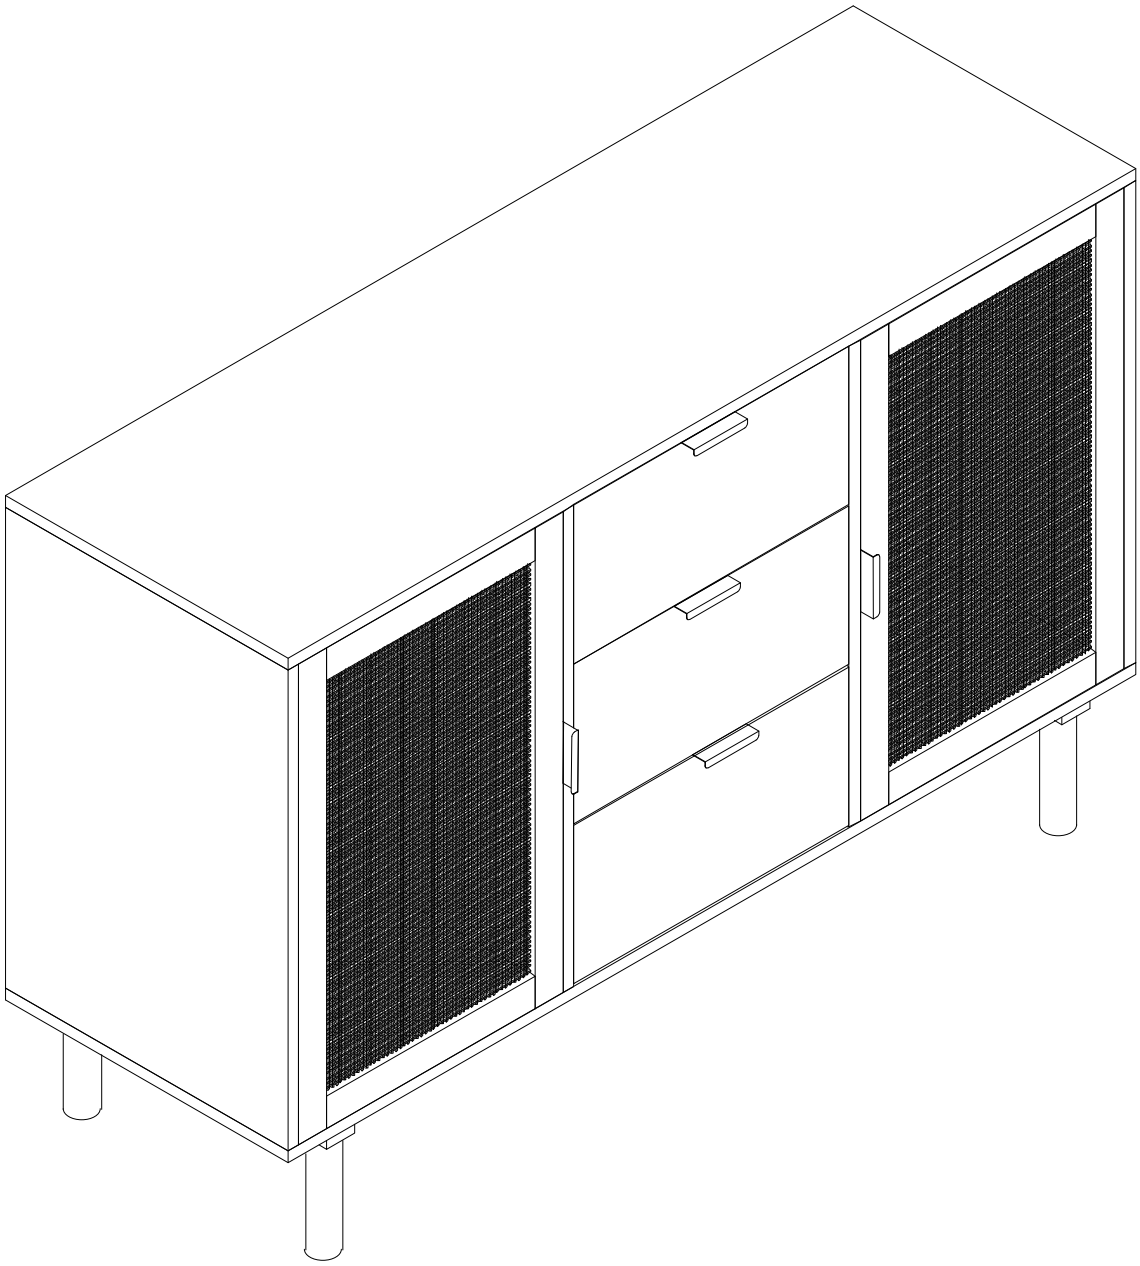

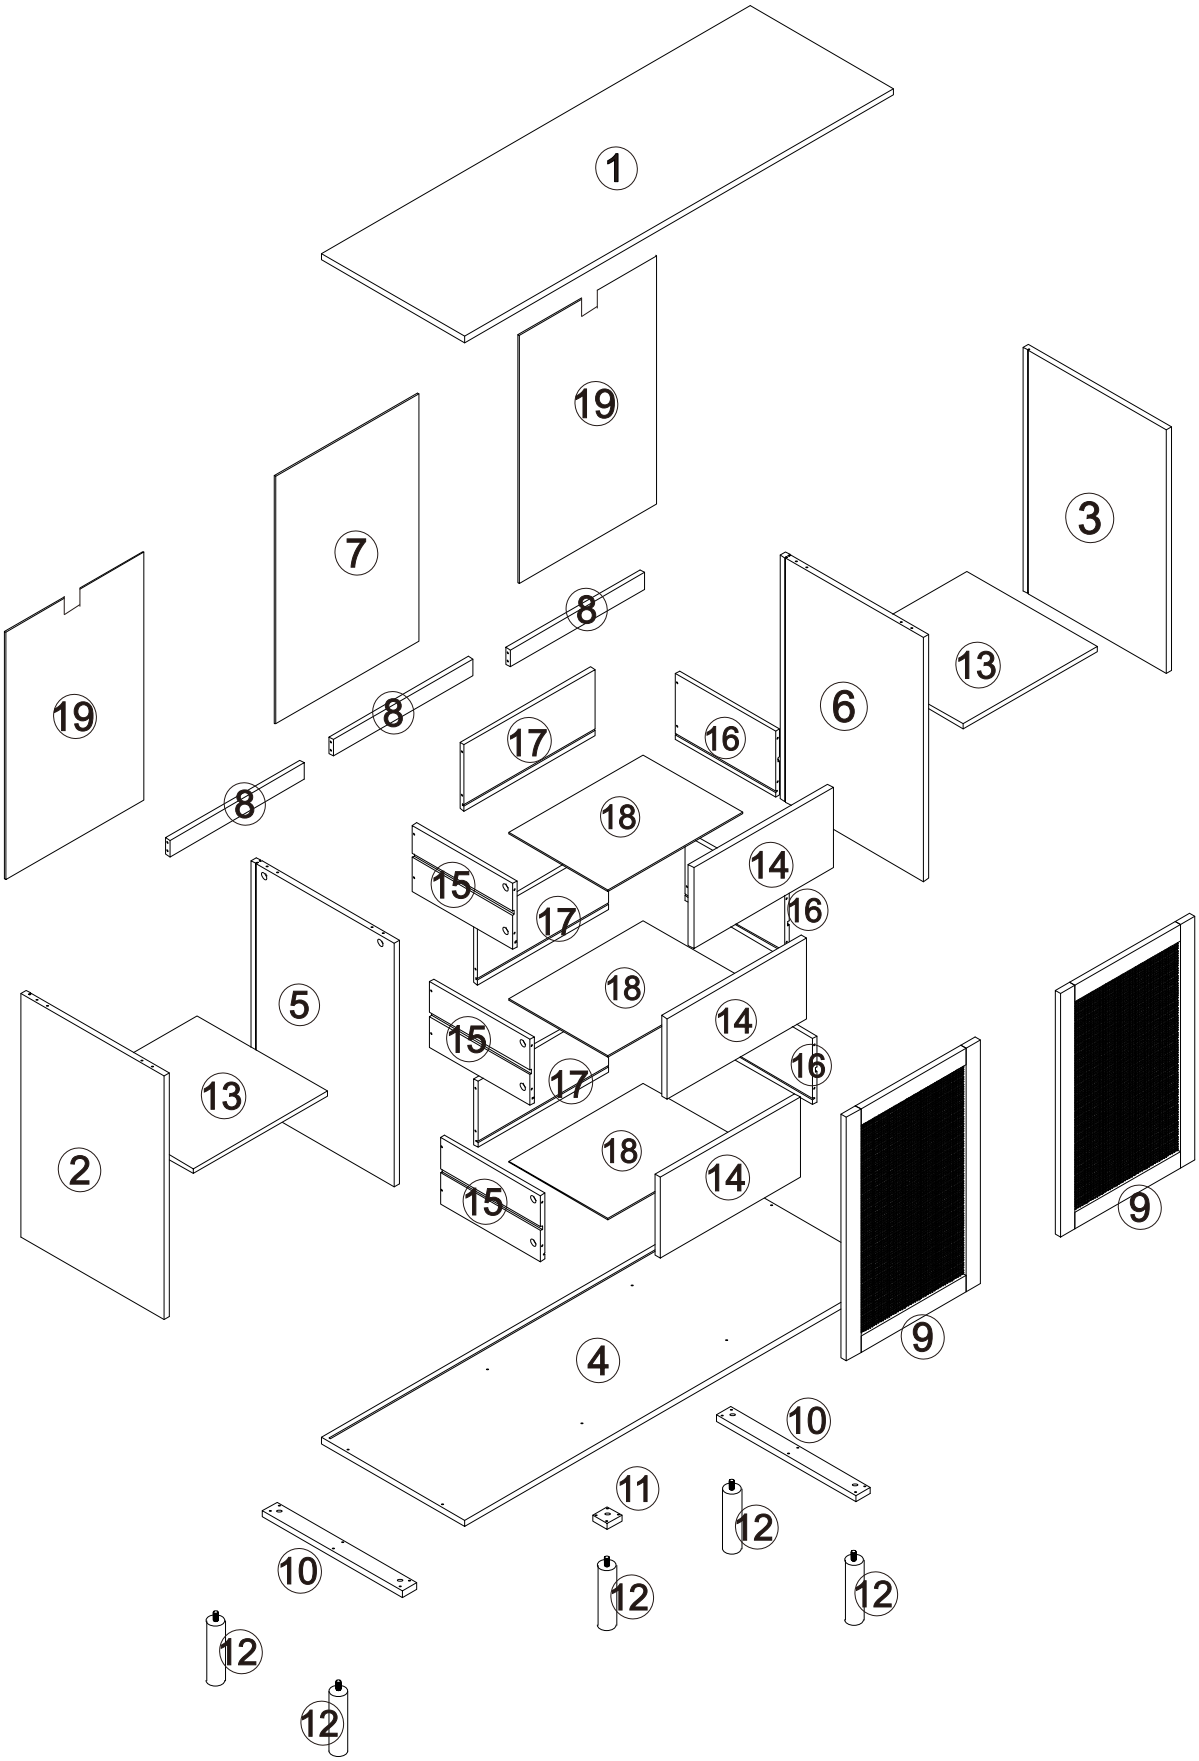
1
19
3
7
8
19
6
13
8
17
16
8
18
14
15
17
16
5
18
14
15
17
16
13
2
18
14
15
9
4
9
10
11
12
10
12
12
12
12

ITEM	PART	QTY
A	Cam Lock 	32PCS
B	Cam Bolt 	32PCS
C	Wooden Dowel 	16PCS
D	Self-tapping Screw 4*35MM 	8PCS
E	Self-tapping Screw 4*25MM 	16PCS
F	Self-tapping Screw 4*14MM	16PCS
G	Drawer Slide 	6PCS
H	Hinge	4PCS
I	Handel 	5PCS
J	Metal Nail 	8PCS
K	Self-tapping Screw 4*30MM 	12PCS
L	Magnetic Door Closure 	2PCS
M	Self-tapping Screw 3*14MM 	4PCS
N	Button Head Bolt 4*10MM	6PCS
O	Self-tapping Screw 3*12MM	22PCS
P	Self-tapping Screw 4*40MM 	2PCS
Q	Plastic Anchor 	2PCS
R	Anti-topple Metal Plate	2PCS
S	Self-tapping Screw 5*12MM	2PCS

① x1

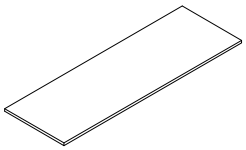

Top Panel

② x1

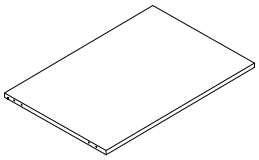

Left Side Panel

③ x1

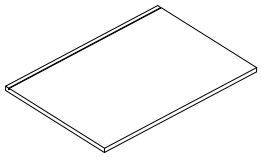

Right Side Panel

④ x1

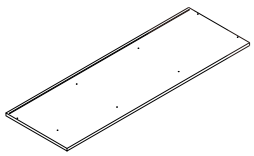

Bottom Panel

⑤ x1

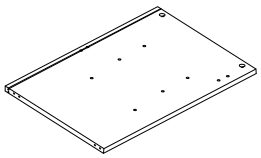

Left Spacer Plate

⑥ x1

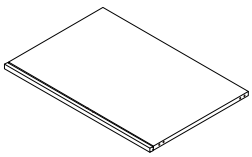

Right Spacer Plate

⑦ x1

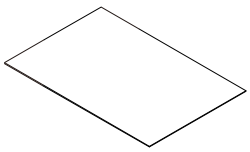

Middle Back Panel

⑧ x3



Back Apron

⑨ x2

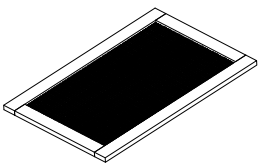

Cabinet Door

⑩ x2



Leg Support Wood Slat

⑪ x1

Leg Support Wood Block

⑫ x5



Leg

⑬ x2

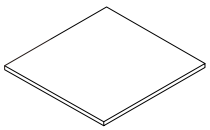

Movable Shelf

⑭ x3

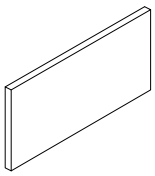

Front Drawer Panel

⑮ x3



Left Drawer Side Panel

⑯ x3



Right Drawer Side Panel

⑰ x3

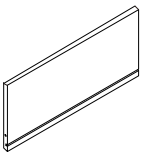

Back Drawer Panel

⑱ x3

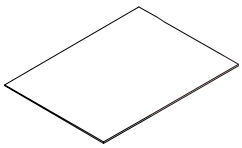

Bottom Drawer Panel

⑲ x2

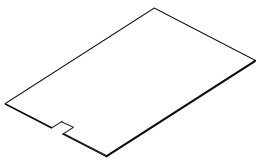

Back Panel (Left and Right)

Carton1:Part ① ④ ⑦ ⑧ ⑨ ⑩ ⑪ ⑬ ⑱ ⑲

Carton2:Part ② ③ ⑤ ⑥ ⑫ ⑭ ⑮ ⑯ ⑰

Step 1

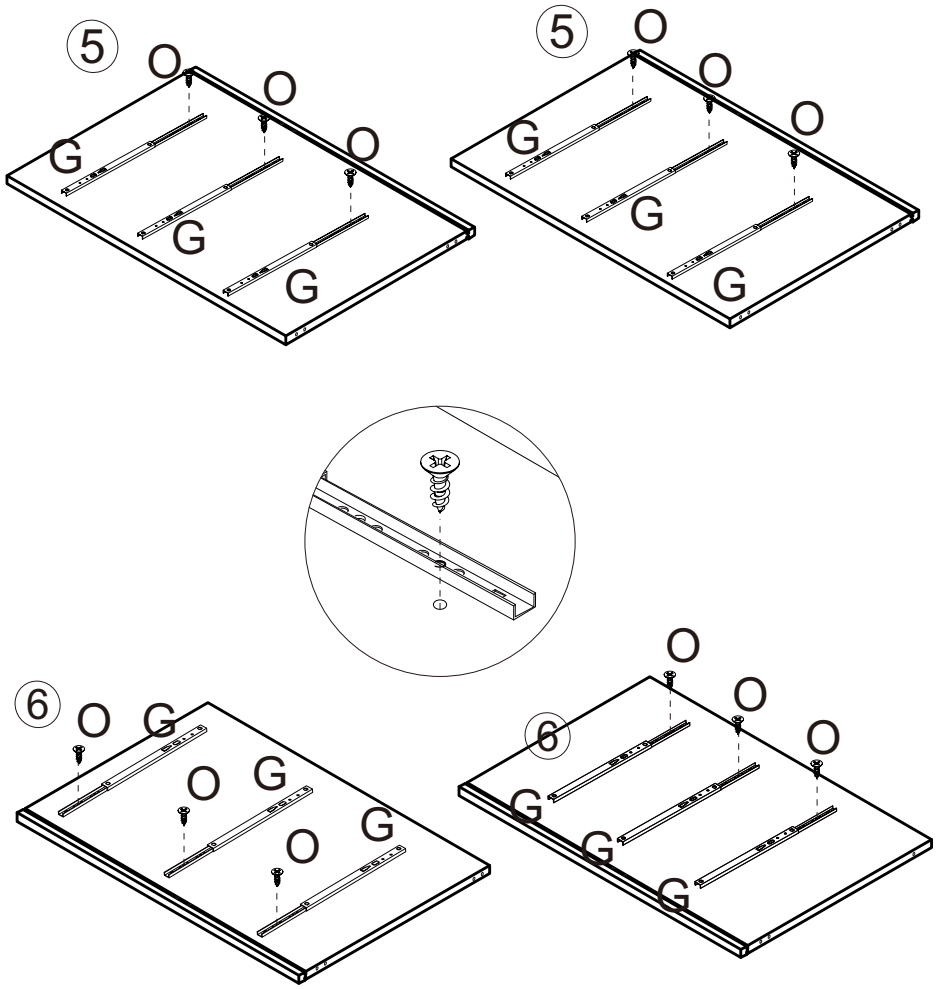

	Ox12
	Gx6

Stretch Hardware G and fix it to Part 5 with O

Step 2

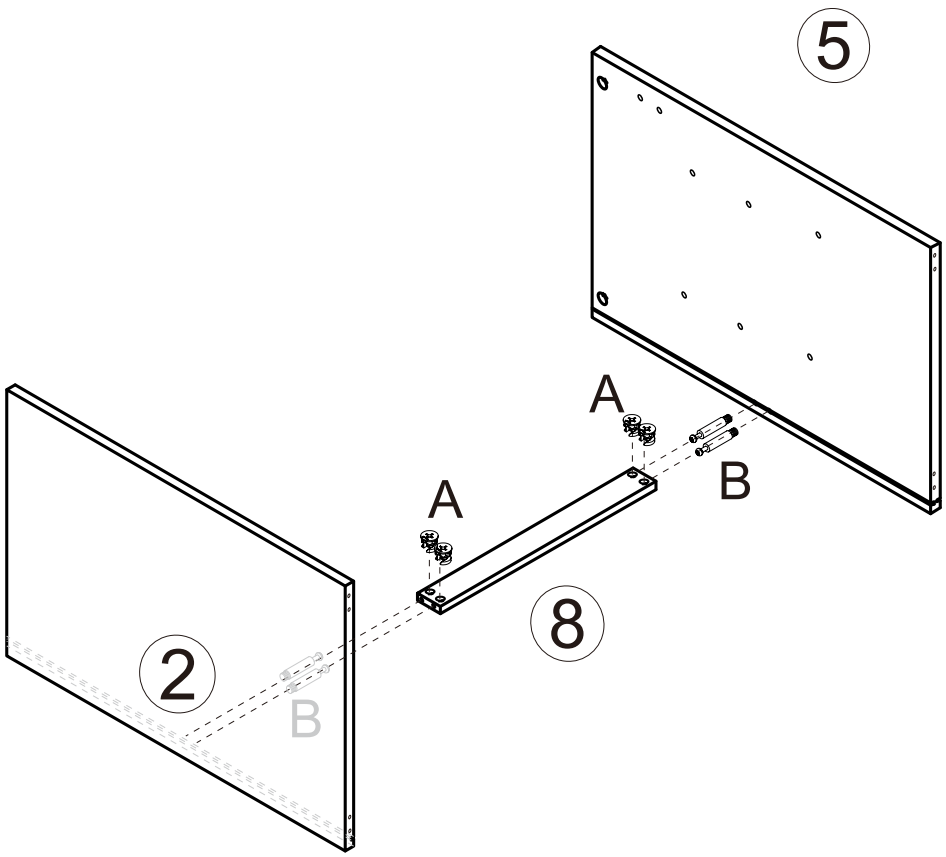

	Ax4
	Bx4

Connect Part 8 to 2&5 with Hardware B&A

Step 3

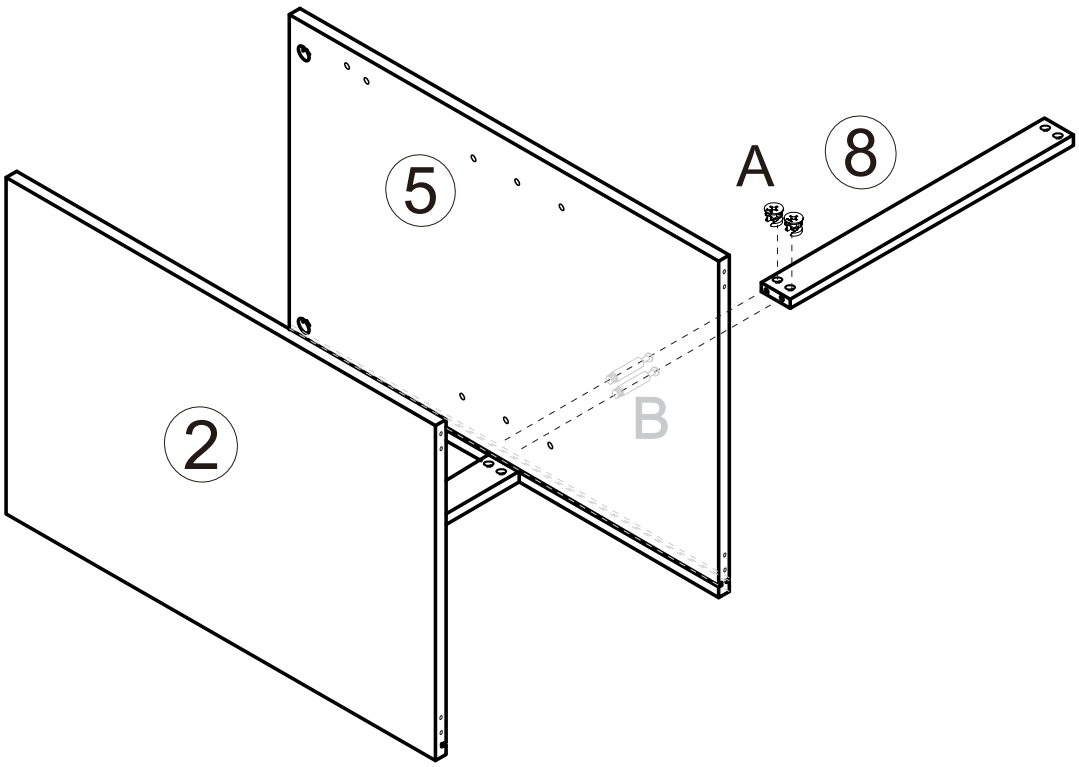

	Ax2
	Bx2

Connect another Part 8 to 5 with Hardware B&A

Step 4

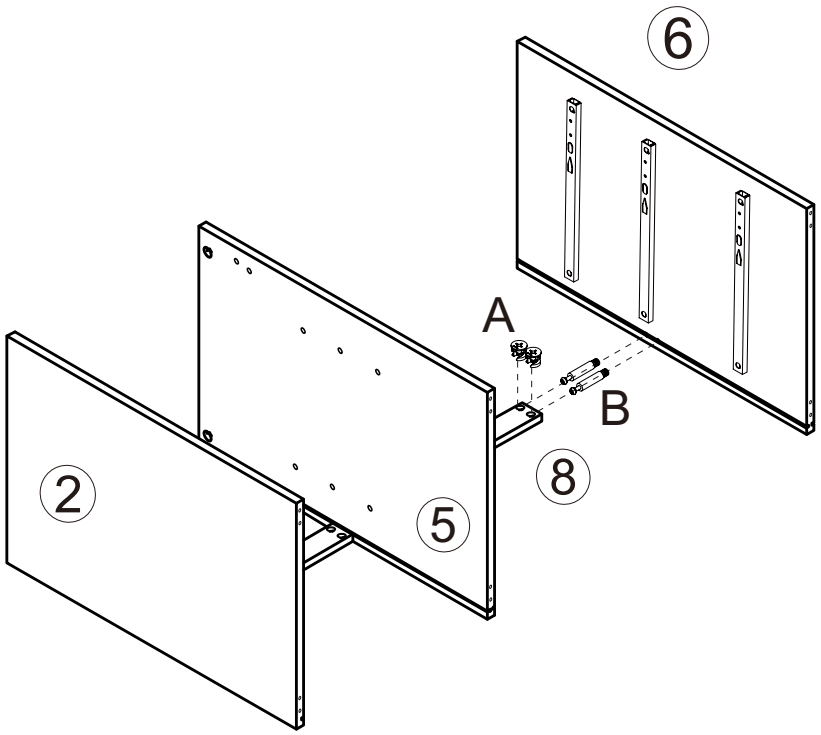

	Ax2
	Bx2

Connect Part 6 to 8 with Hardware B&A

Step 5

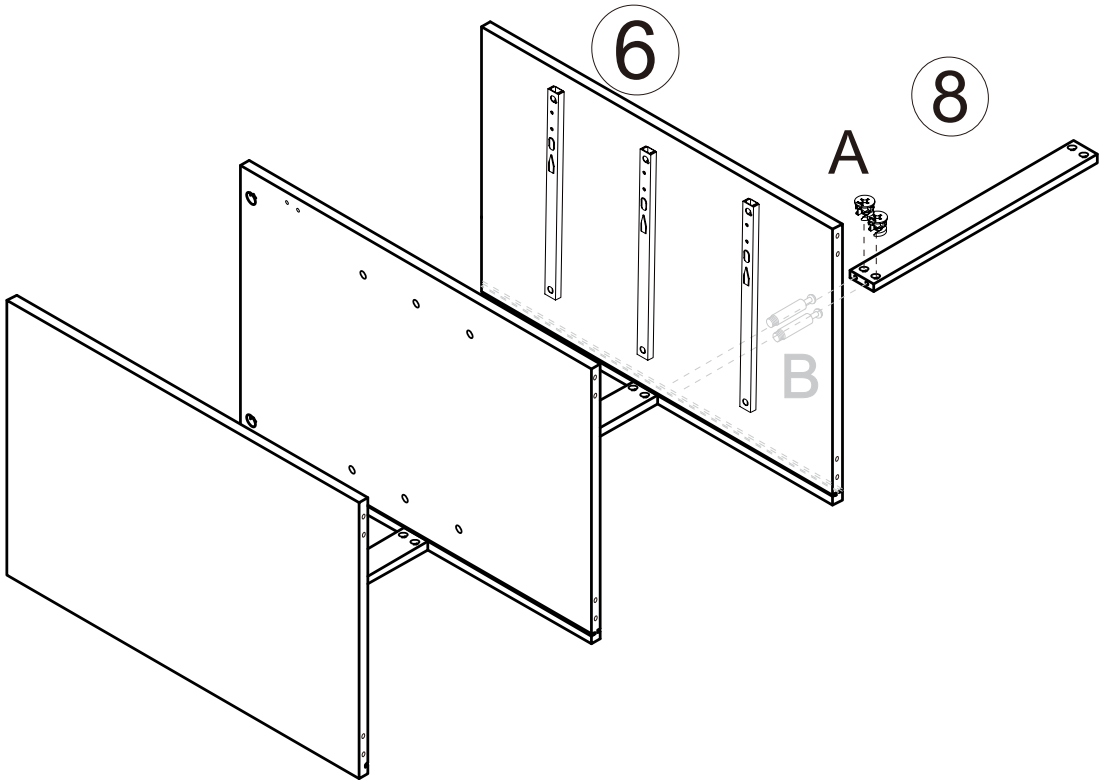

	Ax2
	Bx2

Connect Part 8 to 6 with Hardware B&A

Step 6

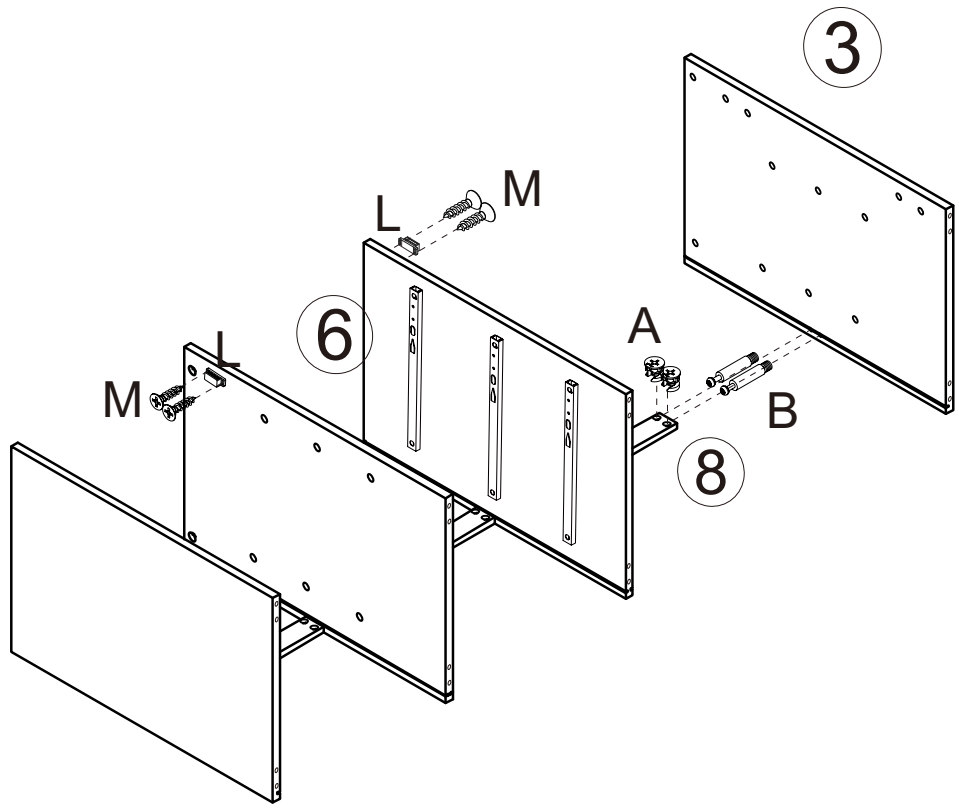

	Ax2		Lx2
	Bx2		Mx4

Fix Hardware L to Panel 6 with M
Connect Part 3 to 8 with Hardware B&A

Step 7

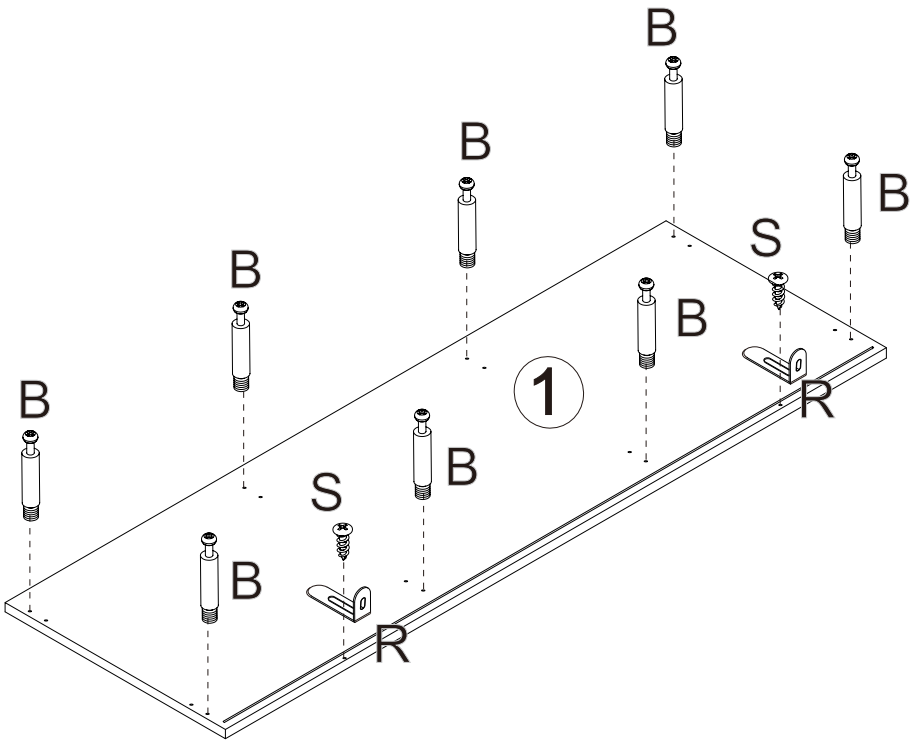

	Bx8
	Rx2
	Sx2

Fix Hardware B to Part 1
Fix Hardware R to Part 1 with S

Step 8

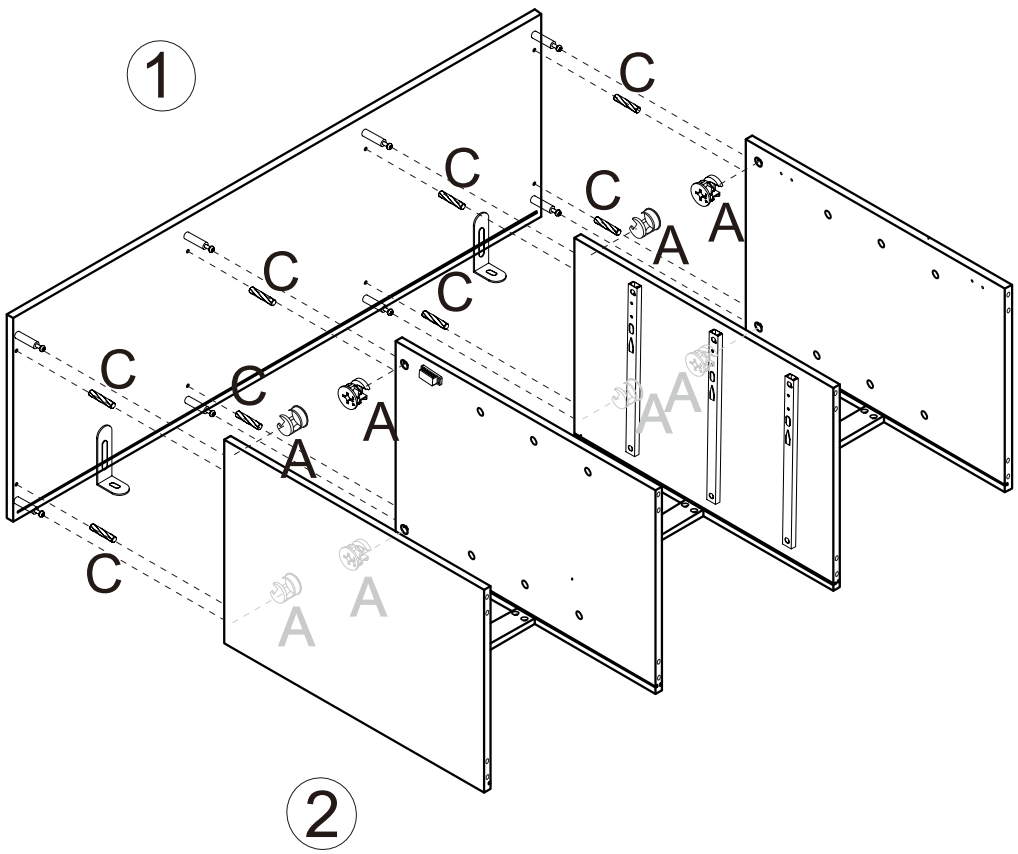

	Ax8
	Cx8

Lock Part 1 to 2&5&3&6 with Hardware C&A
(Insert C into 2&5&3&6 first)

Step 9

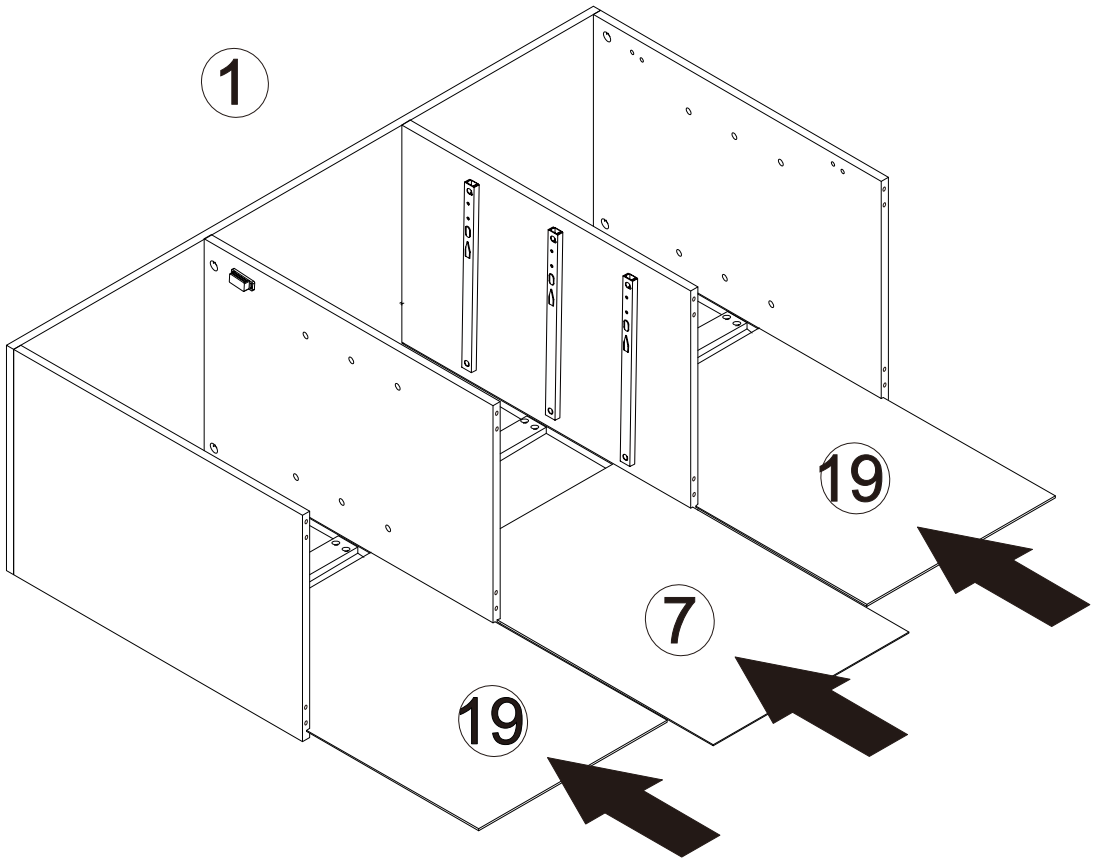

Insert Part 19&7 along the slots of 2&5&3&6 (As shown in the picture)

Step 10

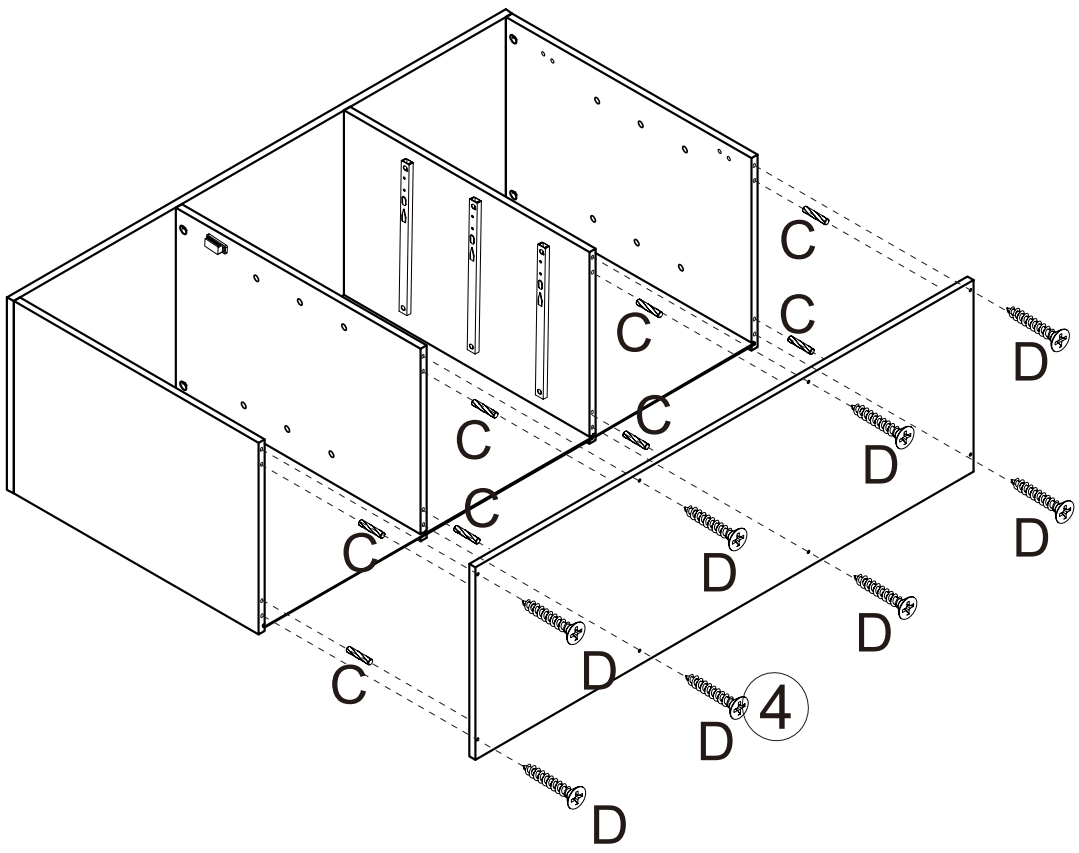

	Cx8
	Dx8

Lock Part 4 to 2&5&3&6 with Hardware C&D
(Insert C into 2&5&3&6 first)

Step 11

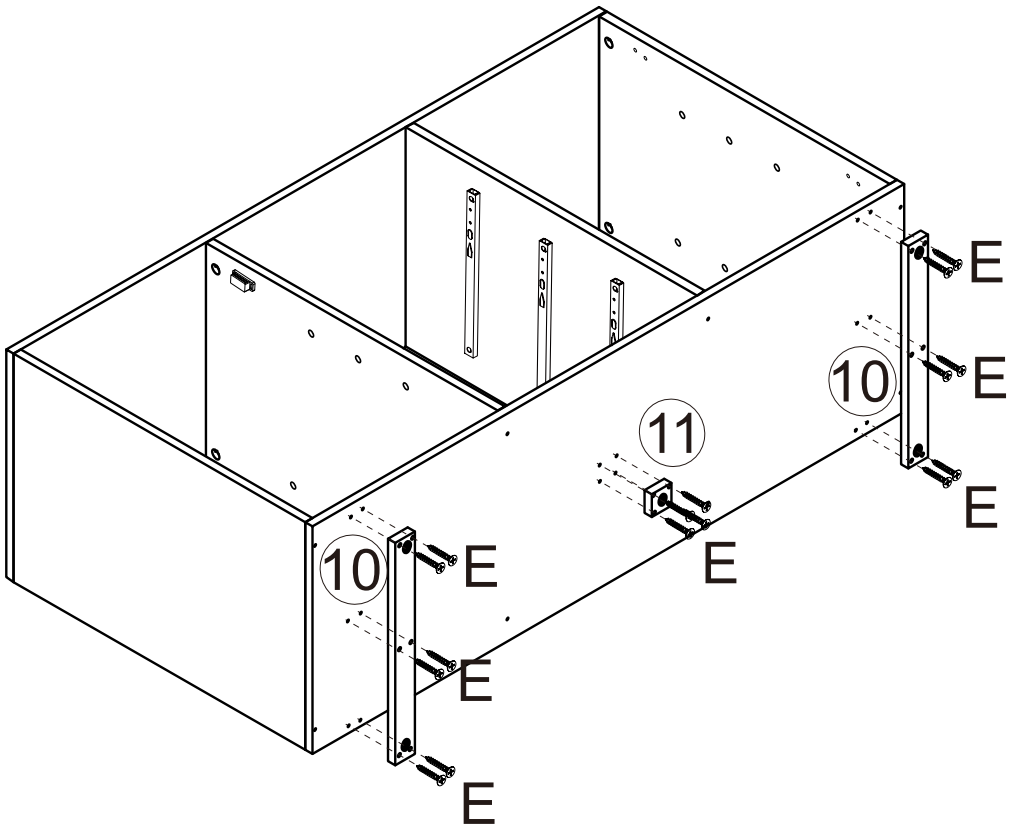

Ex16

Connect Part 10&11 to 4 with Hardware E

Step 12

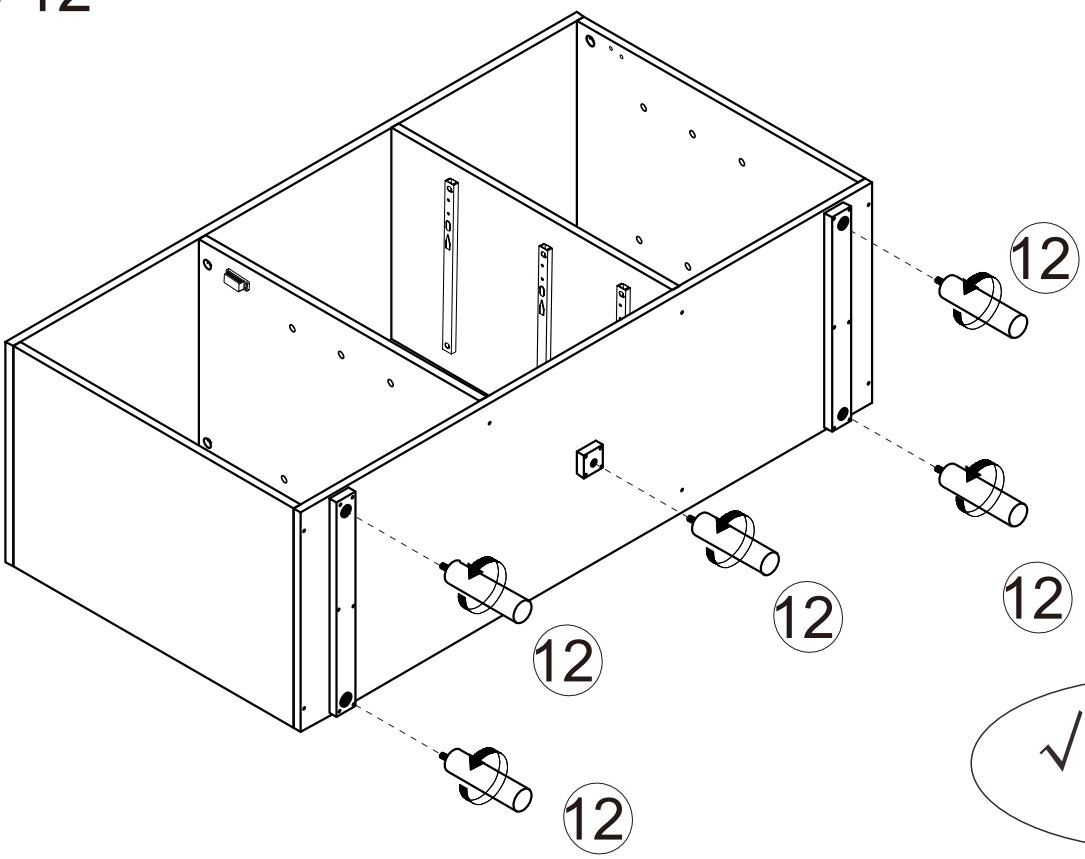

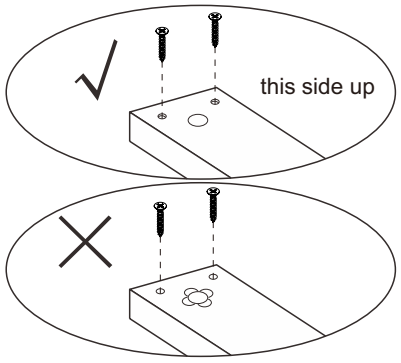

Install Part 12 (leg) on 10&11 (Rotate)

Step 13

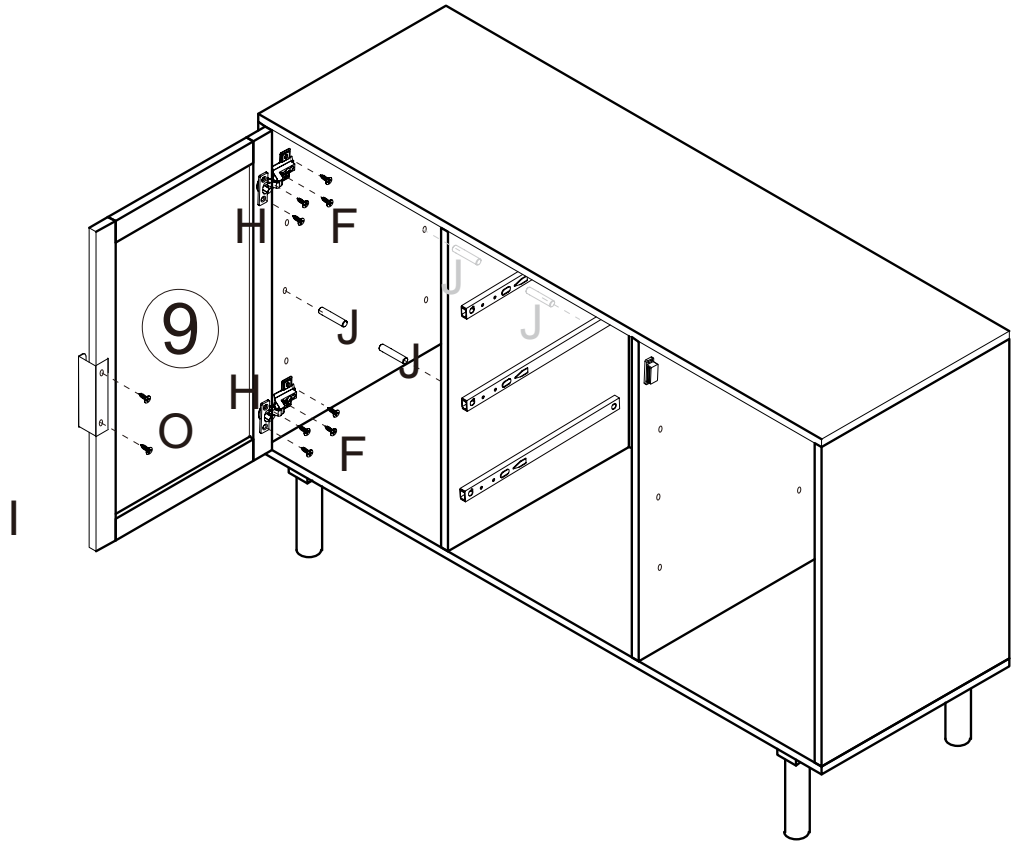

	Fx8		
	Hx2		Jx4
	Ix1		Ox2

Install Hardware I on Part 9 with O and connect 9 to 2 (Left Side Panel) with F&H
Insert Hardware J into Part 2&5

Step 14

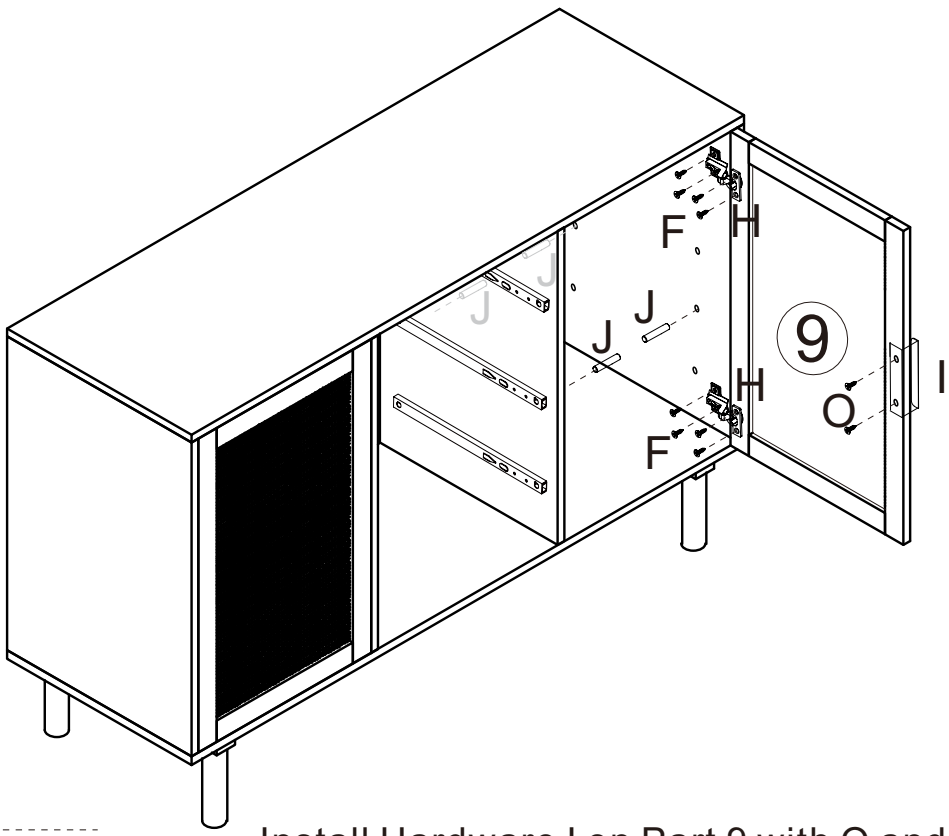

	Fx8		
	Hx2		Jx4
	Ix1		Ox2

Install Hardware I on Part 9 with O and connect 9 to 3 (Right Side Panel) with F&H
Insert Hardware J into Part 6&3

Step 15

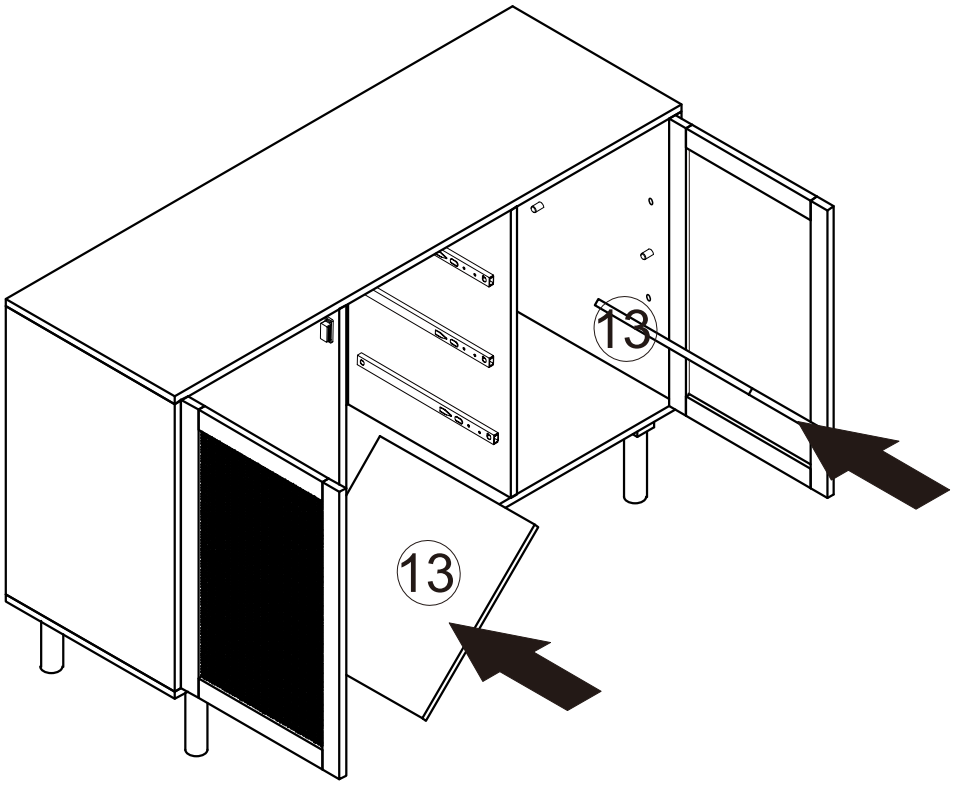

Place Part 13 on J (Metal Nail)

Step 16x3

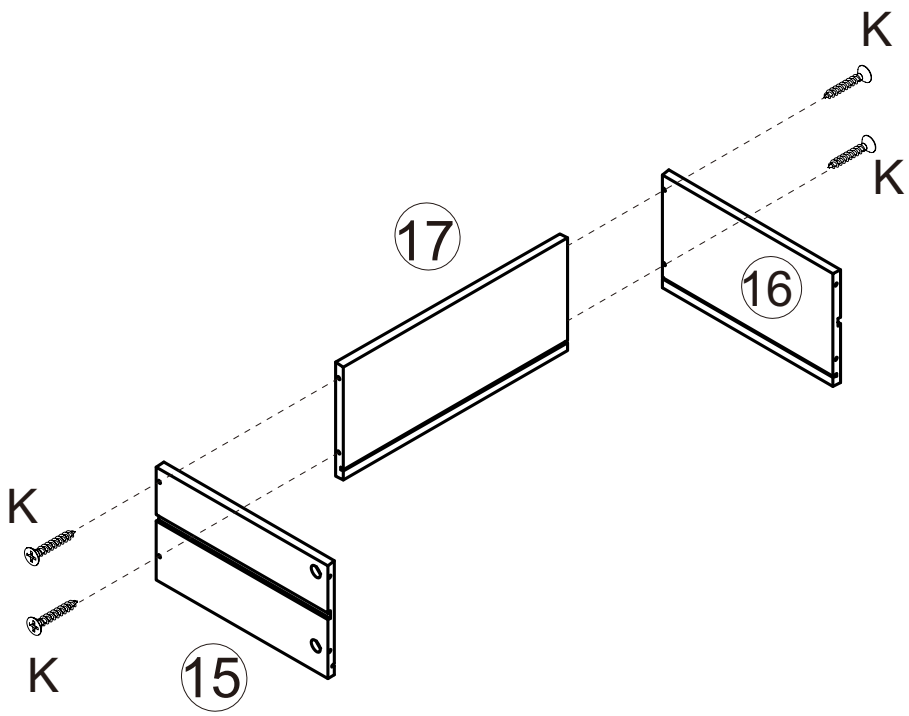

Connect Part 17 to 15&16 with Hardware K
Repeat this step three times

Kx12

Step 17x3

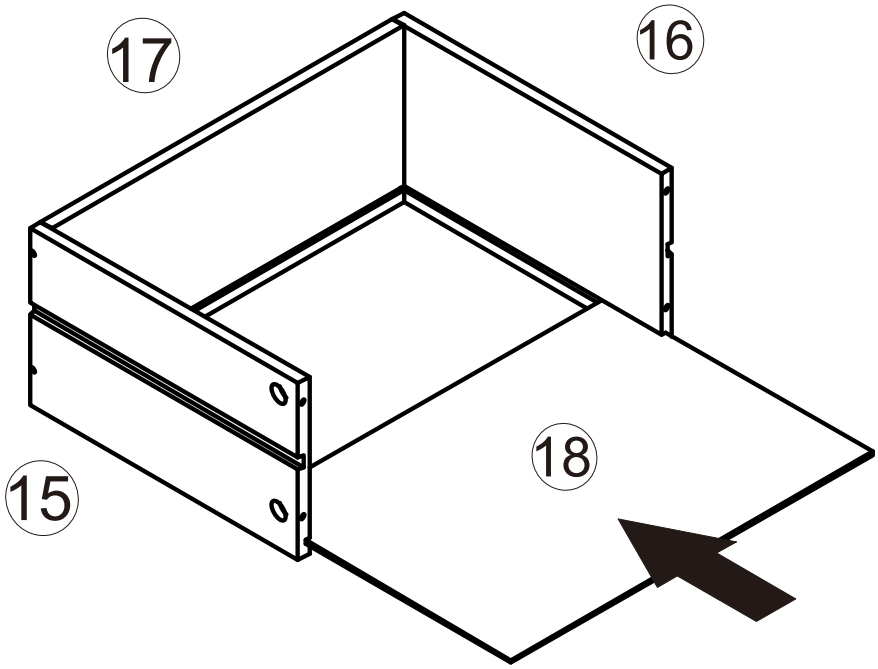

Insert Part 18 along the slots of 15&16
Repeat this step three times

Step 18x3

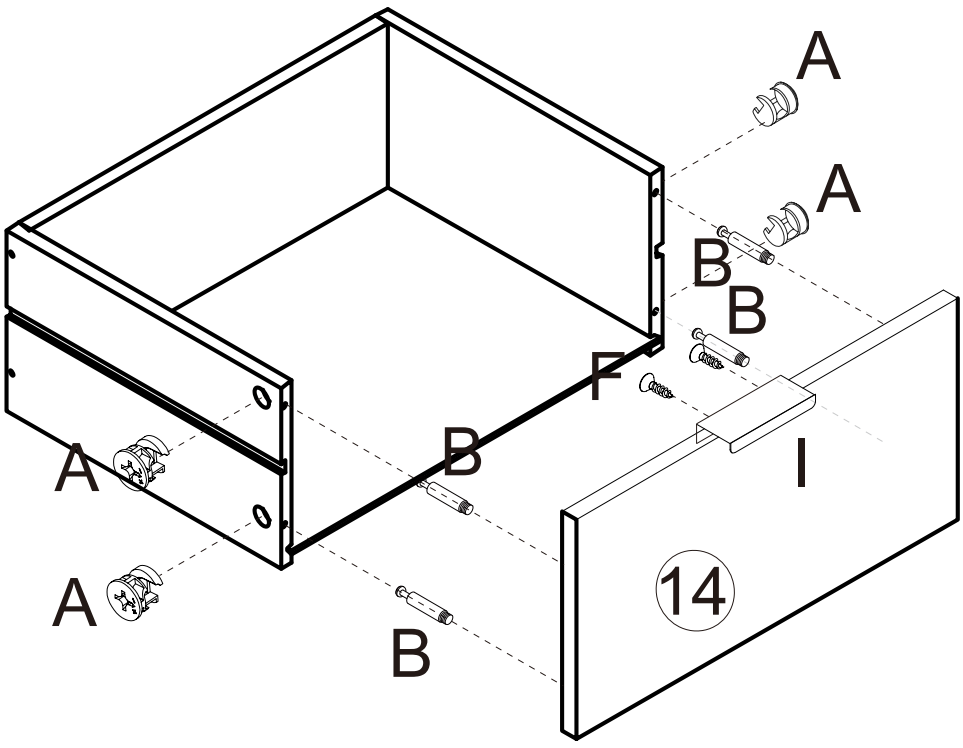

	Ax12		Ox6
	Bx12		Ix3

Fix Hardware I to Part 14 with F
Lock Part 14 to 15&16 with Hardware B&A

Step 19

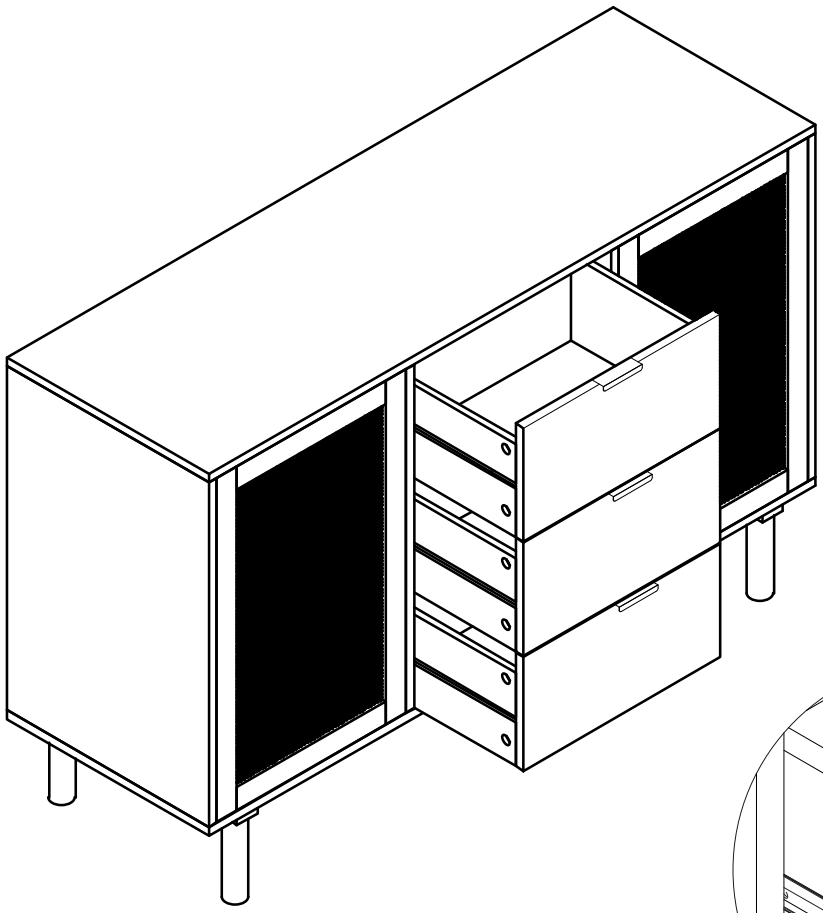

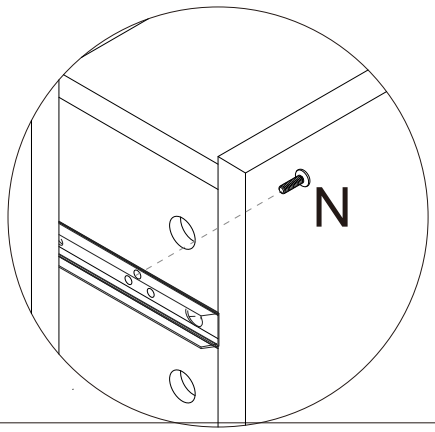

Pull out drawer slides and connect drawers to them with Hardware N

	Nx6

Step 20

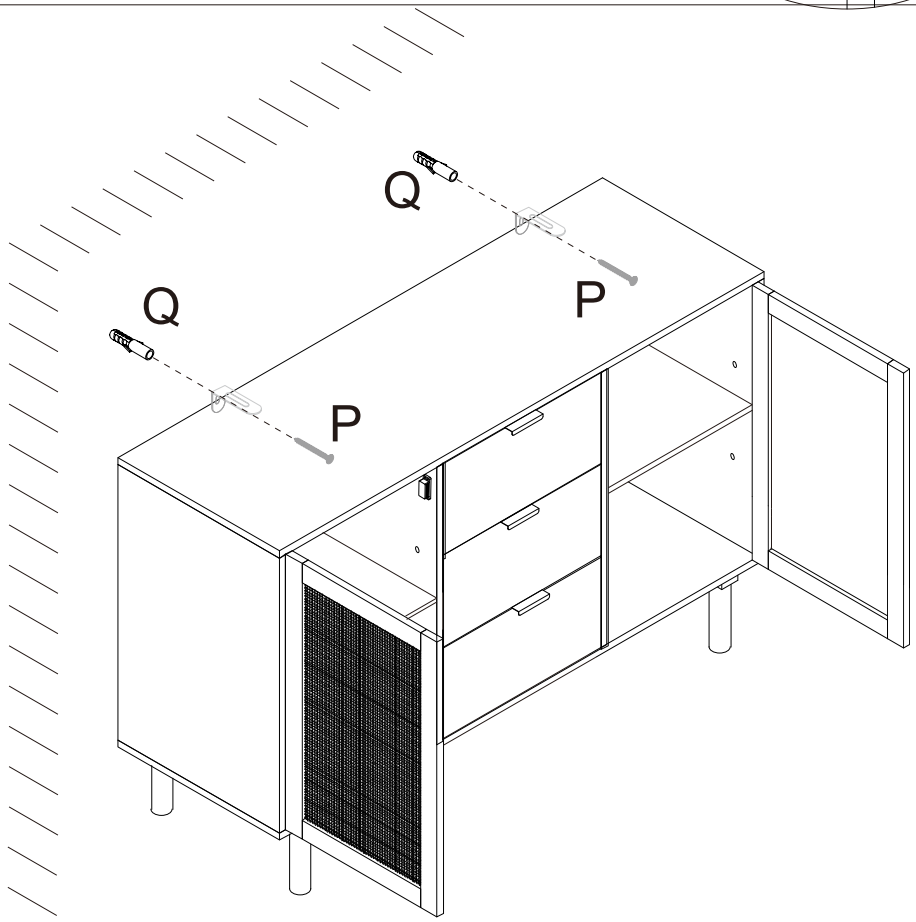

	Px2
	Qx2

Lock the cabinet to the wall with Hardware Q&P