


Furniture of America®


Assembly Instructions

CM3606SC-2PK

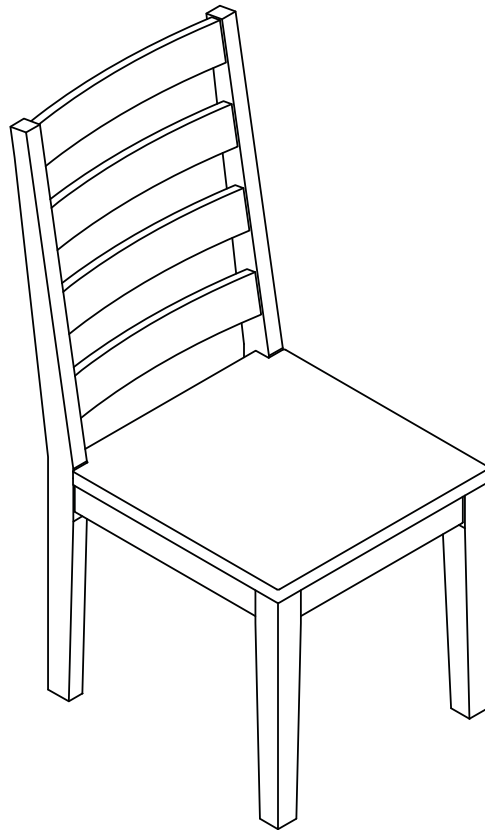


ASSEMBLY RATING

The Assembly Rating is a 5-point system that shows the degree of effort needed in assembling a specific product (with 1 being easy and 5 being difficult). For some products, two persons are recommended.


EASY  DIFFICULT

Tools Required For Assembly:

Allen Wrench



(Included)




Furniture of America®

ASSEMBLY & CARE ADVICE

FOR YOUR FURNITURE TO LAST, CORRECT ASSEMBLY AND PROPER MAINTENANCE ARE NECESSARY. PLEASE FOLLOW THE INFORMATION PROVIDED BELOW TO FULLY ENJOY YOUR FURNITURE.


BASIC ASSEMBLY TECHNIQUES

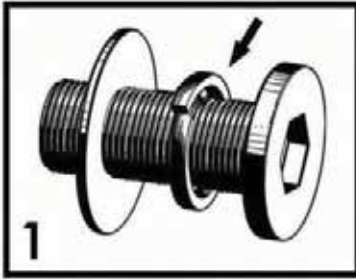


When lock or spring washer is used in an assembly, please make sure the lock or spring washer is placed between the larger flat washer and the head of the screw or bolt.




Position each part correctly and insert screws or bolts into their respective holes by hand tighten or using the proper hand tool. Only tighten when step is completed or when instructed to do so.

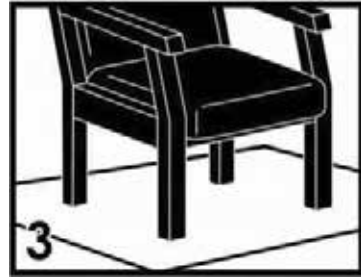


Use cardboard or carpet area when assembling furniture to prevent scratches. Make sure the furniture rests on a flat and level surface with each leg evenly touching the floor.

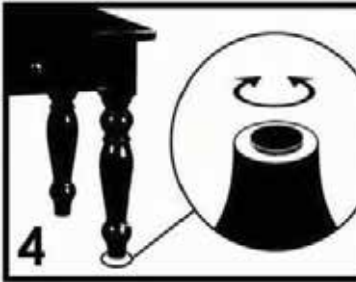

Some furniture comes with height adjustment knobs underneath each leg. To lower or to raise each leg, you need to turn clockwise or counterclockwise, respectively.

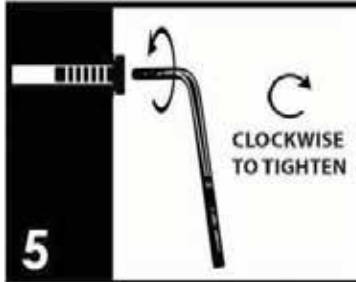

Make sure all parts are properly aligned, then use the appropriate hand tool to completely tighten the bolts or screws. Do not use power tools and do not overtighten.

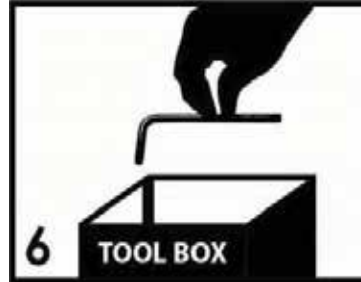

Save the instructions and store the Allen wrench or any supplied tool for later maintenance. After two weeks, check and tighten any loose hardware and repeat again every six months thereafter.

IT IS THE USER'S RESPONSIBILITY TO MAINTAIN THE FURNITURE. THE HARDWARE MAY LOOSEN OVER TIME AND MAY CAUSE THE FURNITURE TO BE WOBBLY AND UNABLE TO SUPPORT ITS INTENDED WEIGHT CAPACITY. THIS MAY LEAD TO COLLAPSE AND MAY CAUSE SERIOUS INJURY.



FAILURE TO FOLLOW THE GUIDELINES ABOVE MAY RESULT IN INJURY AND/OR PROPERTY DAMAGE.




Before you begin, please read Page 2 of "Assembly and Care Advice".

And remember, do not tighten until each step is completed or instructed.


Parts List




#1 x 1 pc x 2
Backrest w/Legs

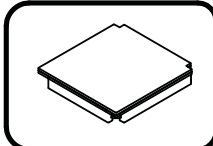

#2 x 1 pc x 2
Seat Panel

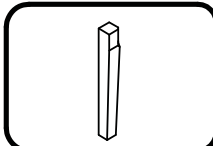


#3 x 2 pcs x 2
Front Leg

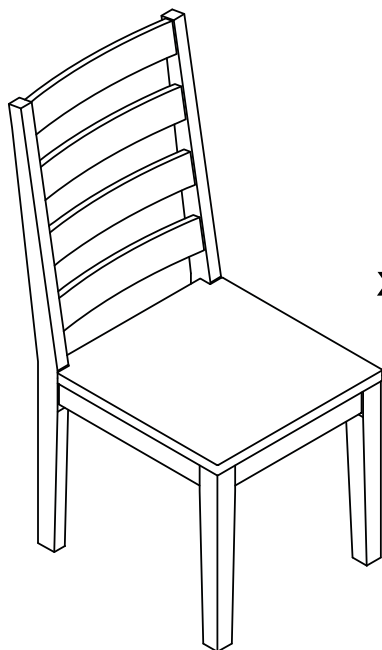


x 2


Hardware List

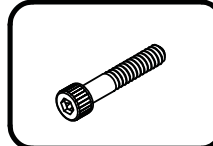


#A x 2 pcs x 2
Machine Bolt 5/16" x 2"

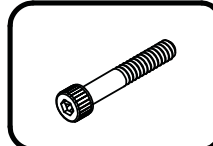


#B x 4 pcs x 2
Machine Bolt 5/16" x 2-1/8"

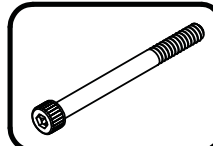


#C x 4 pcs x 2
Machine Bolt 5/16" x 3-1/8"

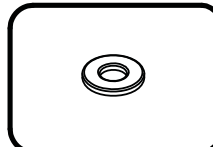

#D x 10 pcs x 2
Flat Washer

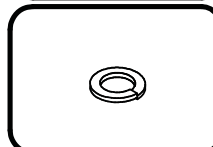

#E x 10 pcs x 2
Lock Washer

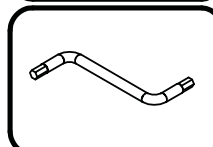

#F x 1 pc x 2
Allen Wrench





#1

#A x 2 pcs
#D x 2 pcs
#E x 2 pcs

1. Place the backrest w/legs (#1) onto a protected surface.

2. Align the holes along the back of the seat panel (#2) to the holes along the backrest with legs (#1).

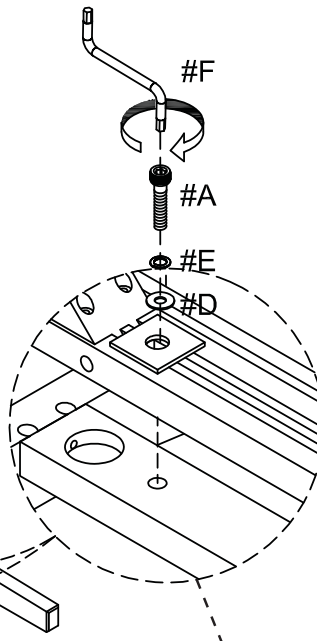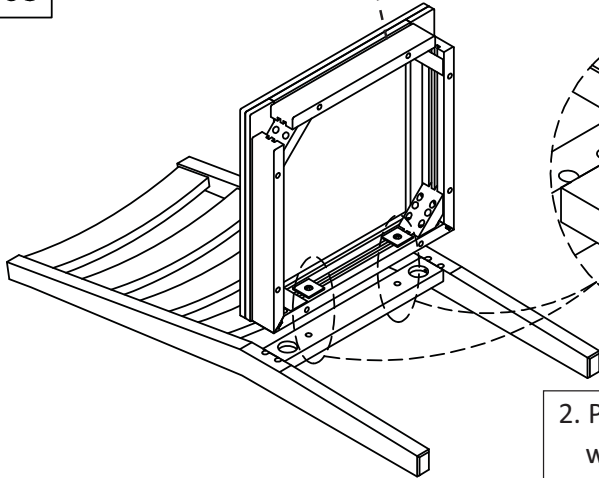

2. Prepare 2 bolt assemblies by first inserting a lock washer (#E) onto the bolt (#A) then a flat washer (#D) onto that same bolt (#A). Then insert the bolt assemblies into the holes along the seat panel (#2) and secure using the Allen wrench (#F).






#2

#C x 4 pcs
#D x 4 pcs
#E x 4 pcs

1. Prepare 4 bolt assemblies by first inserting a lock washer (#E) onto the bolt (#C) then a flat washer (#D) onto that same bolt (#C).

2. Insert 2 bolts into each back corner of the seat panel (#2). Secure using the Allen wrench (#F).

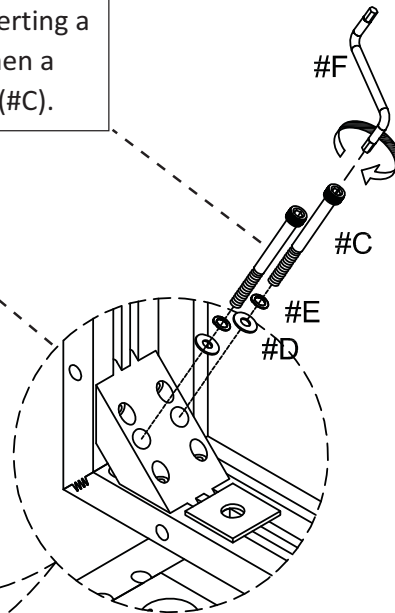
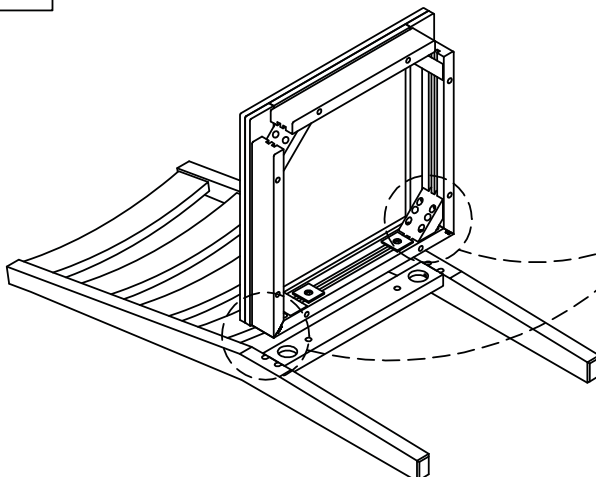


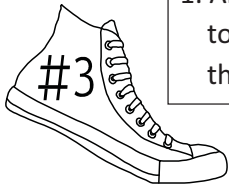


1. Align the front legs (#3) to the front corners of the seat panel (#2).

2. Prepare 4 bolt assemblies by first inserting a lock washer (#E) onto the bolt (#B) then a flat washer (#D) onto that same bolt (#B).

#B x 4 pcs
#D x 4 pcs
#E x 4 pcs

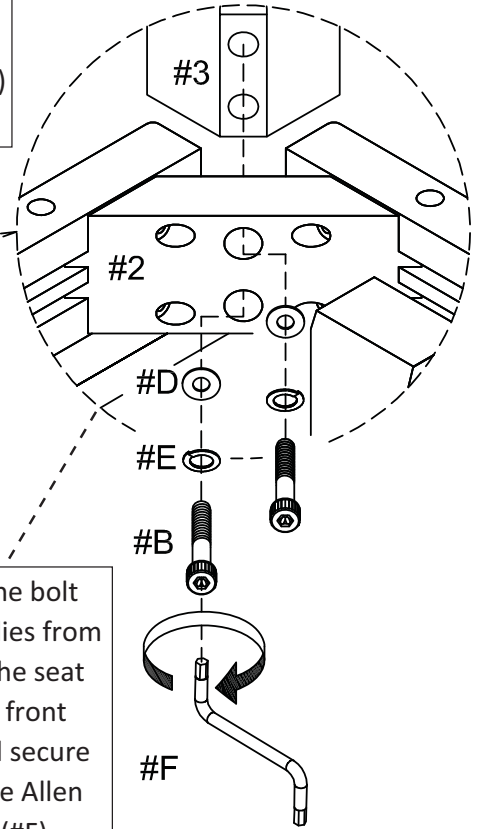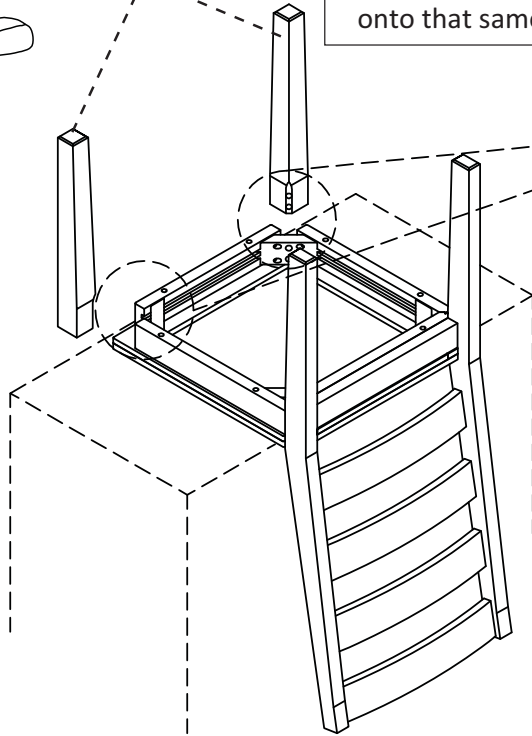

3. Insert the bolt assemblies from within the seat into the front legs and secure using the Allen wrench (#F).

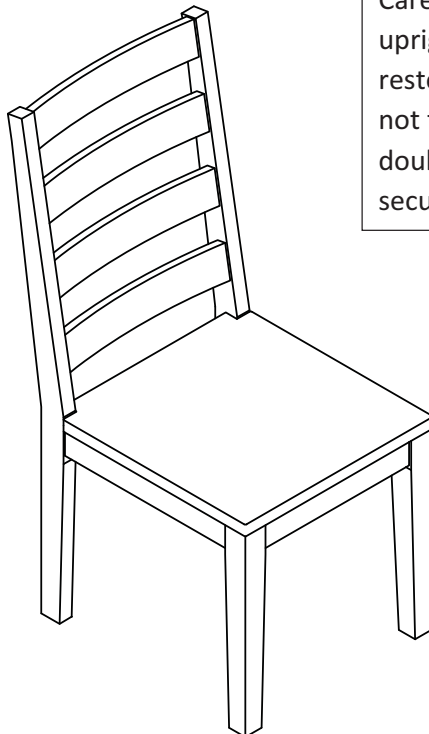

Carefully turn the completed chair upright. Make sure the chair is rested on a flat surface and does not feel loose or wobbly. If it does, double check that the bolts are secured and properly tightened.

ASSEMBLY IS COMPLETED